

CODING

-231319








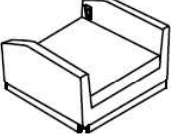


ISO 9001:2015
Reg. No. 000435-1-MEX-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
Ⓐ		JCBC SCREW M6 x 50MM	4
Ⓑ		SPRING WASHER 1/4"	4
Ⓒ		FLAT WASHER 1/4"	4
Ⓓ		ALLEN KEY M4 BALL SHAPE(LONG)	1

ITEM	PHOTO	PARTS NAME	QTY
①		BACK REST	1
②		ARM REST	1
③		FRONT LEG	2
④		BACK LEG (L & R)	2

CODING

-231319




ISO 9001:2015
Reg. No. 000435-1-MEX-1-QM5


nesthouz.com

1

Remark :
Hole marking always
on right hand side.

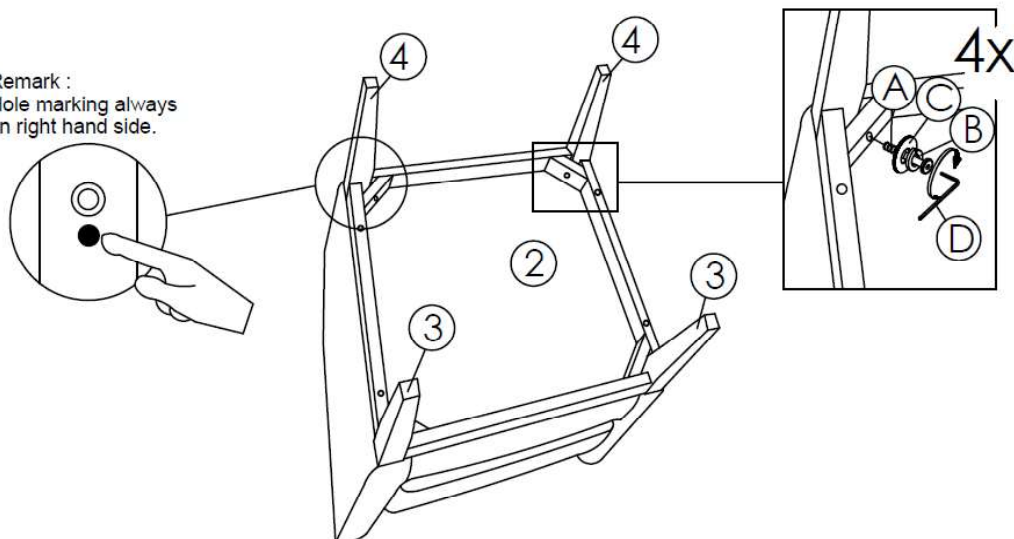

2

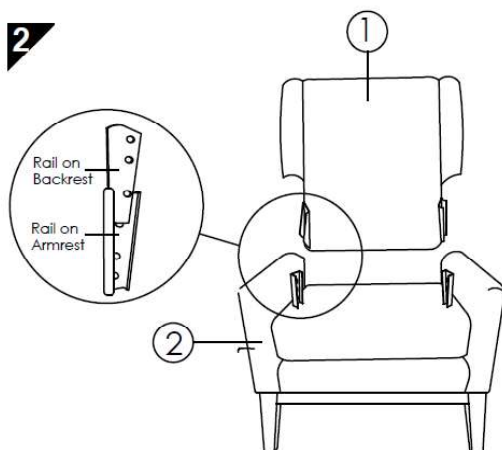

NOTE

- * Ensure the Rail on Backrest locks into the Rail on Armrest.
- * Assistance from your adult partner is needed during this process.

3

