

CODING

-231325

ISO 9001:2015  
Reg. No. 000435-1-MY-1-QM8

nestnordic.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the part before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

## CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC SCREW M6 X 110MM (RB)	2 (+ 1 extra)
(B)		JCBC SCREW M6 X 75MM (RB)	4 (+ 1 extra)
(C)		JCBC SCREW M6 X 50MM (RB)	2 (+ 1 extra)
(D)		SCREW PIN 15 x 15MM	2 (+ 1 extra)
(E)		SPRING WASHER 5/16" (RB)	8 (+ 2 extra)
(F)		FLAT WASHER M6 X 13MM (RB)	4 (+ 1 extra)
(G)		PH 5 x 32MM (BLK)	4 (+ 1 extra)
(H)		ALLEN KEY M4 (BALL SHAPE)	1

ITEM	PHOTO	PART NAME	QTY
(1)		CHAIR BACK ASSY	1
(2)		FRONT CHAIR LEG ASSY L/R	2
(3)		FRONT RAIL	1
(4)		STRETCHER	2
(5)		CHAIR SEAT	1


CODING  
-231325




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QB48

nestnordic.com

1

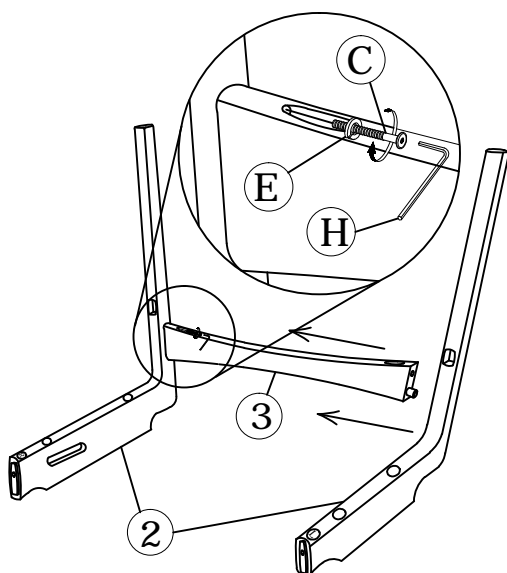

2

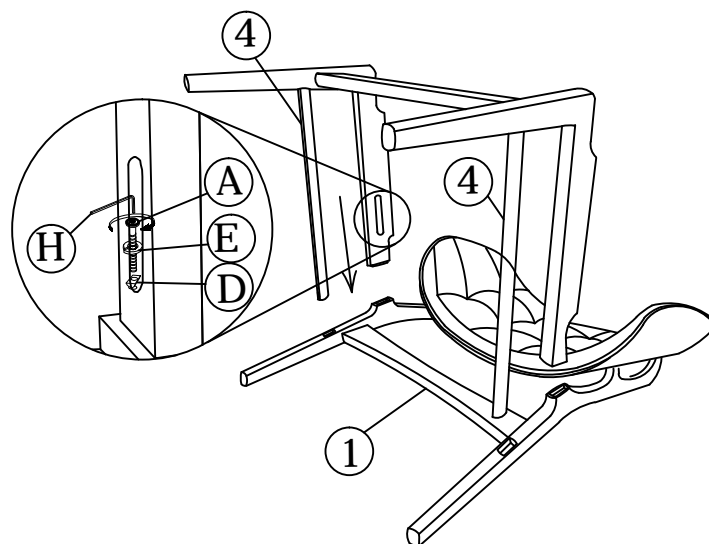

3

