


CODING
- 231328
- 231329

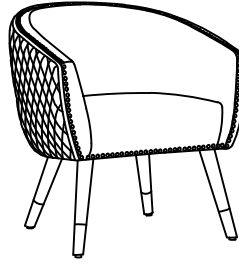

ISO 9001:2015
Reg. No. 000435-1-MY-1-QS

fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.


CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HAREWARE NAME	QTY
1		JCBC SCREW M8 x 55MM	8
2		FLAT WASHER M8	8
3		SPRING WASHER M8	8
4		ALLEN KEY M5	1

ITEM	PHOTO	PARTS NAME	QTY
A		BACK	1
B		FRONT LEG	2
C		BACK LEG	2

DENİZ


CODING
- 231328
- 231329

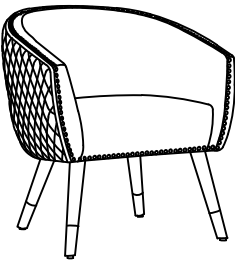


ISO 9001:2015
Reg. No. 00000000000000000000

fyndfurniture.com

1

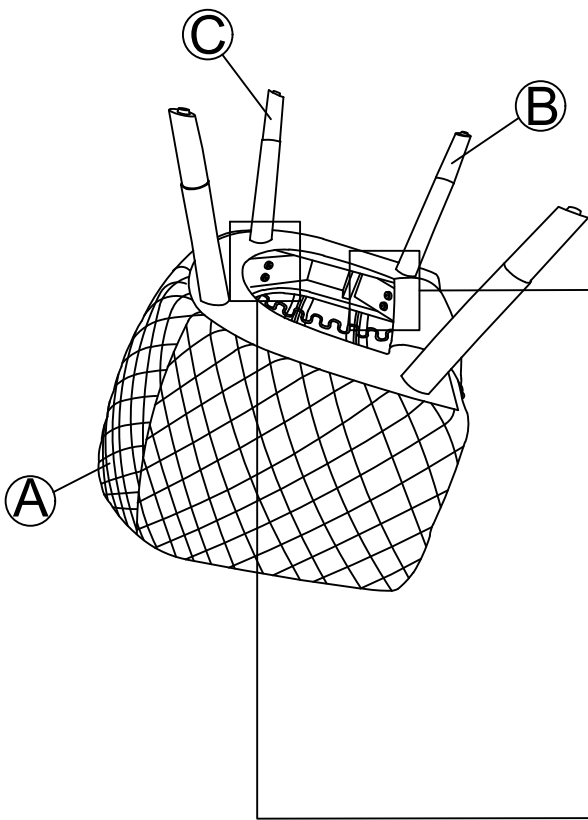

FRONT

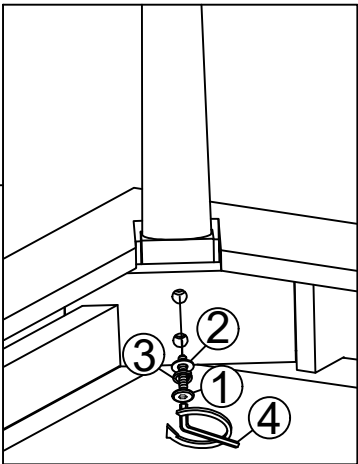

BACK

