

**CODING**  
 -231336  
 -231337



**ISO 9001:2015**  
 Reg. No. 000435-1-MY-1-QMS



Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

**CAUTION**  
 KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HARDWARE NAME	QTY
1		JCBB SCREW M8X60MM	2
2		FLAT WASHER M8	6
3		ALLEN KEY M5	1
4		BARREL NUT M8	2
5		WOOD DOWEL M10 X 40MM	4
6		WOOD BUTTON 18.5MM	6
7		JCBB SCREW M8X80MM	4
8		C/B SCREW M4 X 50MM	3
9		PASTE PAD 20MM	4
10		L-BRACKET	2
11		C/B SCREW M4 X 20MM	4
12		SPRING WASHER M8	6

ITEM	PHOTO	PART NAME	QTY
A		BACK	1
B		SEAT	1
C		RAIL	1
D		ARM	2



# FIGARO


**CODING**  
-231336  
-231337




**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

**LUOMA.COM**

**1**

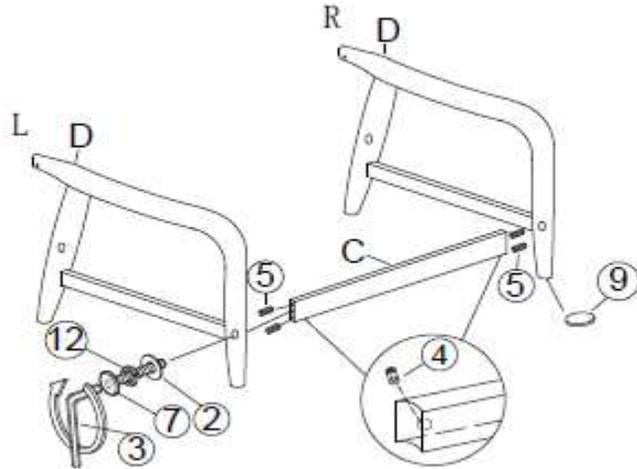

**2**

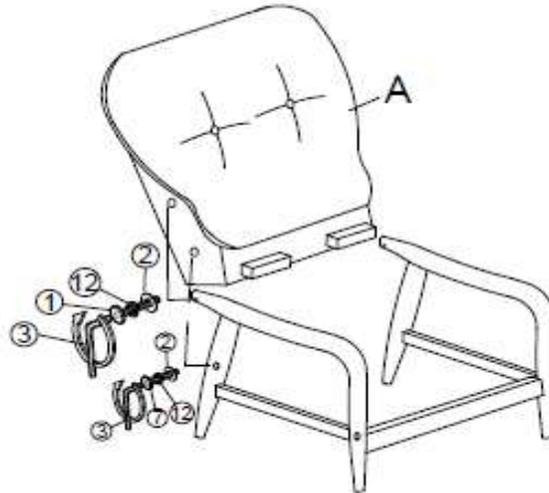

**3**

