


CODING

-232116

-232115

-232114

-232113

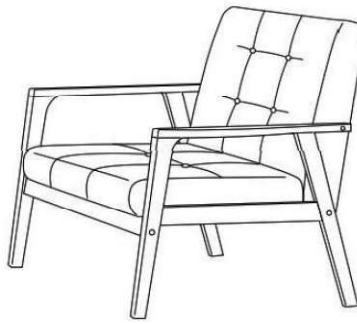

ISO 9001:2015
Reg. No. 000435-1-MEX-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	PART LIST	QTY
A		CHAIR BACK	1 PC
B		SIDE PANEL	2 PCS
C		FRONT SUPPORT	1 PC
D		CUSHION SEAT	1 PC

NO	PHOTO	HARDWARE LIST	QTY
1		JCB SCREW M6 X 55MM	6 PCS
2		WOOD DOWEL M8 X 30MM	4 PCS
3		CSK SCREW M4 X 35MM	9 PCS
4		BARREL NUT	2 PCS
5		WOOD BUTTON	6 PCS
6		ALLEN KEY M4	1 PC


CODING

-232116

-232115

-232114

-232113

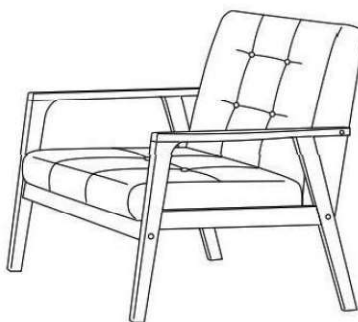

ISO 9001:2015
Reg. No. 000435-1-MEX-1-QM&S

nuhoom.com

