


## CODING

- 232190
- 232191
- 232200
- 232213

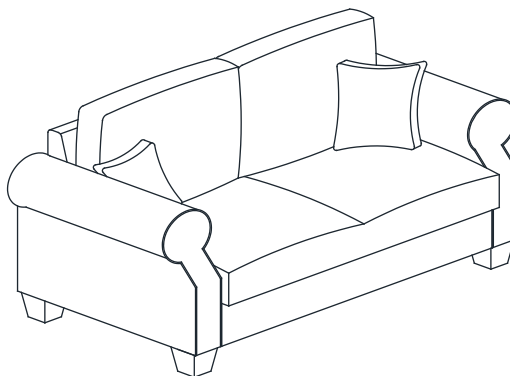

ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

**nuhoom.com**

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION


KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

| ITEM | PHOTO | HARDWARE NAME           | QTY |
|------|-------|-------------------------|-----|
| A    |       | JCBC SCREW<br>M6 X 70mm | 4   |
| B    |       | WOOD DOWEL<br>M8 X 30mm | 4   |
| C    |       | M4 ALLEN KEY (100)      | 1   |

| ITEM | PHOTO | PARTS NAME    | QTY |
|------|-------|---------------|-----|
| ①    |       | BACK PANEL    | 1   |
| ②    |       | BACK CUSHION  | 2   |
| ③    |       | SIDE PANEL(L) | 1   |
| ④    |       | SIDE PANEL(R) | 1   |
| ⑤    |       | CUSHION SEAT  | 1   |
| ⑥    |       | LEG           | 4   |
| ⑦    |       | PILLOW        | 2   |

## CODING


- 232190
- 232191
- 232200
- 232213

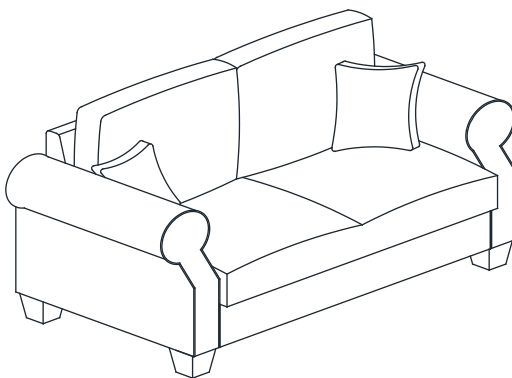


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


1

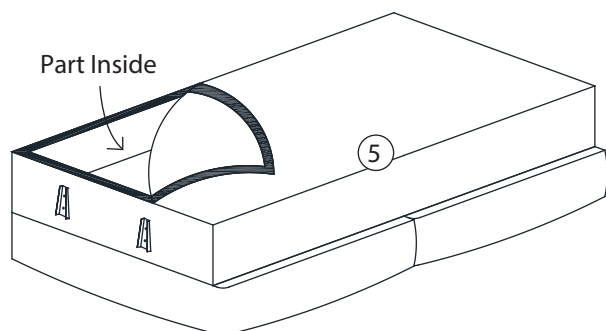


2

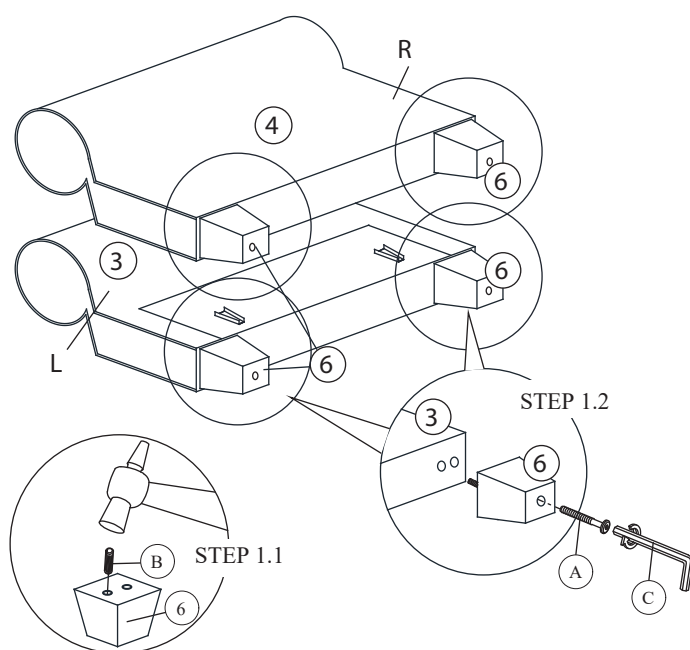

3

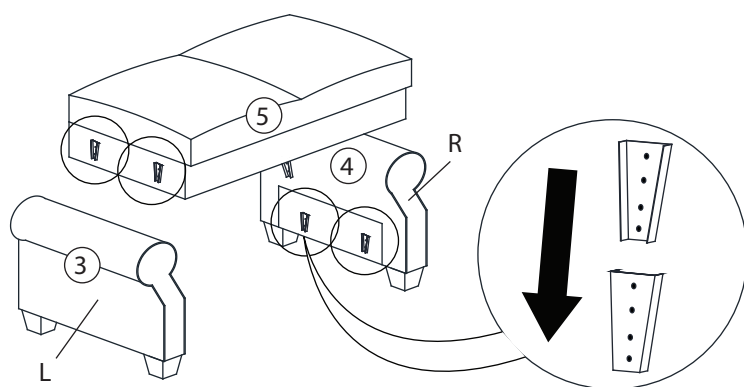


4

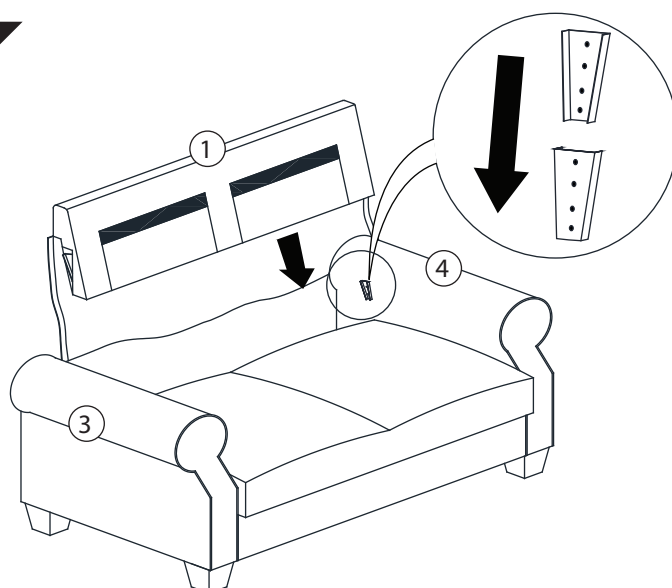

## CODING


- 232190
- 232191
- 232200
- 232213

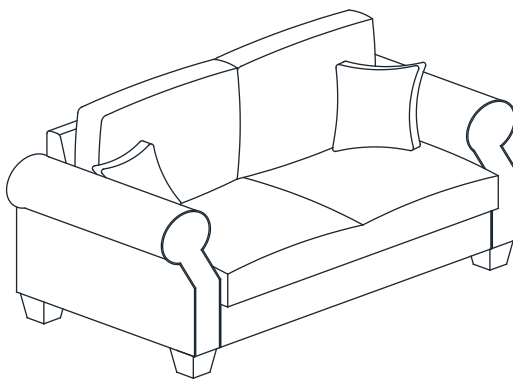


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

5

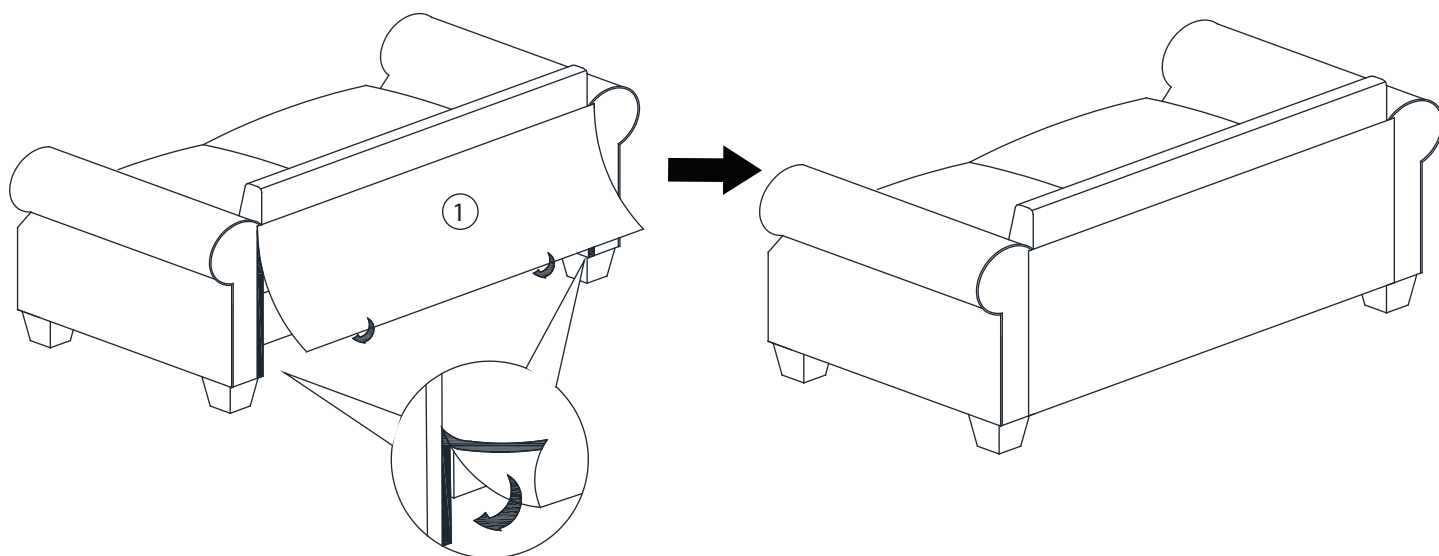

6

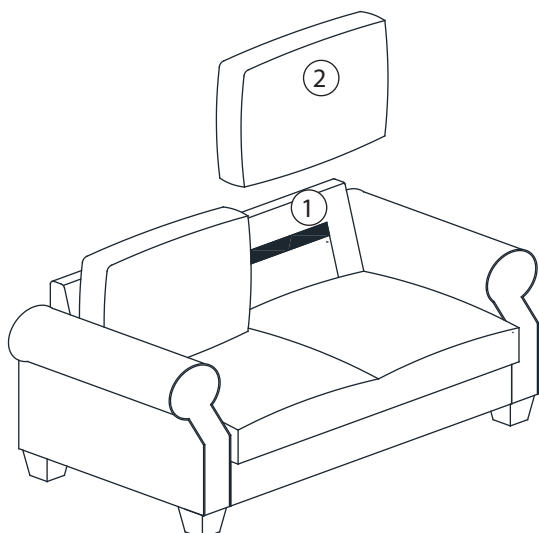

7

