
## **ATIVA**

#### **CODING**

- 233301
- 233302

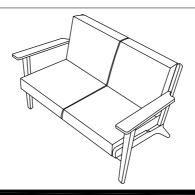

ISO 9001:2013

### LUOOMa.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


ITEM	РНОТО	HAREWARE NAME	QTY
1	<b>@</b>	JCBC SCREW M6 x 60MM	6 PCS
2		SPRING WASHER 1/4"	6 PCS
3		ALLEN KEY M4 (BALL SHAPE)	1 PC
4		WOOD DOWEL Ø10 x 40MM	8 PCS
5	<:::::: <b>(%</b> )	CSK SCREW #8 x 32MM	10 PCS

ITEM	РНОТО	PARTS NAME	QTY
А		SOFA ARM (LEFT)	1 PC
В		SOFA ARM (RIGHT)	1 PC
С		BACK FRAME	1 PC
D		SEAT FRAME	1 PC
E		FRONT STRETCHER	1 PC
F		BACK CUSHION	2 PCS
G		SEAT CUSHION	2 PCS

## **ATIVA**


#### **CODING**


- 233301 233302

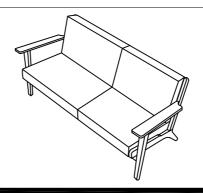

ISO 9001:2015

### LUOOMO.COM

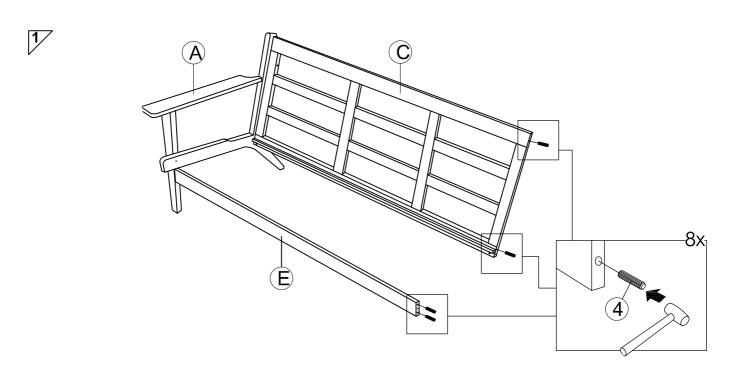


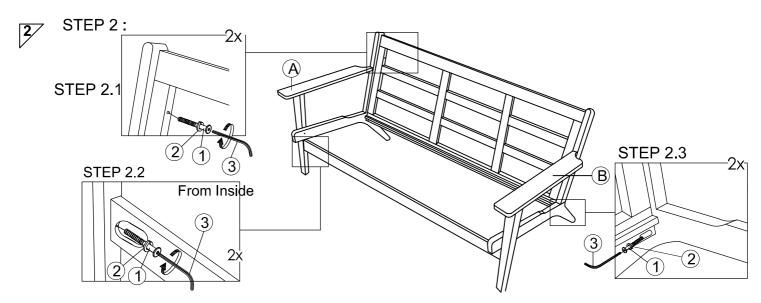

# **ATIVA**

### **CODING**

- 233301 233302

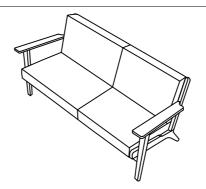

ISO 9001:2015

## LUOOMO.COM



