

CODING

-236109



ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

nesthouz.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.


CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HARDWARE NAME	QTY
A		JCBC SCREW M6X60MM	4
B		SPRING WASHER M6	4
C		ALLEN KEY M4	1
D		WOOD DOWEL M10 X 40MM	8
E		C/B SCREW M4 X 32MM	4
F		PASTE PAD 20MM	4
G		BARREL NUT M6	4
H		WOOD BUTTON 14.5	4

ITEM	PHOTO	PART NAME	QTY
1		CUSHION SEAT	1
2		LEG	2
3		APRON	2


CODING
-236109

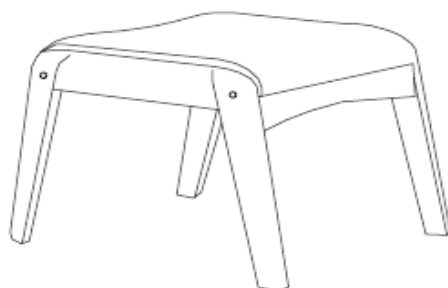

ISO 9001:2015
Reg. No. 000435-1-MY-I-QMS

nesthouz.com

1

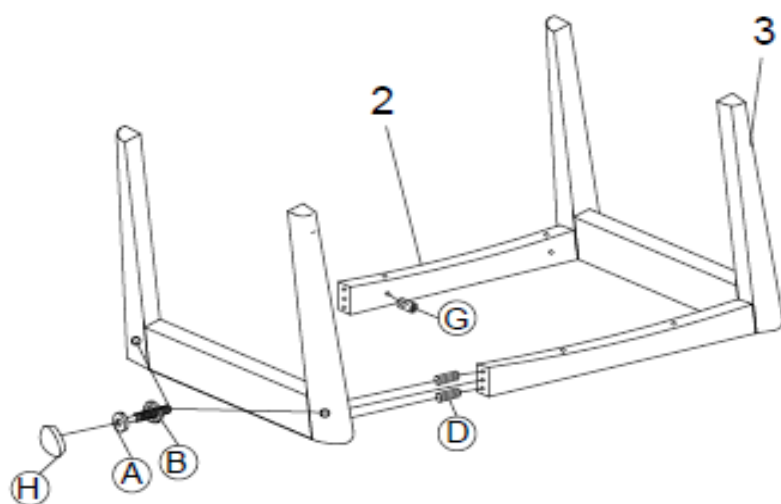

2

