

CODING
-2407089



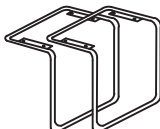
ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

CAUTION KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	HARDWARE LIST	QTY	SPARE QTY
①	JCBC M6 x 30MM(ZB) 	8	
②	FLAT WASHER 1/4"(ZB) 	8	
③	M4 ALLEN KEY (BALL SHAPE) LONG 	1	
④	PLASTIC STOPPER 	4	
⑤	PAN HEAD WF TAPPING 55MM SCREW 	2	

ITEM	PART LIST	SPARE QTY
Ⓐ	MATEL LEG(L & R) 	2
Ⓑ	BACK REST 	1
Ⓒ	BACK CUSHION 	1

CODING
-2407089



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

