

## CODING

- 24092579
- 24092580
- 24092581
- 24092582



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		JCBC SCREW M6 X 55MM	4 (+1 EXTRA)
(B)		JCBC SCREW M6 X 20MM	4 (+1 EXTRA)
(C)		HANDLE SCREW M4 X 16MM	4 (+1 EXTRA)
(D)		SPRING WASHER M6	4 (+1 EXTRA)
(E)		SCREW PIN 15 X 15MM	4 (+1 EXTRA)
(F)		ALLEN KEY M4 (BALL SHAPE)	1
(G)		CSK CB SCREW M5 X 32MM	4 (+1 EXTRA)
(H)		MATEL PLATE	4 (+1 EXTRA)
(I)		WOOD DOWEL M10 X 30MM	6 (+2 EXTRA)
(J)		ADJUSTABLE SCREW 6 X 16MM	4 (+1 EXTRA)

ITEM	PHOTO	PARTS NAME	QTY
(1)		BACK PANEL	1
(2)		FRONT LEG	1
(3)		BACK LEG	1
(4)		SUPPORT BAR	2
(5)		CHAIR SEAT	1

## CODING


- 24092579
- 24092580
- 24092581
- 24092582




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

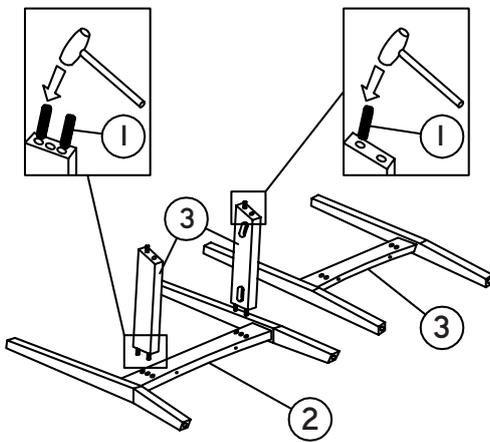


2

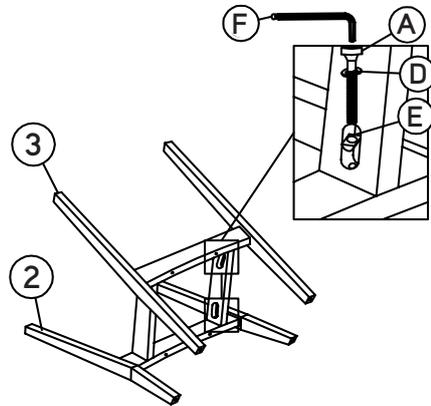

3

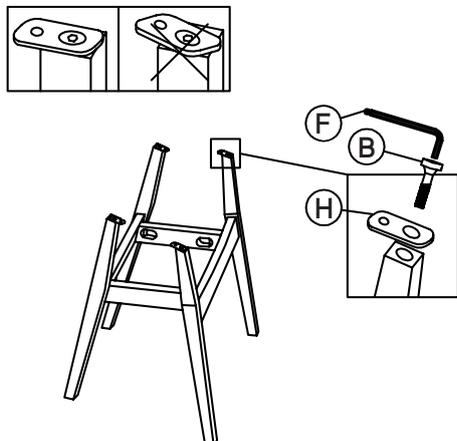

4

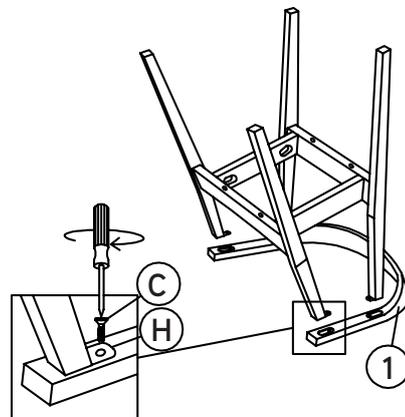

## CODING


- 24092579
- 24092580
- 24092581
- 24092582



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

5

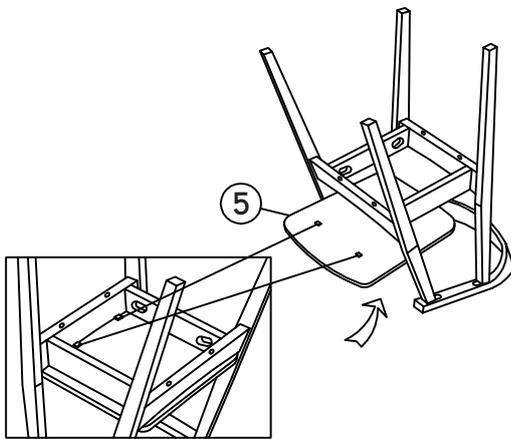

6

