

CODING

-241034
-241033
-241036
-241035



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

CAUTION

KEEP ALL THE PARTS OUT REACH OF CHILDREN

| HARDWARE LIST | | | | |
|---------------|---------------------------|--|-----|-----------|
| ITEM | DESCRIPTION | | QTY | Spare Qty |
| 1 | JCBC SCREW M6 X 50MM | | 6 | 1 |
| 2 | JCBC SCREW M6 X 25MM | | 4 | 1 |
| 3 | SPRING WASHER M6 | | 6 | 1 |
| 4 | SCREW PIN | | 6 | 1 |
| 5 | CSK CB SCREW M5 X 32MM | | 4 | 1 |
| 6 | CSK CB SCREW M3.5 X 12MM | | 8 | 2 |
| 7 | HANDLE SCREW M4 X 12MM | | 4 | 1 |
| 8 | METAL PLATE | | 4 | |
| 9 | WOOD DOWEL M10 X 30MM | | 6 | 1 |
| 10 | L - BRACKET | | 4 | |
| 11 | ALLEN KEY M4 (BALL SHAPE) | | 1 | |

| PART LIST | | | |
|-----------|-----------------|--|-----|
| ITEM | DESCRIPTION | | QTY |
| A | FRONT LEG | | 1 |
| B | BACK LEG | | 1 |
| C | SIDE RAIL (L&R) | | 2 |
| B | ARM REST | | 2 |
| B | CHAIR SEAT | | 1 |

CODING


-241034
-241033
-241036
-241035




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

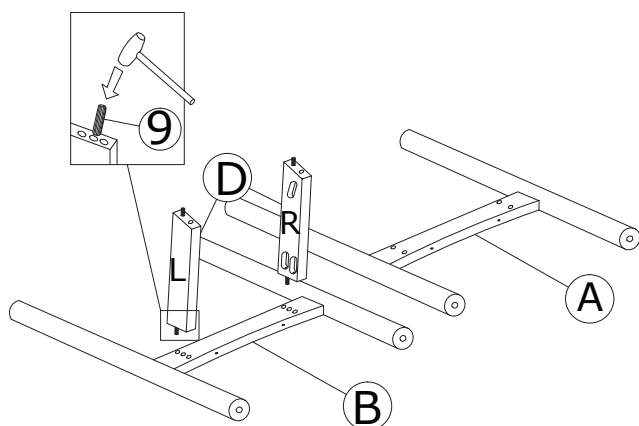

2

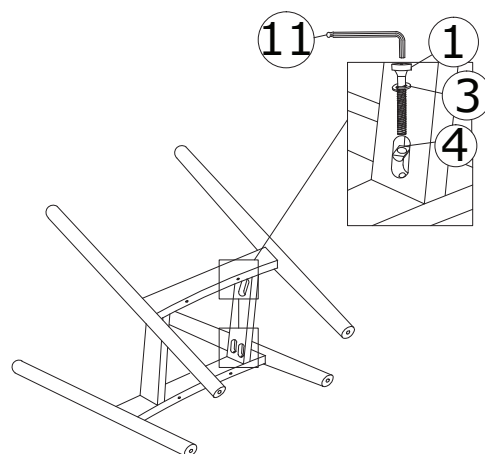

3

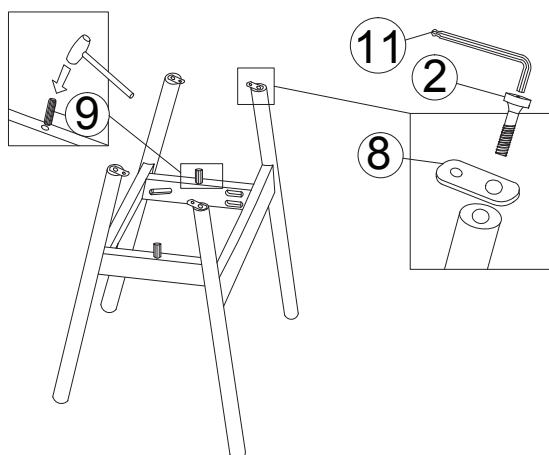

4

