

## CODING

-241220

-241221

ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMSfynd.  
FURNITURE

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

## CAUTION

KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolt M6,2x19	8
(B)		Spring Washer Ø10x1,2	8
(C)		Washer Ø13x1,0	8
(D)		Allen key 4 mm	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		Back	1
(2)		Seat	1
(3)		Leg frame	1

## CODING


-241220  
-241221



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

fynd.  
FURNITURE

1

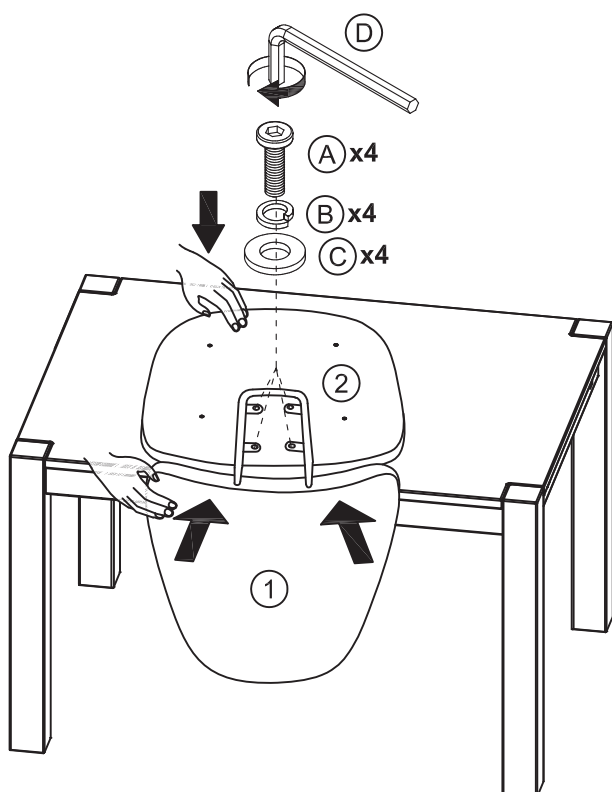

2

