

## CODING

-241276  
-241277



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

fynd.  
FURNITURE

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

## CAUTION

KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolt M6x20	8
(B)		Washer Ø6/Ø14	8
(C)		Spring washer Ø6	8
(D)		Felt pad	4
(E)		Allen key	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		Seat	1
(2)		400mm front Chair legs	2
(3)		385mm back Chair legs	2

## CODING


-241276  
-241277



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

fynd.  
FURNITURE

1

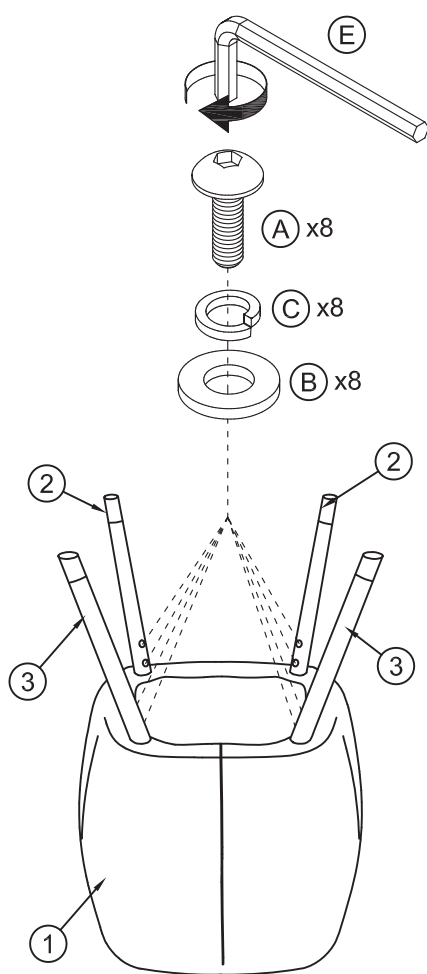

2

