

CODING

-241505



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


nesthouz.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HARDWARE NAME	QTY
D		JCBC SCREW M6X45MM	2
E		JCBC SCREW M6X60MM	4
F		JCBC SCREW M6X70MM	4
G		FLAT WASHER M6	10
H		SPRING WASHER M6	10
I		ALLEN KEY M4 X 100MM	1
J		PASTE PAD 20MM	4

ITEM	PHOTO	PART NAME	QTY
A		FRONT LEG	2
B		BACK REST	1
C		SEAT FRAME	1

CODING
-241505




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

LOCK 80%

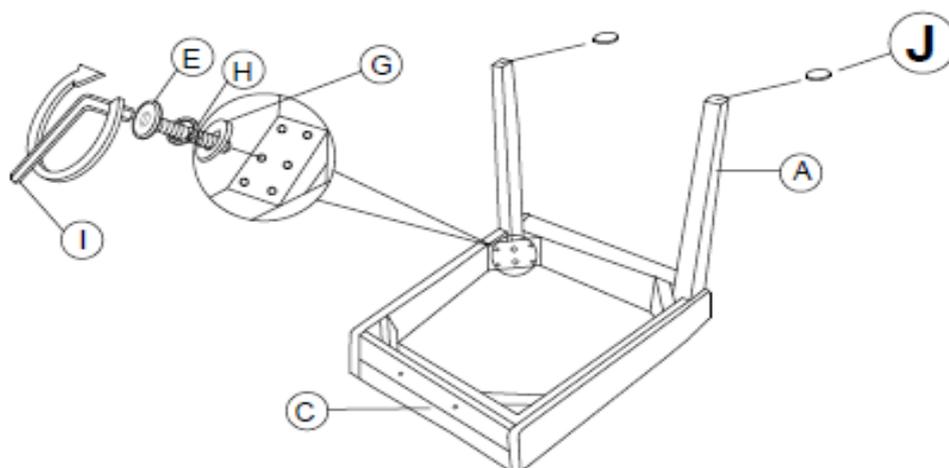

2

LOCK 80%

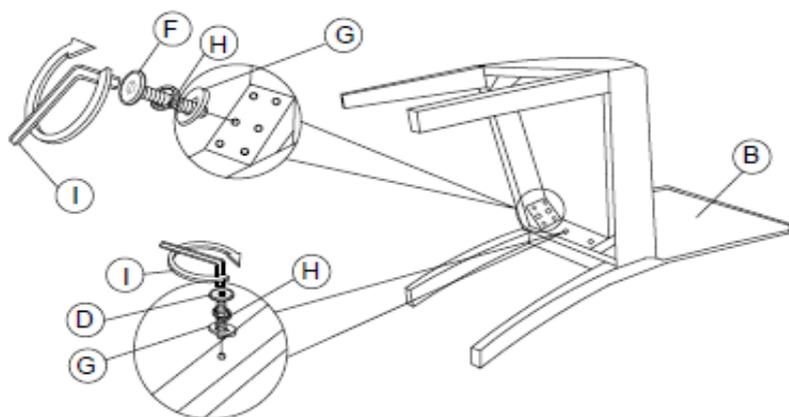

LOCK 100%

