

CODING

-241619



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the part before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

## CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN

| ITEM | PHOTO | HARDWARE NAME               | QTY               |
|------|-------|-----------------------------|-------------------|
| (A)  |       | JCBC BOLT M6 X 40MM (BLK)   | 8<br>(+ 1 extra)  |
| (B)  |       | JCBB BOLT M6 X 30MM (BLK)   | 3<br>(+ 1 extra)  |
| (C)  |       | SPRING WASHER 5/16" (BLK)   | 8<br>(+ 2 extra)  |
| (D)  |       | FLAT WASHER M8 X 18MM (BLK) | 16<br>(+ 2 extra) |
| (E)  |       | PH M4x32MM (BLK)            | 6<br>(+ 1 extra)  |
| (F)  |       | ALLEN KEY M4 (BALL SHAPE)   | 1                 |
| (G)  |       | ADJUSTABLE SCREW 6 X 16MM   | 4<br>(+ 1 extra)  |

| ITEM | PHOTO | PART NAME         | QTY |
|------|-------|-------------------|-----|
| (1)  |       | CHAIR LEG (FR&FL) | 2   |
| (2)  |       | CHAIR LEG (BR&BL) | 2   |
| (3)  |       | CHAIR BACK        | 1   |
| (4)  |       | CHAIR SEAT        | 1   |
| (5)  |       | CORNER BLOCK      | 2   |

# AVARIE

ASSEMBLY GUIDE


CODING  
-241619




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

1

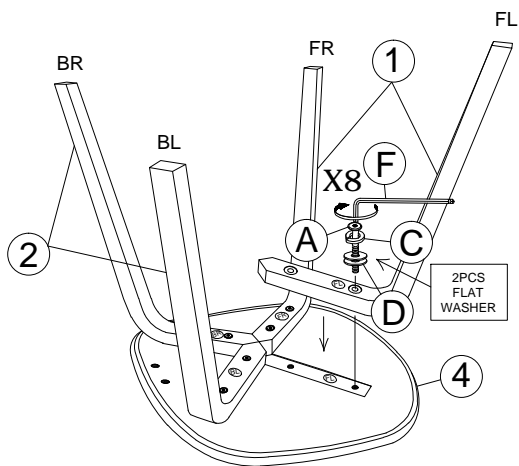

2

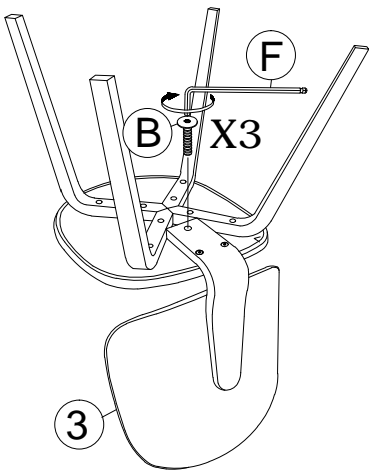

3

