

## CODING

-241629

-241630









ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

LUOMA.com

Read the instruction carefully. Remove all the wrapping, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION

KEEP ALL PARTS OUT OF CHILDREN'S REACH.

ITEM	HARDWARE LIST (FOR 2 CHAIRS)	QTY
F	M6 X 35MM JCBC BOLT 	12 PCS
G	M6 X 60MM JCBC BOLT 	12 PCS
H	1/4 SPRING WASHER 	24 PCS
I	M4 X 25MM WOOD SCREW 	4 PCS
J	15.0MM WOOD BUTTON 	4 PCS
K	M4 ALLEN KEY (SHORT) 	1 PC

ITEM	PART LIST	QTY
A	CAPRAIL	2 PCS
B	LEG FRAME	4 PCS
C	CORNER BLOCK	2 PCS
D	BACK CUSHION	2 PCS
E	SEAT CUSHION	2 PCS

## CODING

-241629


-241630




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

LUOMA.com


Step 1

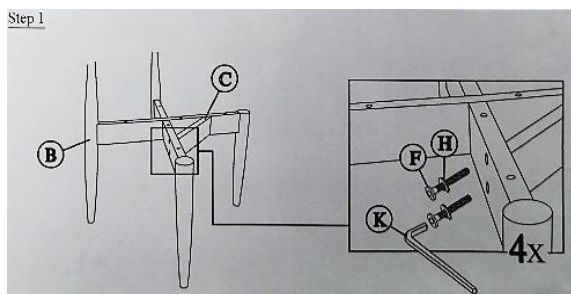

Step 2

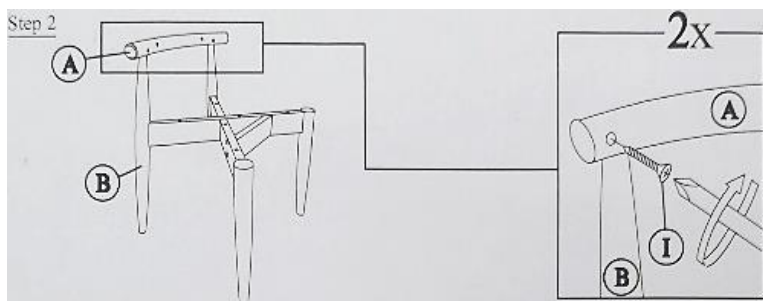

Step 3

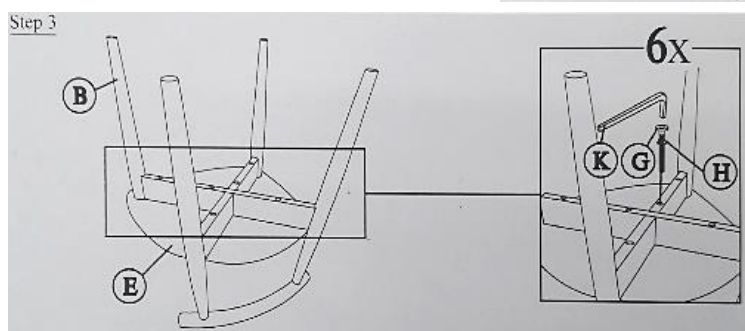

Step 4

