

## CODING

-241631  
-241632  
-241633  
-241634



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

**LUOMA.COM**

Read the instruction carefully. Remove all the wrapping, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION

**KEEP ALL PARTS OUT OF CHILDREN'S REACH.**

ITEM	HARDWARE LIST (FOR 2 CHAIRS)	QTY
D	M6 X 40MM JCBC BOLT 	8 PCS
E	1/4 SPRING WASHER 	8 PCS
F	M6 X 13MM FLAT WASHER 	8 PCS
G	M8 X 25MM WOOD SCREW 	16 PCS
H	M4 ALLEN KEY (SHORT) 	1 PC

ITEM	PART LIST	QTY
AL	CHAIR LEG (LEFT)	2 PCS
AR	CHAIR LEG (RIGHT)	2 PCS
B	CUSHION SEAT	2 PCS
C	CORNER BLOCK	4 PCS

# OPAL

ASSEMBLY GUIDE

## CODING


- 241631
- 241632
- 241633
- 241634




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

LUOMA.COM


Step 1

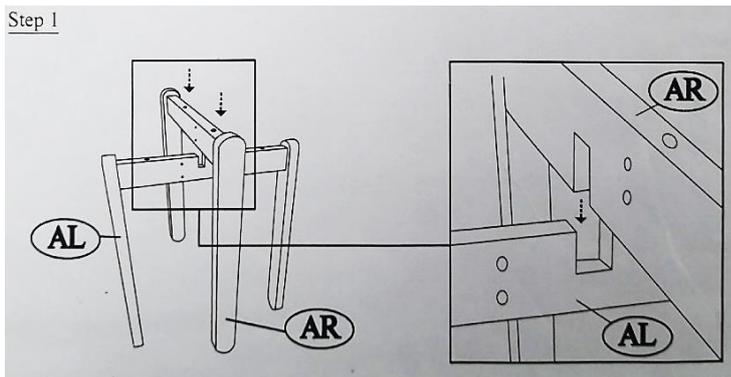

Step 2

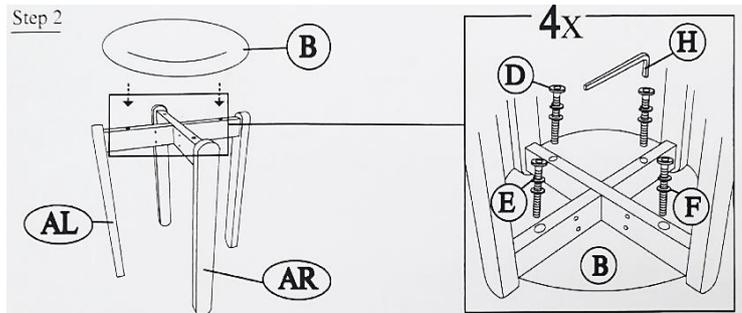

Step 3

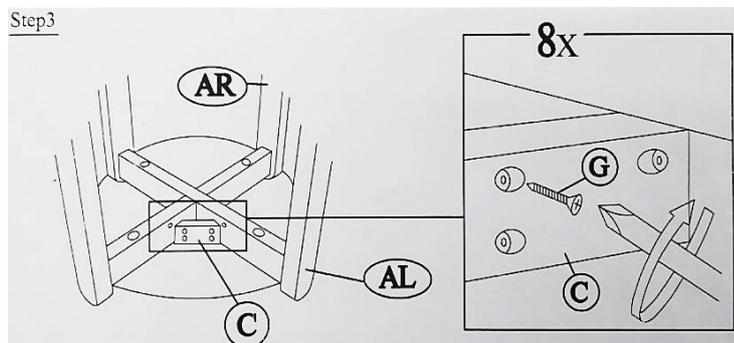

Step 4

