


CODING

- 241681

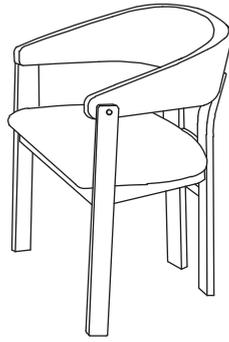

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		JCBC SCREW M6 x 50MM	8
(B)		JCBC SCREW M6 x 35MM	6
(C)		SPRING WASHER	14
(D)		WOOD SCREW M4 x 32MM	6
(E)		WOOD DOWEL	4
(F)		WOOD BUTTON	6
(G)		M4 ALLEY KEY	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		Chair Back Frame	1
(2)		Side Rail (L)	1
(3)		Side Rail (R)	1
(4)		Front Leg Frame	1
(5)		Back Rest Cushion	1
(6)		Cushion Seat	1


CODING
- 241681

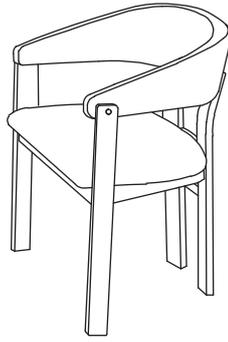


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

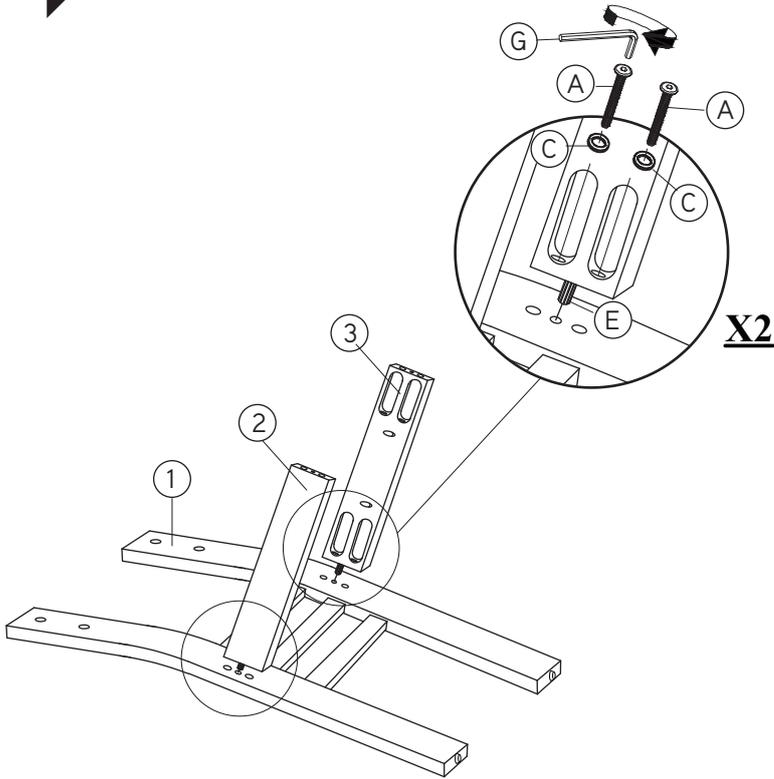

2

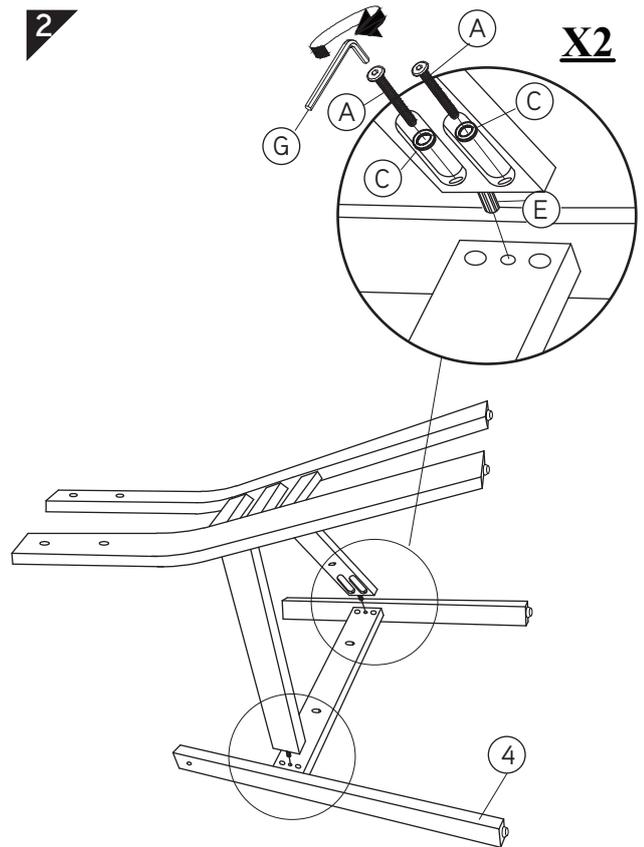

3

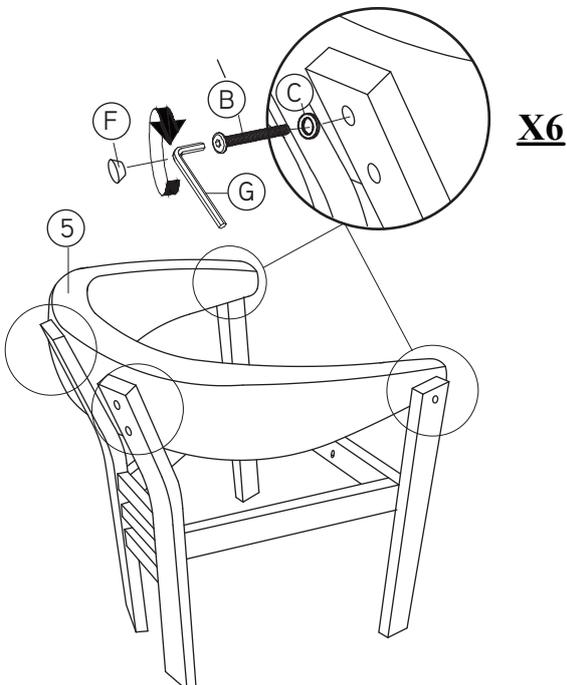

4

