


CODING:
- 241699
- 241700

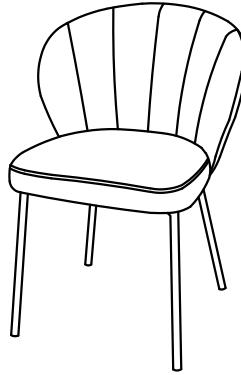

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUOOMA.COM

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)	A coiled metal spring.	M6x35	2
(B)	A flat metal washer.	Washer	6
(C)	A T-shaped Allen key.	Allen Key	1
(D)	A coiled metal spring.	M6x50	4
(E)	A roll of foam padding.	Foam Pad	4

ITEM	PHOTO	PARTS NAME	QTY
(1)	A curved wooden chair seat.	Chair Seat	1
(2)	A curved wooden chair leg.	Chair Leg	1
(3)	A curved wooden chair leg.	Chair Leg	1


CODING:
- 241699
- 241700

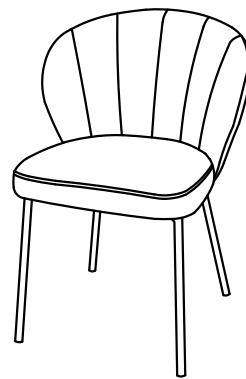

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUOOMA.COM

1

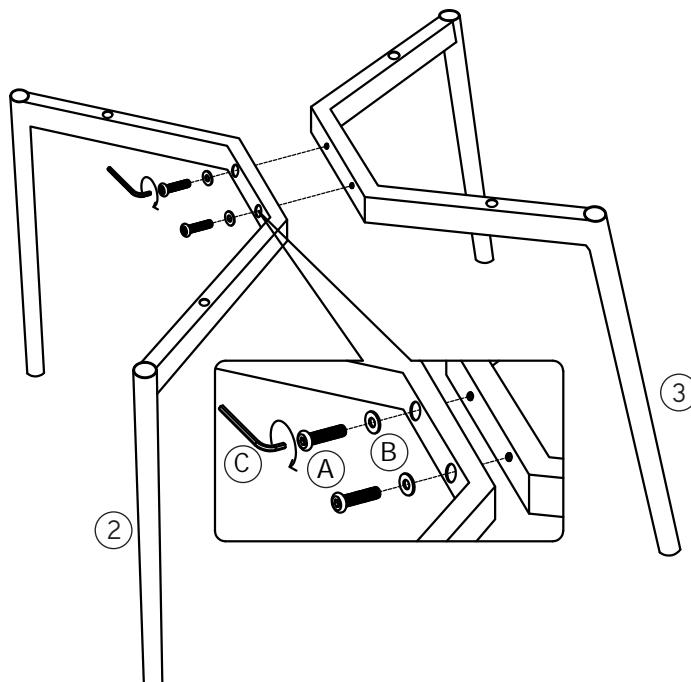

2

