
CHANEL

COADING

-243025 -243028 -243029

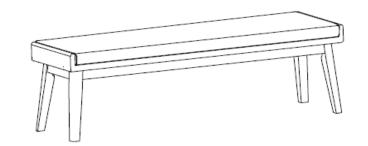

ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to p revent from sc ratches.

C A UT IO N KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	РНОТО	HARDWARE NAME	QTY	ITEM	
С	().	JCBC SCREW M6X60MM	8		
D	Q	SPRING WAHSER M6	8	А	
E	0	FLAT WASHER M6	8		
F		ALLEN KEY M4	1		

ITEM	рното	PART NAME	QTY
A		SEAT	1
В		FRONT LEG	4


CHANEL

COADING

-243025 -243028

-243028

-243029

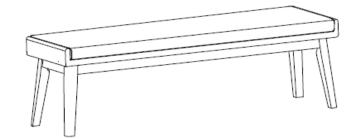

ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

