


CODING
- 244016

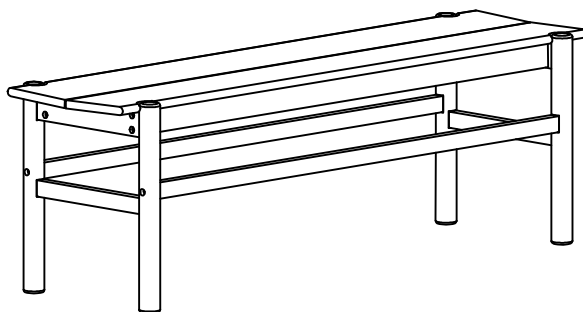

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nestnordic.com


Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HAREWARE NAME	QTY
1		JCBC SCREW M6 x 60MM	8
2		JCBC SCREW M7 x 40MM	4
3		SPRING WASHER M6	8
4		WOOD DOWEL M8 X 30MM	4
5		BARREL NUT M6	8
6		C/B SCREW 25MM	6
7		C/B SCREW 32MM	16
8		ALLEN KEY M4	1
9		WOOD BUTTON 14.5MM	12

ITEM	PHOTO	PARTS NAME	QTY
A		RAIL	2
B		CENTRE SUPPORT	3
C		LEG	2
D		LEG SUPPORT	2
E		SEAT PANEL	2

CODING
- 244016

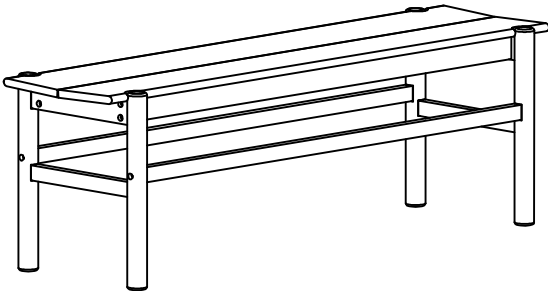

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nestnordic.com

