
CODING -245019

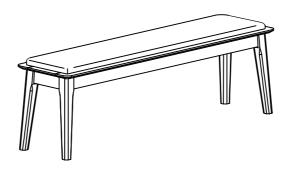

ISO 9001:2015

## fyndfurniture.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	HARDWARE NAME	QTY
A		JCBC SCREW M6 x 70MM	8
B		SPRING WASHER 1/4"	8
©	0	FLAT WASHER 1/4"	8
0		ALLEN KEY M4	1

ITEM	РНОТО	PARTS NAME	QTY
1		BENCH TOP	1
2	<b>8</b> 8	BENCH LEG	4

CODING -245019

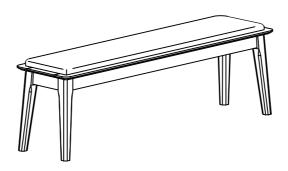

ISO 9001:2015

## fyndfurniture.com



