


**CODING**  
-3123003  
-522018

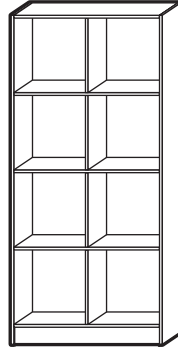















**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**  
**KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.**

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	30
②		M3.5 x 16mm Chipboard Screw	8
③		Nail	100
④		Wood Dowel 6 x 25mm	40
⑤		L Bracket	1
⑥		Square Leg	4
⑦		Leg Nail	1
⑧		Allen Key	1

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Top & Bottom Panel		2
Ⓒ	Shelf Panel		3
Ⓓ	Brace Panel		4
Ⓔ	Bottom Brace Panel		1
Ⓕ	Back Panel		1


**CODING**  
-3123003  
-522018

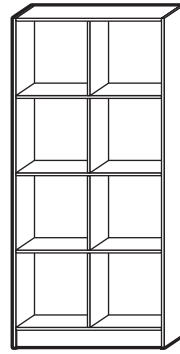


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


## Step 1

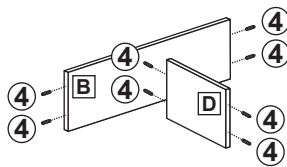


## Step 2

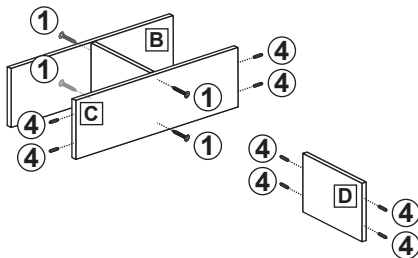


## Step 3

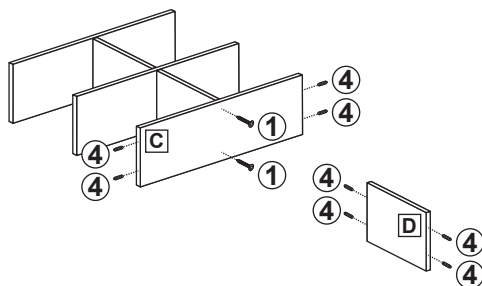


## Step 4

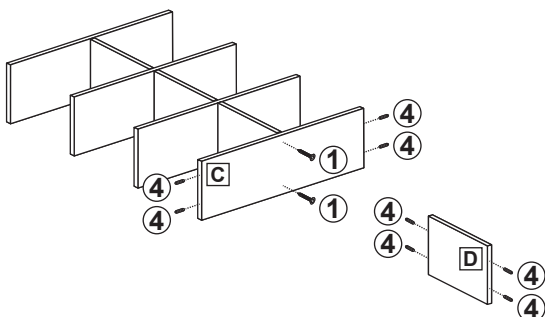


## Step 5

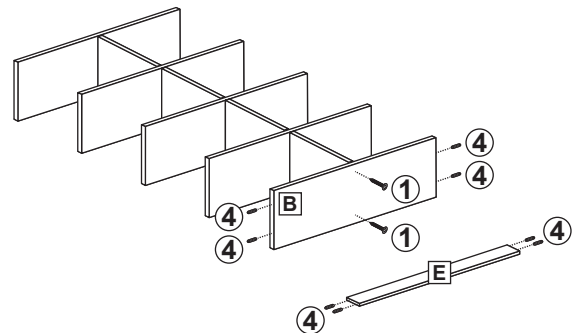

## Step 6

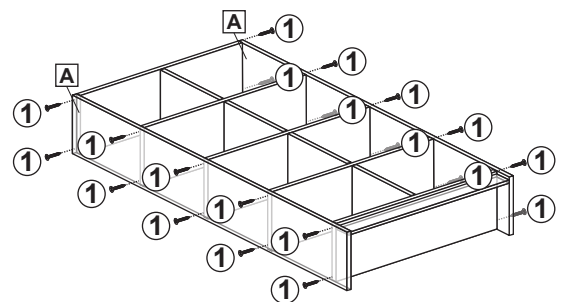

## Step 7

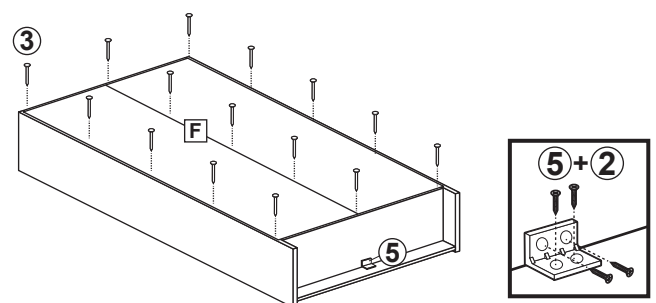

## Step 8

