


CODING

- 332003

ISO 9001:2015
Reg. No. 00905-1-MIT-1-QMS

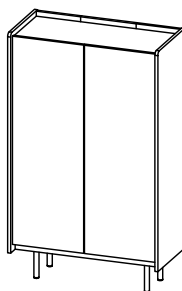










nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


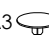
CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

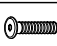
HARDWARE

HARDWARE				
A	MINI FIX	A1  A2  A3 	16 SETS	
B	M8 X 30MM WOOD DOWEL		33 PCS	
C	ALLEN KEY M4		1 PC	
D	M3.5 X 16MM C.B SCREW		24 PCS	
E	M4 X 32MM C.B SCREW		16 PCS	
F	JCBC Screw M6 x 20MM		16 PCS	
G	JCBC SCREW M6 X 50MM		6 PCS	
H	METAL SHELF SUPPORT		16 PCS	
I	SOFT CLOSING 7/8 HINGES		4 PCS	


SELF-PREPARED TOOLS: Tools below are NOT included in package.

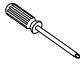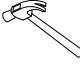	SCREWDRIVER		HAMMER
---	-------------	---	--------

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	SHELF PANEL	4 PCS
6	BONE PANEL	1 PC
7	BACK PANEL (L)	1 PC
8	BACK PANEL (CENTER)	1 PC
9	BACK PANEL (R)	1 PC
10	DOOR PANEL	2 PCS
11	METAL APRON	1 PC
12	METAL LEG	4 PCS

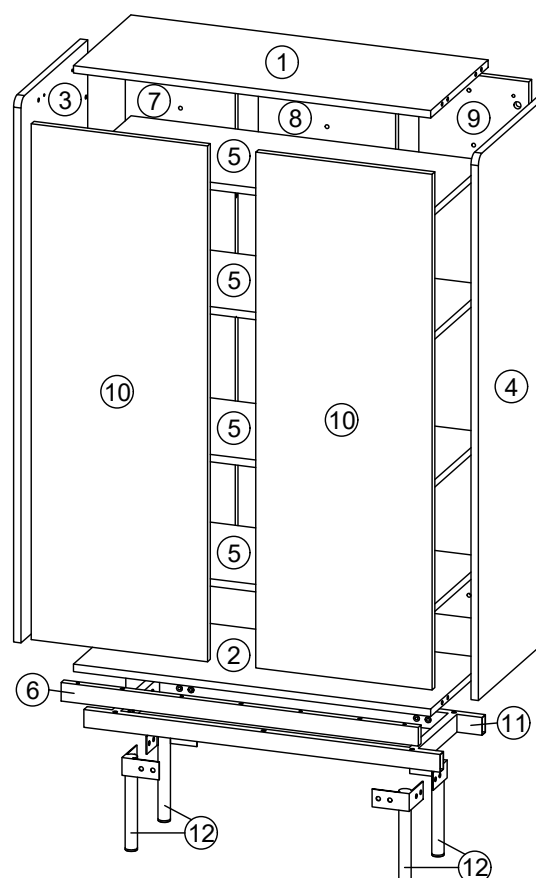

CODING
- 332003

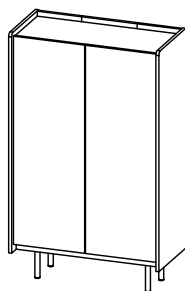


ISO 9001:2015
Reg. No. 00905-1-MT-1-QMS

nuhoom.com

STEP 1


- Insert hardware **A1** onto panel (1) and (2).
(Repeat 8 times.)
- Insert hardware **B** onto panel (1) and (2).
(Repeat 16 times.)

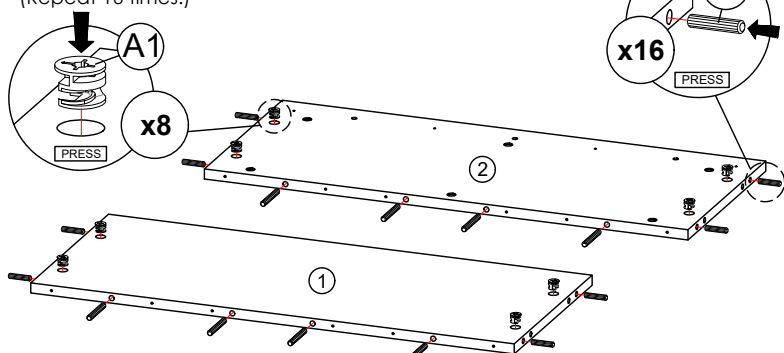

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3


- Insert hardware **A1** onto panel (7) and (9).
(Repeat 8 times.)
- Insert hardware **B** onto panel (7), (8) and (9).
(Repeat 14 times.)

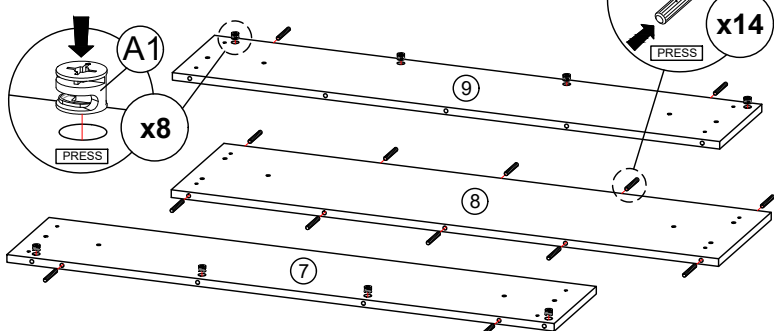

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 5


- Attach panel (7) and (9) to panel (8).
(Repeat 1 times.)

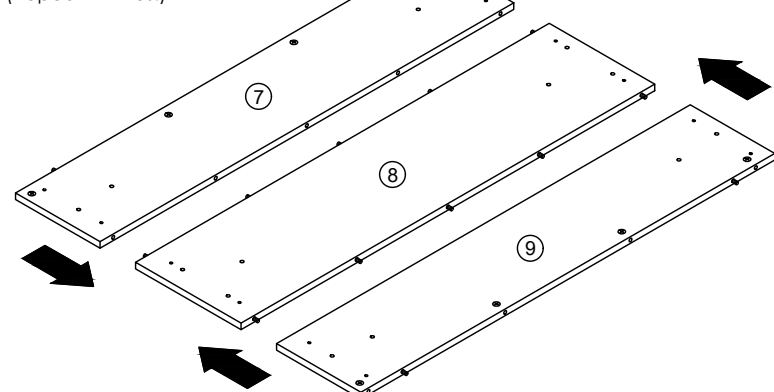

* In this step hardware **B** are pre-inserted.


STEP 2

- Insert hardware **A2** onto panel (3) and (4).
(Repeat 16 times.)
- Insert hardware **B** onto panel (6).
(Repeat 3 times.)

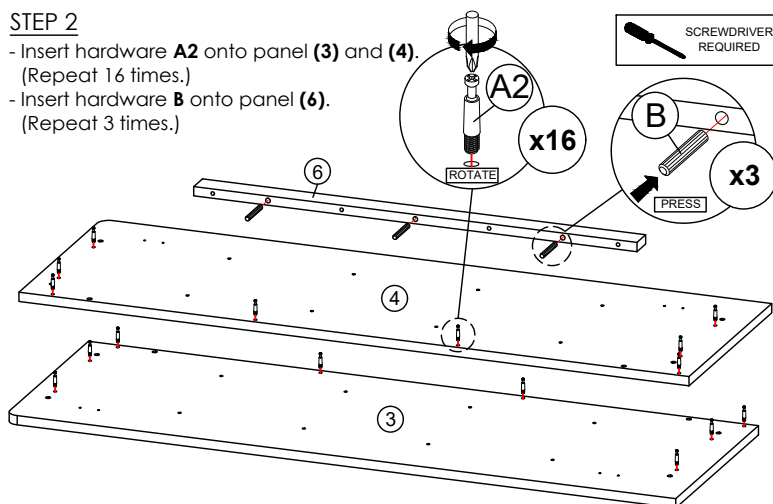

STEP 4


- Attach panel (6) to panel (2) by using hardware **E**.
(Repeat 4 times.)

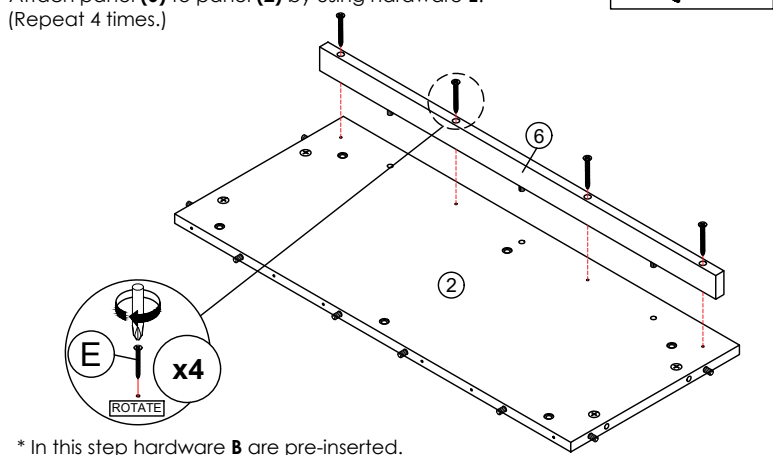

* In this step hardware **B** are pre-inserted.


STEP 6

- Attach panel (7), (8) and (9) to panel (1) and (2) by using hardware **E**.
(Repeat 12 times.)

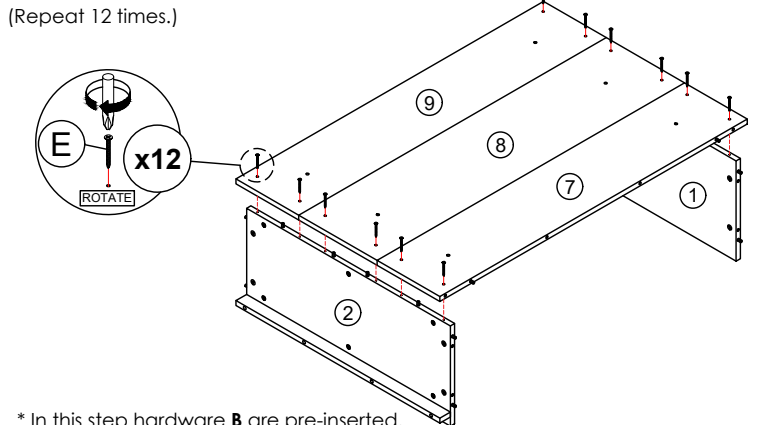

* In this step hardware **B** are pre-inserted.

CODING
- 332003

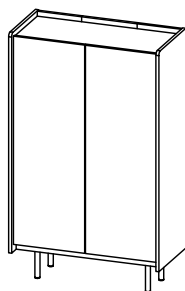


ISO 9001:2015
Reg. No. 00005-1-MT-1-QMS

nuhoom.com

STEP 7


- Attach panel (3) and (4) to panel (1), (2), (7) and (9).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 16 times.)

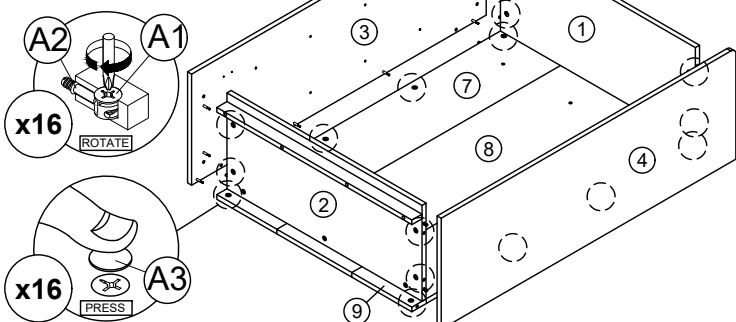

* In this step hardware A1, A2 and B are pre-inserted.


STEP 9

- Connect Metal Leg (12) to Metal Apron (11) by using hardware C and F.
- (Repeat 16 times.)

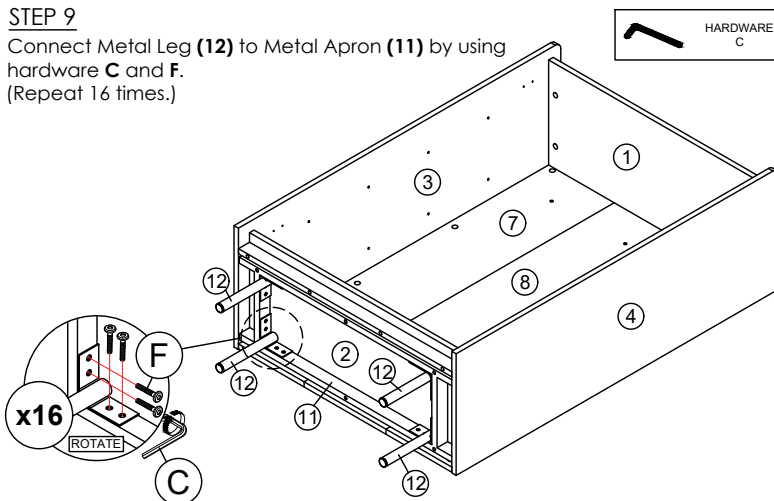


STEP 11

- Fix hardware I onto panel (10) by using hardware D.
- (Repeat 2 times for each hardware.)

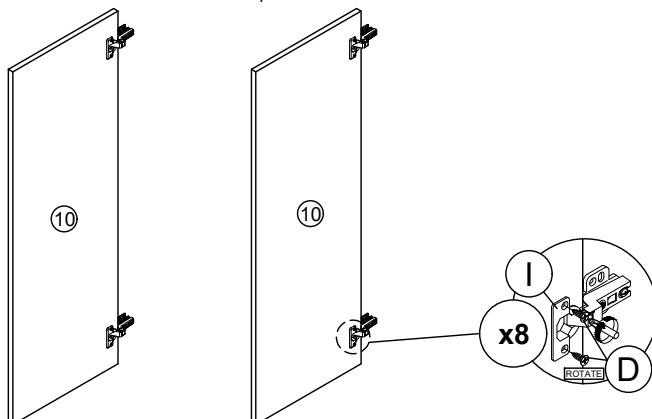


STEP 8

- Connect Metal Apron (11) to panel (2) by using hardware C and G.
- (Repeat 6 times.)

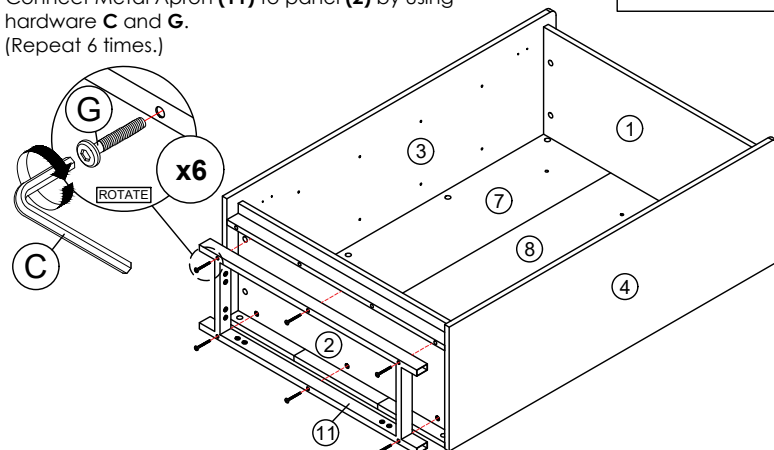


STEP 10

- Insert hardware H into mounting positions on panel (3) and (4) by hand.
- (Repeat 16 times.)
- Assemble the panel (5) into between panel (3) and (4).
- (Repeat 4 times.)

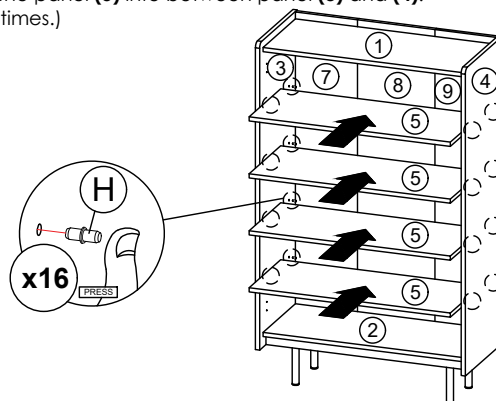

STEP 12

- Fix hardware I into panel (3) and (4) by using hardware D.
- (Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel (10).
- (Do only when needed.)

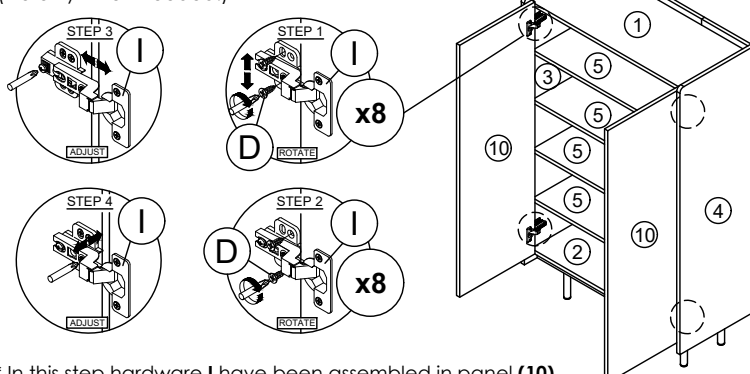

* In this step hardware I have been assembled in panel (10).