


CODING
-334016

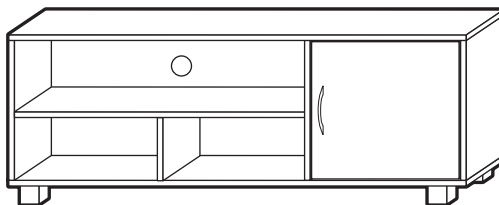

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

		HARDWARE LIST	QTY
A		M4 x 25mm Chipboard Screw	2
B		M3.5 x 16mm Chipboard Screw	16
C		M3.5 x 12mm Chipboard Screw	3
D		Minifix Pin	12
E		Minifix Carn	12
F		Wood Dowel 6 x 25mm	20
G		Nail	36
H		Black Door Spring	2
I		Magnet	1
J		Magnet Plate	1
K		Handle (1009 Silver)	1
L		Plastic Leg	4

ITEM	PART LIST	QTY
1	Top & Bottom Panel	2
2	Left & Right Panel	2
3	Centre Panel	1
4	Small Centre Panel	1
5	Shelf Panel	1
6	Back Panel	1
7	Door Panel	1


CODING
-334016

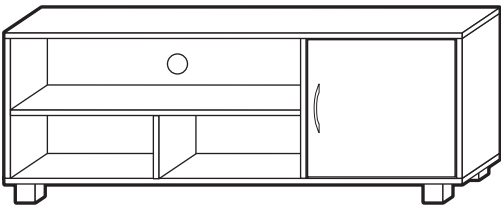


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

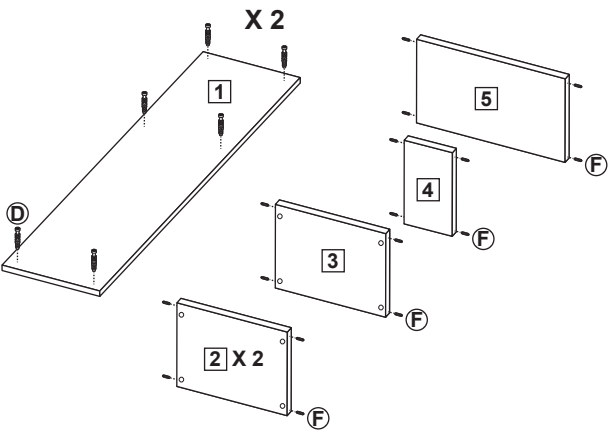


Step 2

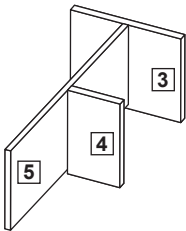

Step 3

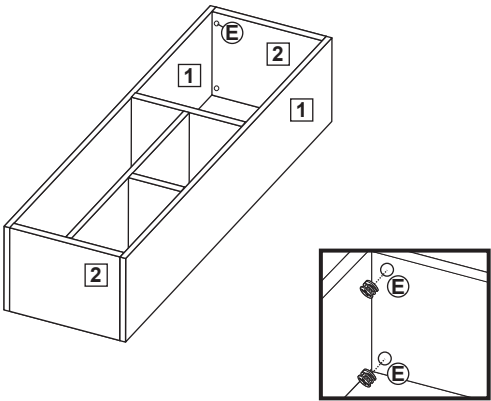

Step 4

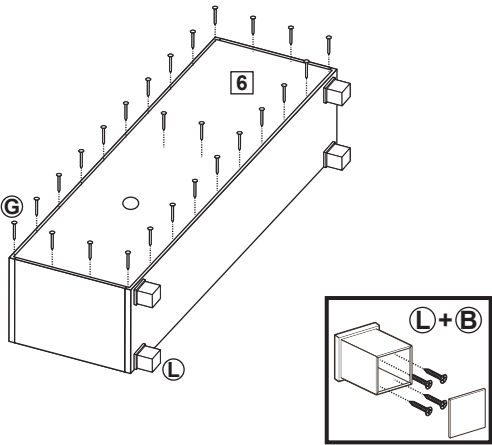

Step 5

