


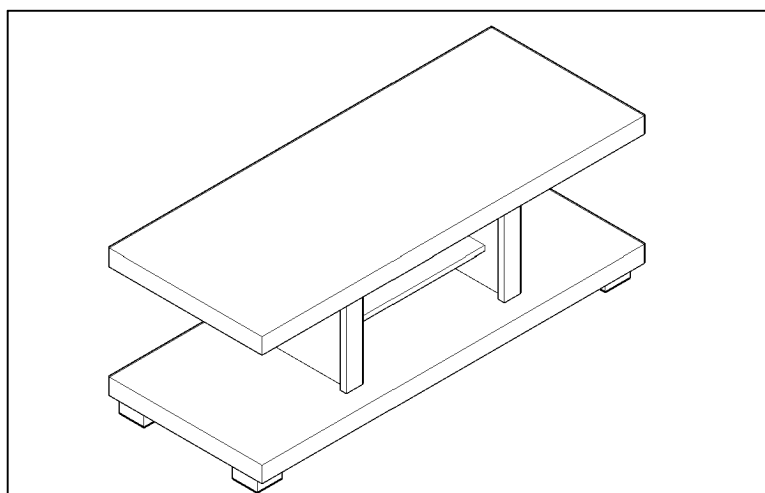







CODING
- 3302171








nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

| ITEM | PHOTO | HARDWARE NAME | QTY |
|------|---|--------------------------------------|---------|
| A |  | WOOD DOWEL M8 x 30MM | 12 |
| B |  | CAM LOCK | 8 |
| C |  | CAM PIN M5 x 24MM | 8 |
| D |  | 8050 SQUARE LEG SCREW M3.5 x 16MM | 4 16 |
| E |  | ALLEN KEY | 1 |
| F |  | GUM | 1 |
| G |  | IRON SHELF SUPPORT | 4 |
| H |  | PVC SOFA LEG SCREW M4 x 45MM | 1 2 |


| ITEM | PHOTO | PART NAME | QTY |
|------|---|------------------------|-----|
| 1 |  | TOP PANEL | 1 |
| 2 |  | BOTTOM PANEL | 1 |
| 3 |  | SIDE PANEL | 2 |
| 4 |  | FRONT SUPPORT PANEL | 2 |
| 5 |  | SHELF PANEL | 1 |

CODING
- 3302171

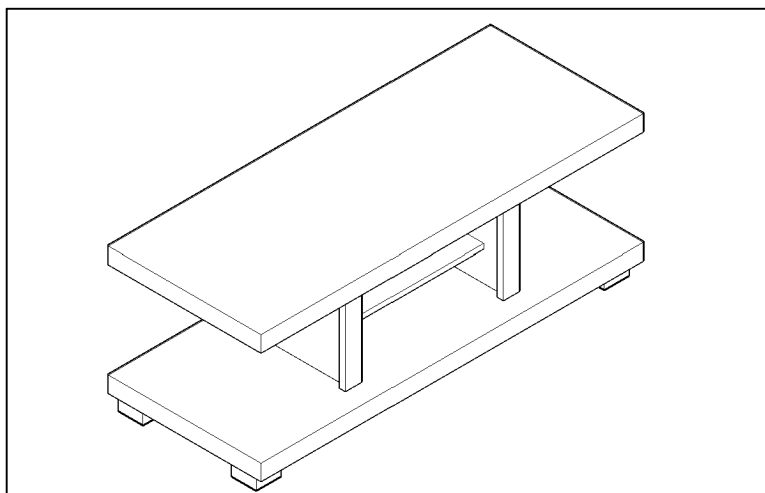

nuhoom.com

1

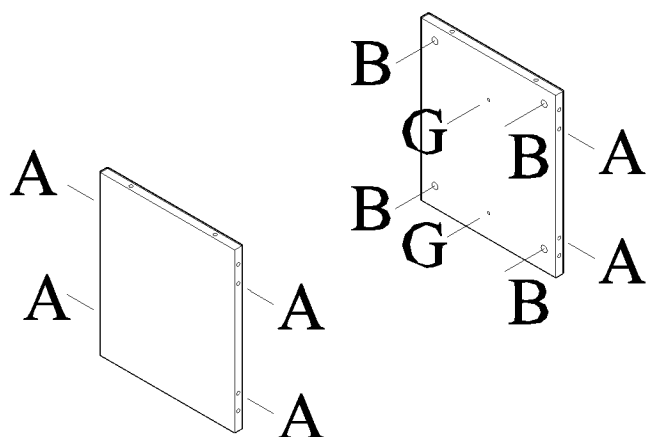


Installation:

As shown, please using the hammer to insert the hardware (A) & (G) into the hole of panel.

3

Installation Panel No. 4:


As shown, insert a few drops of gum into the hole of panel no. 4. Quickly insert the panel to wood dowel from step 2 before it dry.

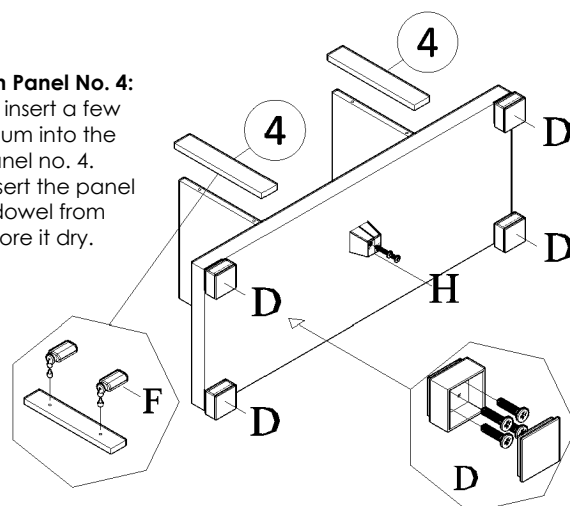

Installation Leg Hardware:

As shown, place hardware (D) & (H) to the bottom panel. Insert the screw using a screwdriver and tighten it.


2

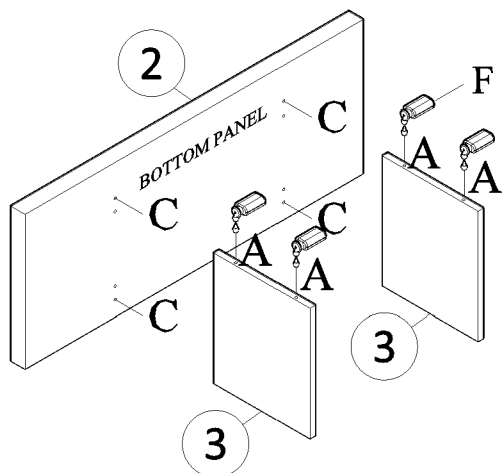

Installation Wood Dowel:

As shown, insert a few drops of gum that been provided into the hole. Quickly insert wood dowel before it dry.


4

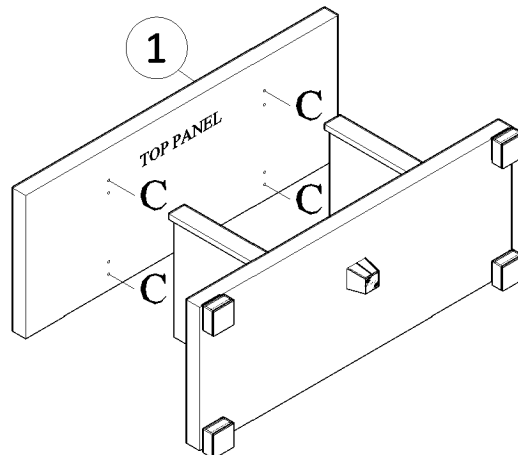

Installation the Panel


Align the Panel: Position the panel so that it aligns with the holes in the panels. Join all panel together.
Secure with Hardware: Use hardware (C), and an allen key to securely fasten the panel.

CODING
- 3302171

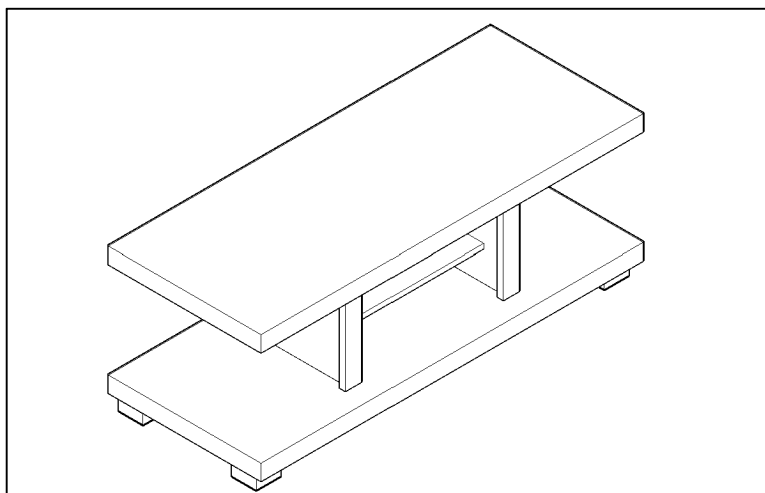

nuhoom.com

5

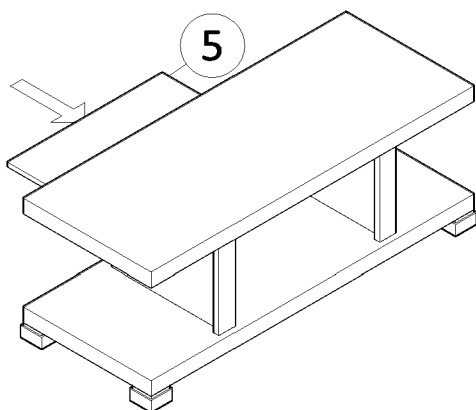

Installalling the Shelf Panel:
Insert Shelf Panel:
Slide the shelf panel (5) into the cabinet.

6

Assembly complete. Please keep this instruction for future reference.

