

CODING

- 335017
- 335016



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		MINIFIX M5 X 29MM	12
(B)		CAM 15/12	12
(C)		DOWEL Ø8 X 30MM	10
(D)		UNITAR SCREW	10
(E)		SOFT CLOSE HINGES 7/8	4 SET
(F)		CSK SCREW 3.1 X 20	8

ITEM	PHOTO	HAREWARE NAME	QTY
(G)		CSK SCREW M3.5 X 15MM	56
(H)		CSK SCREW (4 x 32mm)	4
(I)		METAL LEG	4
(J)		CENTER METAL LEG	1
(K)		BACKPLY STOPPER	8
(L)		M4 ALLEN KEY	1

CODING


- 335017
- 335016



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

ITEM	PARTS NAME	QTY
①	Side Panel	1
②	Side Panel	1
③	Centre Panel	1
④	Centre Panel	1
⑤	Top Panel	1
⑥	Bottom Panel	1
⑦	Fix Panel	1
⑧	Door Panel	1
⑨	Door Panel	1
⑩	Back Panel	1

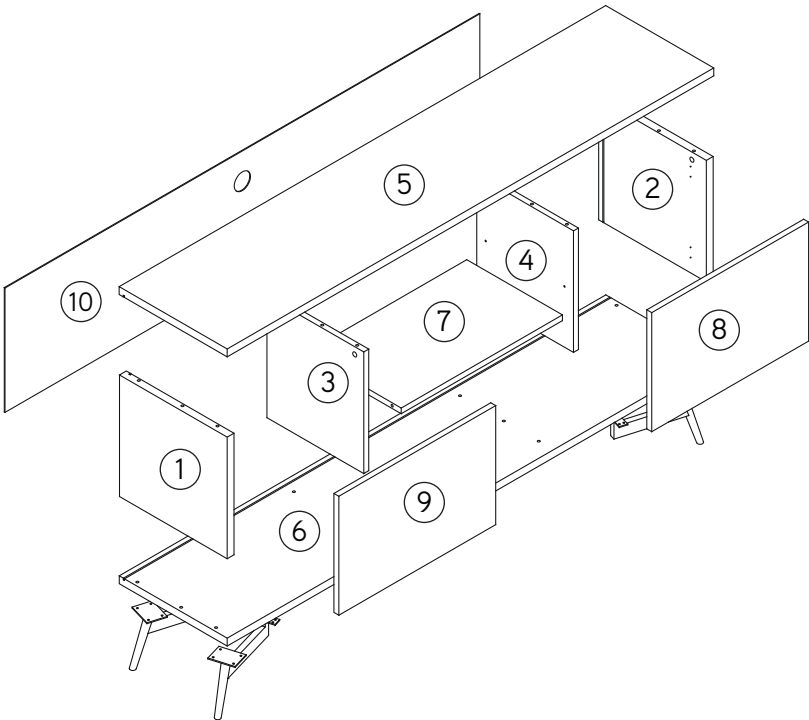

CODING



- 335017
- 335016





ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

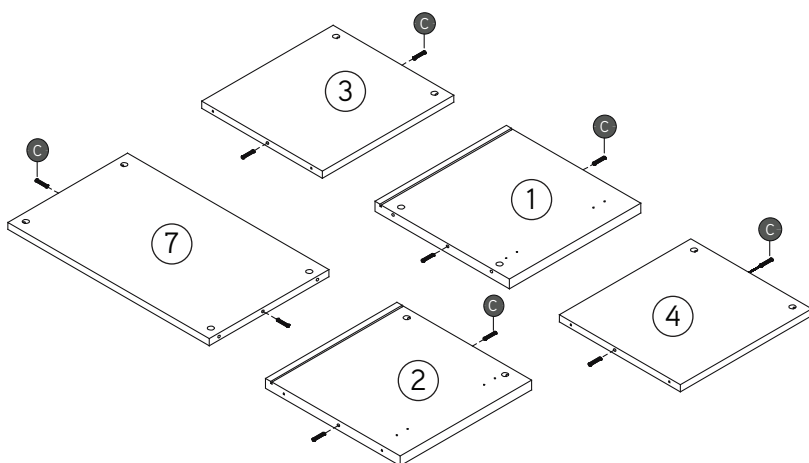



2

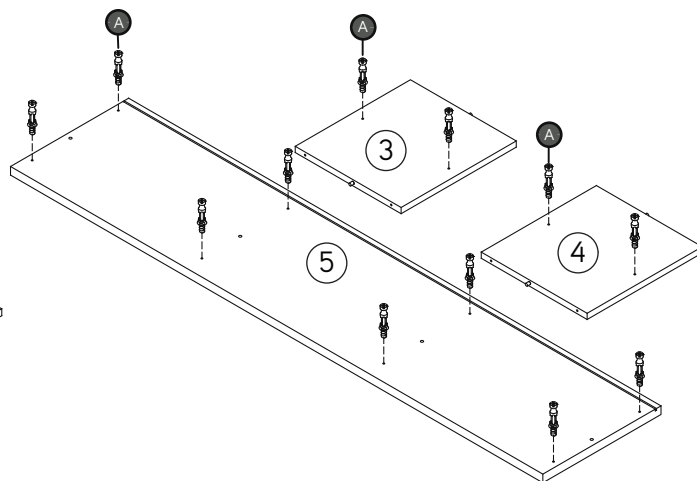

3

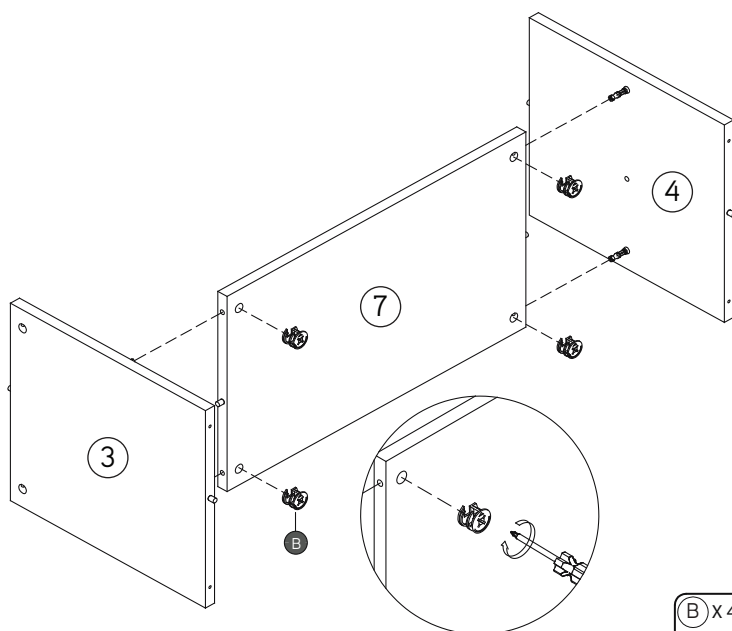

4

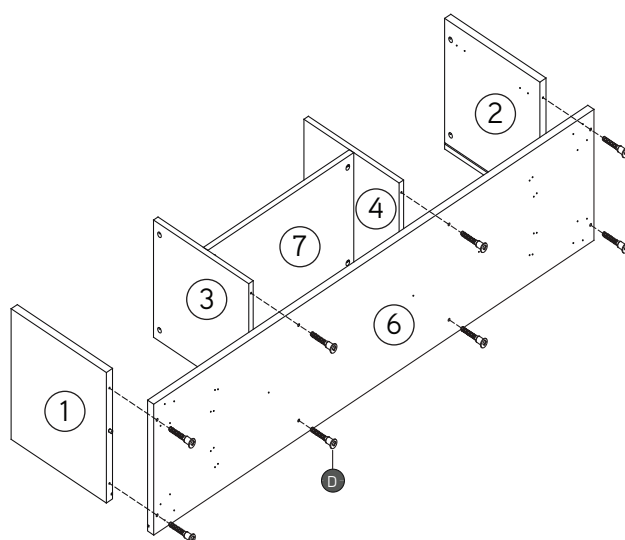

CODING


- 335017
- 335016




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

5

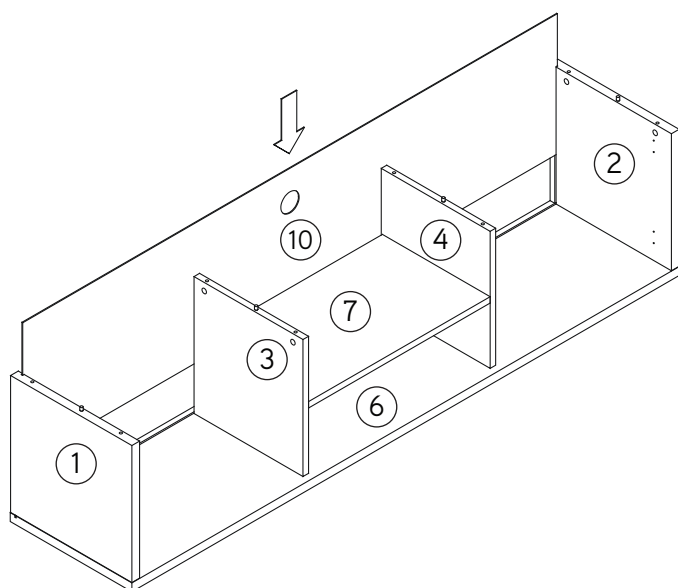


6


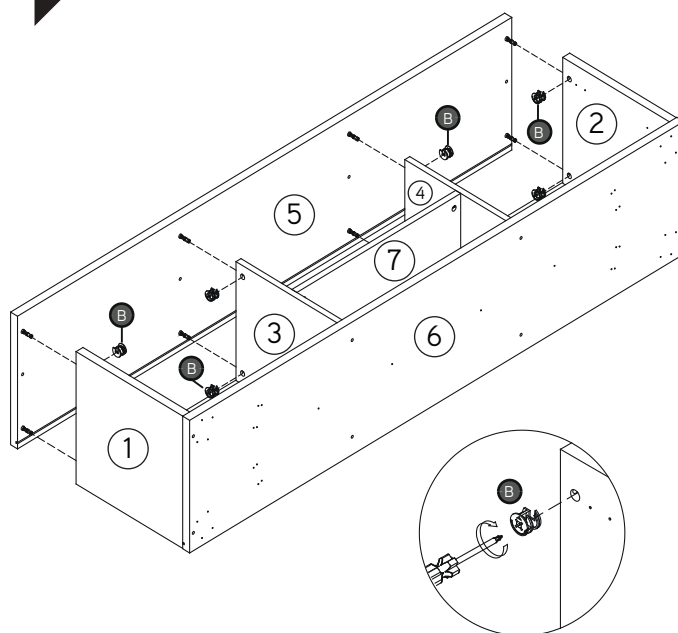


(B) X 8

7

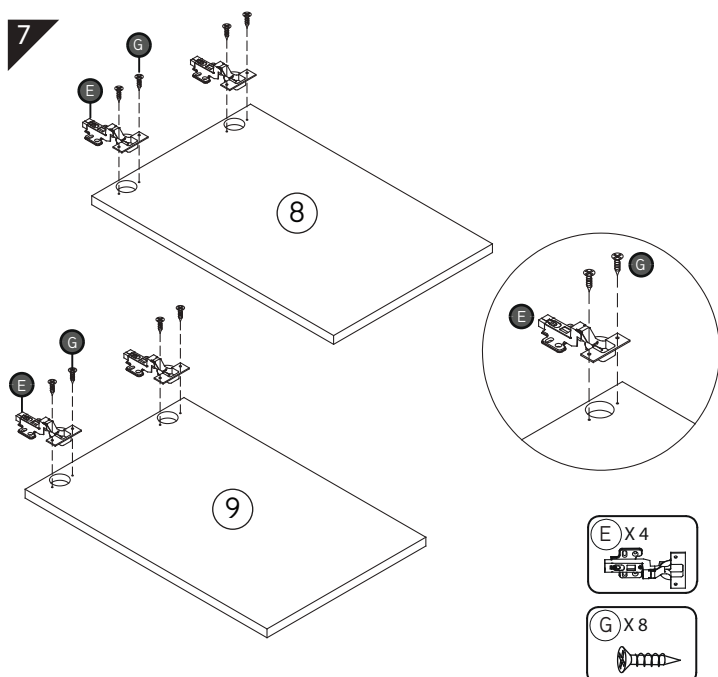

8

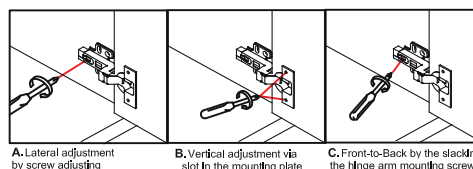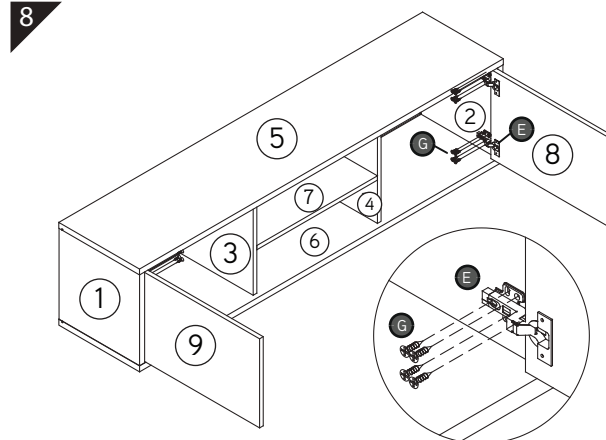

A. Lateral adjustment by screw adjusting
B. Vertical adjustment via slot in the mounting plate
C. Front-to-Back by the slacking the hinge arm mounting screw

(G) X 16

CODING


- 335017
- 335016



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

9

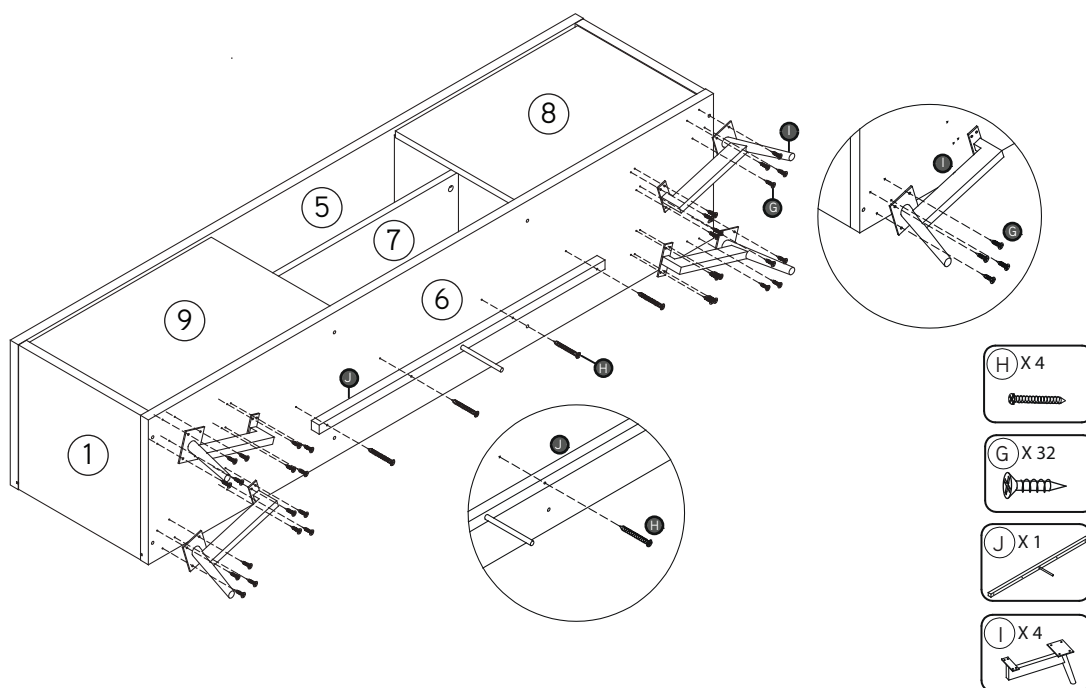

10

