


CODING
- 335049


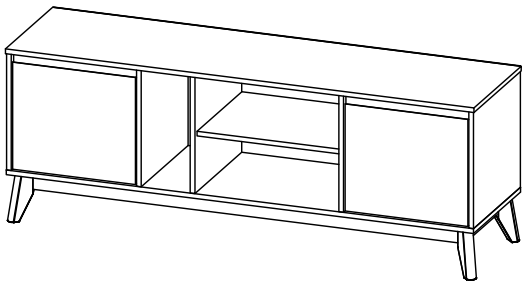


ISO 9001:2015
Reg. No. 00005-1-0001-1-Q000

nuhoom.com


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.


HARDWARE			
A	MINI FIX	A1  A2  A3 	10 SETS
B	M8 X 30MM WOOD DOWEL		28 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		10 PCS
D	5/8 NAIL		31 PCS
E	ALLEN KEY M4		1 PC
F	ONE HOLE L BRACKET (2MM)		4 PCS
G	M3.5 X 16MM C.B SCREW		32 PCS
H	SOFT CLOSING 7/8 HINGES		4 PCS
I	METAL SHELF SUPPORT		4 PCS
J	JCBC Screw M6 x 70		8 PCS
K	SPRING WASHER M6		8 PCS
L	FLAT WASHER M6		8 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	CENTER PANEL	1 PC
8	BONE PANEL	2 PCS
9	SHELF PANEL	1 PC
10	BACK PANEL	1 PC
11	DOOR PANEL (L)	1 PC
12	DOOR PANEL (R)	1 PC
13	LEG	4 PCS

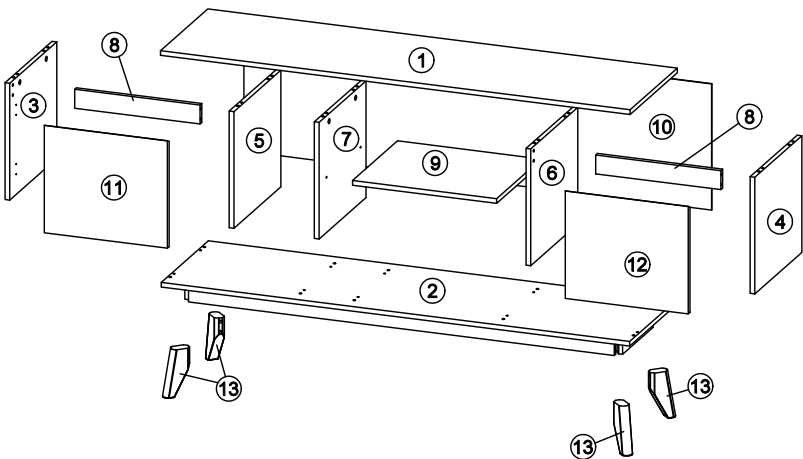

CODING
- 335049

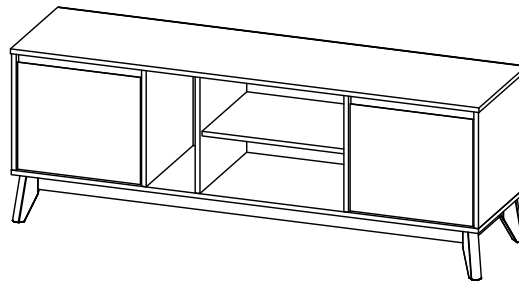


ISO 9001:2015
Reg. No. 00035-1-2017-1-Q008

nuhoom.com


STEP 1

- Insert hardware **A2** onto panel **(1)**.
(Repeat 10 times.)
- Insert hardware **B** into panel **(8)**.
(Repeat 8 times.)
- Assemble hardware **F** to panel **(8)** with hardware **G**.
(Repeat 2 times on each panel.)

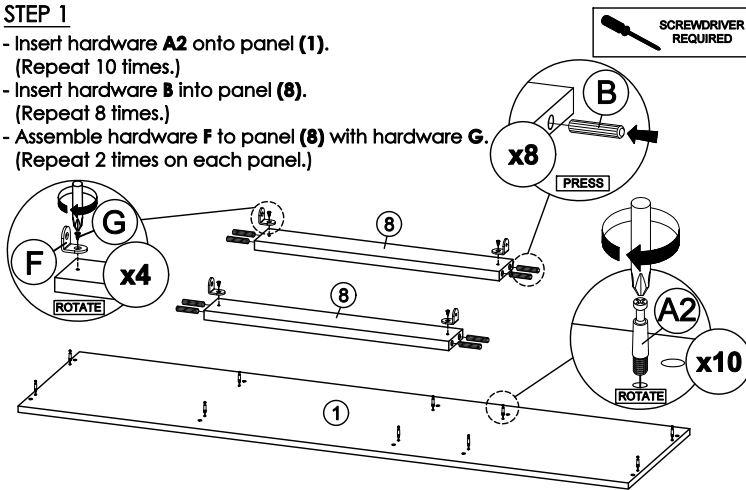


STEP 2

- Insert hardware **B** into panel **(3), (4), (5), (6)** and **(7)**.
(Repeat 20 times.)

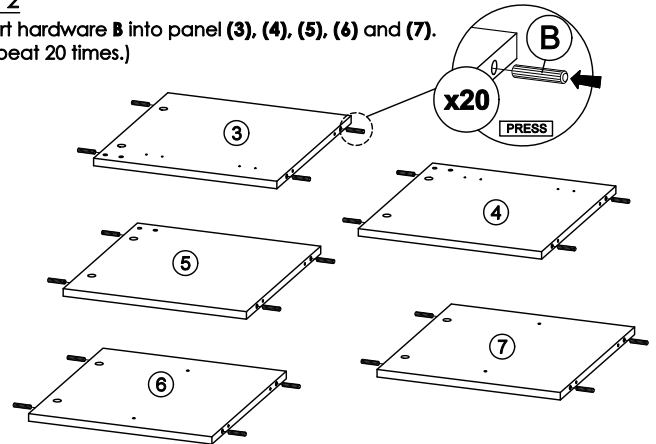


STEP 3

- Attach panel **(8)** to panel **(3)** and **(5)**.
(Repeat 1 times.)
- Attach panel **(8)** to panel **(4)** and **(6)**.
(Repeat 1 times.)

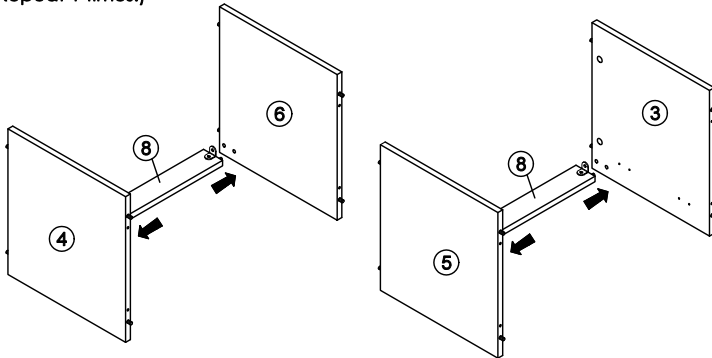


STEP 4

- Insert hardware **A1** into panel **(3), (4), (5), (6)** and **(7)**.
(Repeat 10 times.)
- Attach panel **(3), (4), (5), (6)** and **(7)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 10 times.)

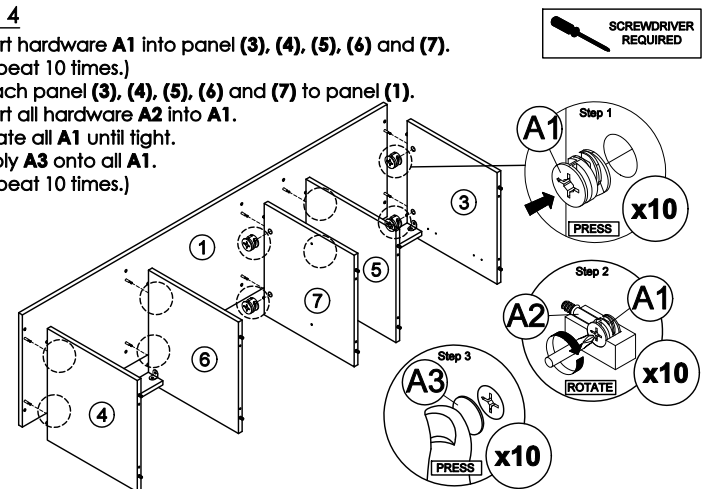


STEP 5

- Assemble hardware **F** on panel **(8)** to panel **(3)** and **(5)** by using hardware **G**.
- Assemble hardware **F** on panel **(8)** to panel **(4)** and **(6)** by using hardware **G**.
(Repeat 1 times on each side panel.)

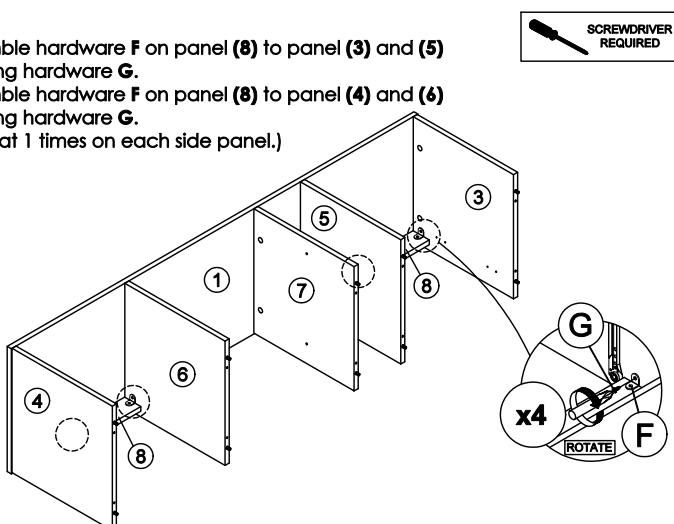


STEP 6

- Connect panel **(2)** to panel **(3), (4), (5), (6)** and **(7)** by using hardware **C** and **E**.
(Repeat 10 times.)

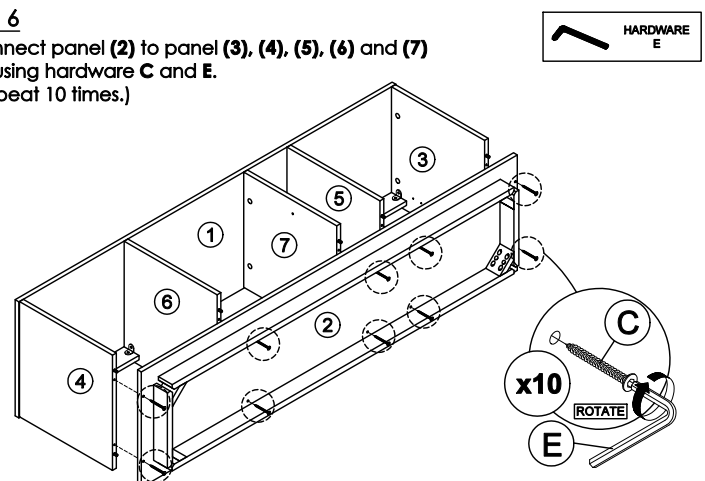

CODING
- 335049

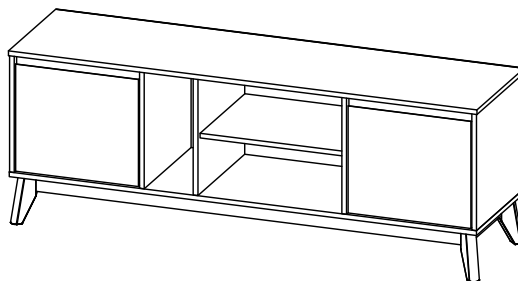


ISO 9001:2015
Reg. No. 000-GS-1-JET-1-Q008

nuhoom.com


STEP 7

- Assemble part 13 into panel (2) by using hardware E, J, K and L. (Repeat 2 times for each Leg.)

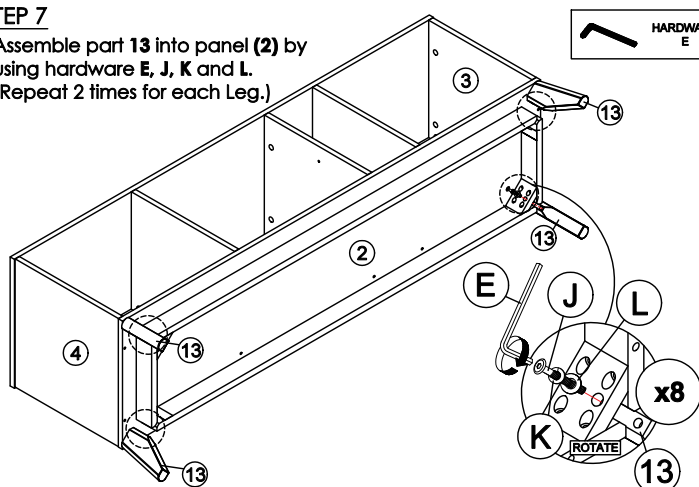


STEP 8

- Assemble panel (10) to entire body with hardware D. (Repeat 31 times.)

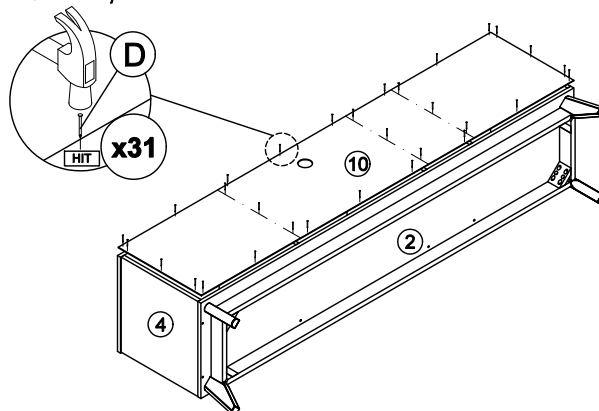


STEP 9

- Insert hardware I into mounting positions on panel (6) and (7) by hand. (Repeat 4 times.)

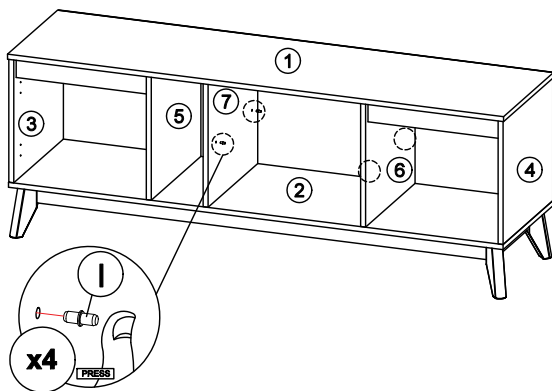


STEP 10

- Insert the panel (9) in between panel (6) and (7). (Repeat 1 times.)

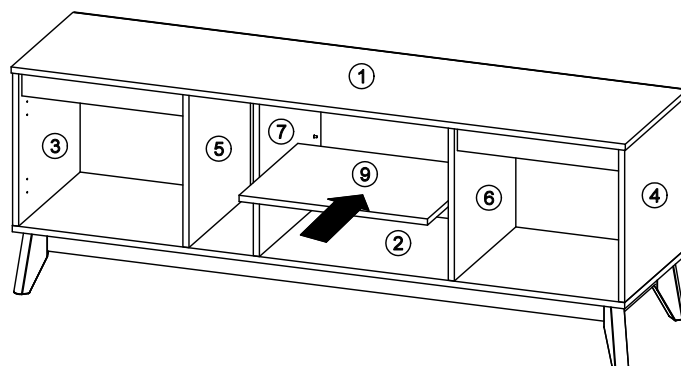

STEP 11

- Fix hardware H onto panel (11) and (12) by using hardware G. (Repeat 2 times for each hardware.)

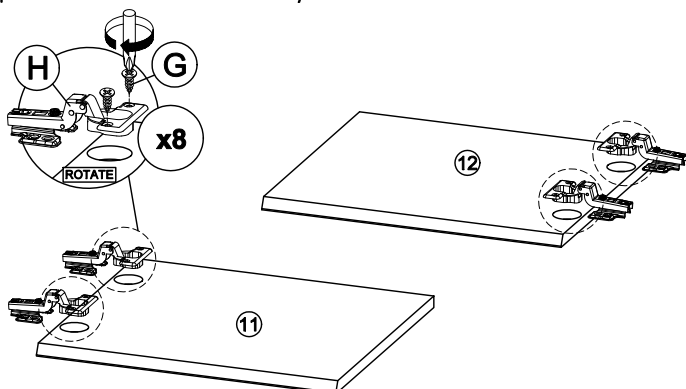

STEP 12

- Fix hardware H to panel (3) and (4) by using hardware G. (Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel (11) and (12). (Do only when needed.)

