


CODING

-335070

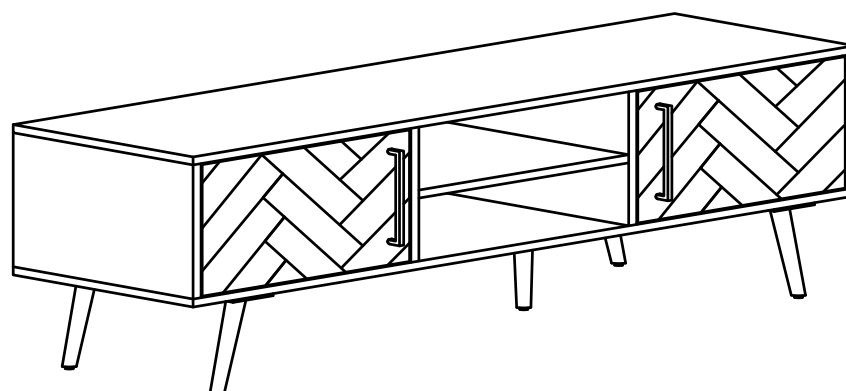

ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS


fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution


KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
(A)	JCBC SCREW M6 X 15MM 	20
(B)	FLAT WASHER 5/16" 	20
(C)	ALLEN KEY 4MM 	1

ITEM	PART LIST	QTY
(1)	BODY 	1
(2)	LEG (L&R) 	4
(3)	CENTER SUPPORT 	1

CODING

-335070

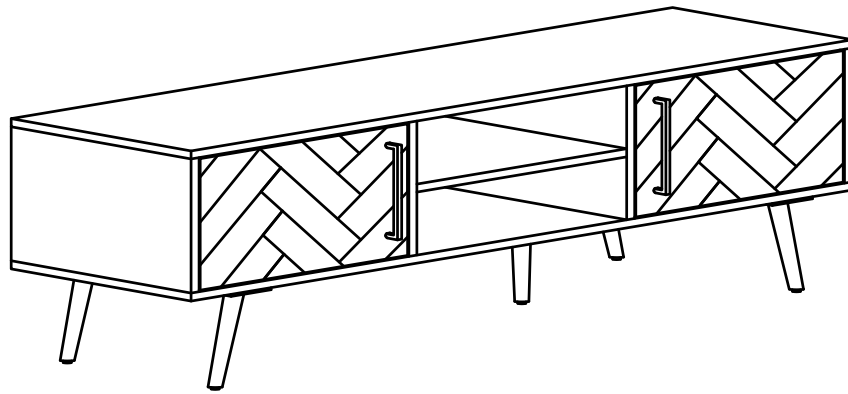

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

1

