

CODING  
- 335072



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

#### CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
①		Minifix Bolt	12
②		Cam 12/15	12
③		Hinges 7/8" (Slow Closed)	4
④		Wood Dowel 6 x 30	10
⑤		Csk Screw 3.5 x 15	43
⑥		Unitar Screw 6.3 x 40	8
⑦		Solidwood Leg (150)	5
⑧		Metal Braket 1.5 x 82 x 82	5
⑨		Aluminium Handle	2
⑩		Backply Stopper	12
⑪		Csk Screw 3.1 x 20	12
⑫		Allen Key M4	1





ITEM	PHOTO	PARTS NAME	QTY
Ⓐ		Side Panel Left	1
Ⓑ		Side Panel Right	1
Ⓒ		Top Panel	1
Ⓓ		Bottom Panel	1
Ⓔ		Center Left Panel	1
Ⓕ		Center Right Panel	1
Ⓖ		Shelf Panel	1
Ⓗ		Door Panel Left	1
Ⓘ		Door Panel Right	1
Ⓨ		Backply Panel	1

CODING  
- 335072



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

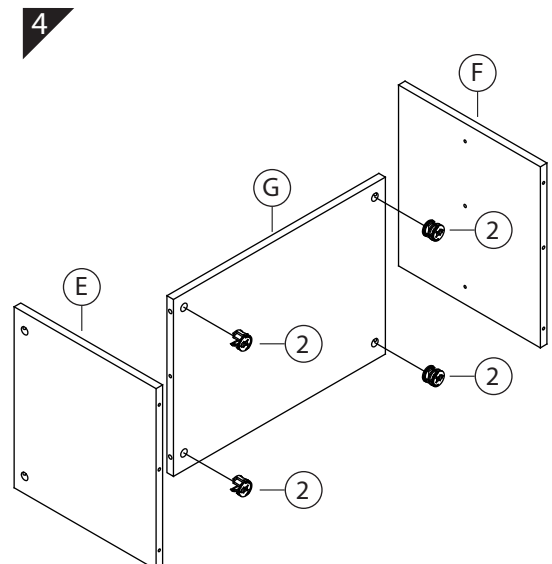
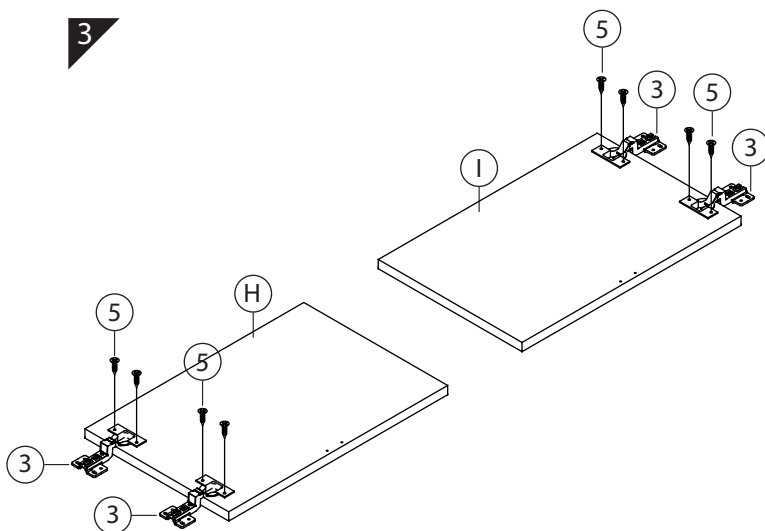
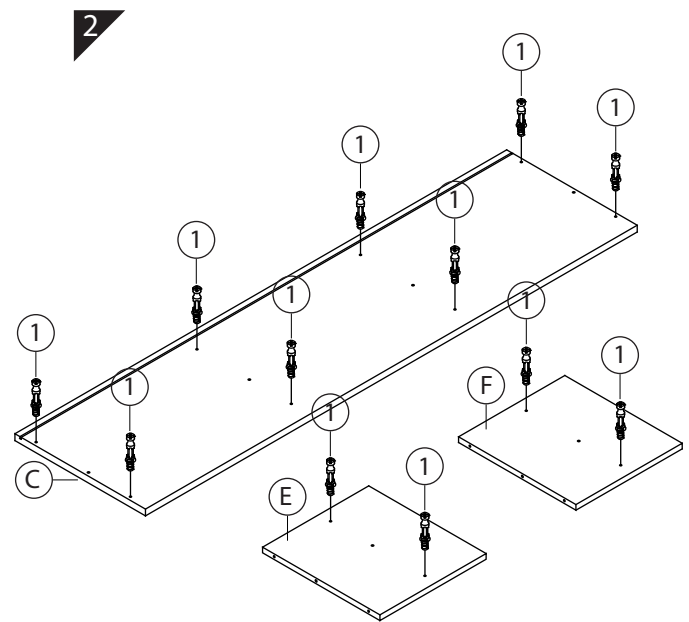
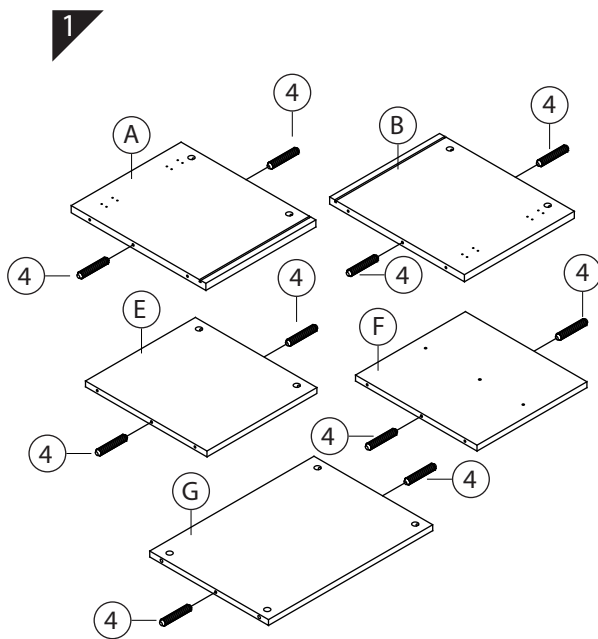


CODING  
- 335072



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

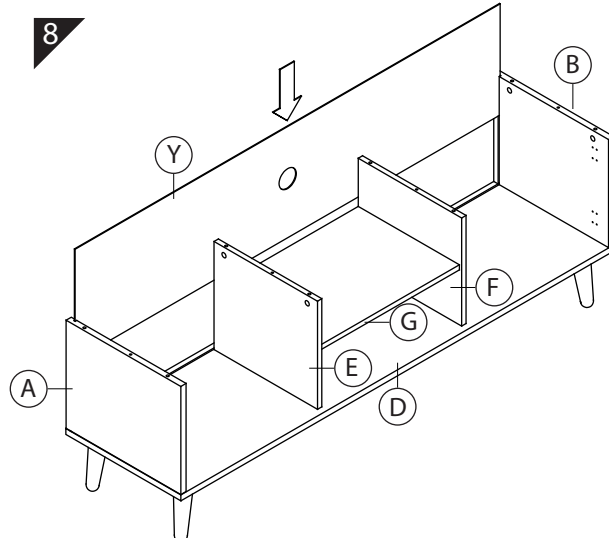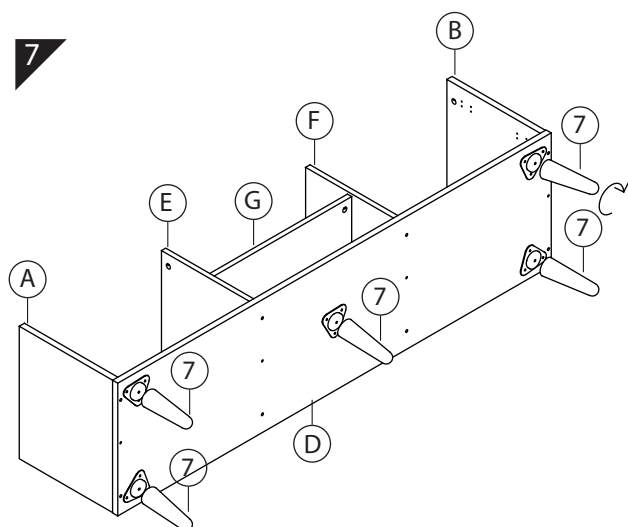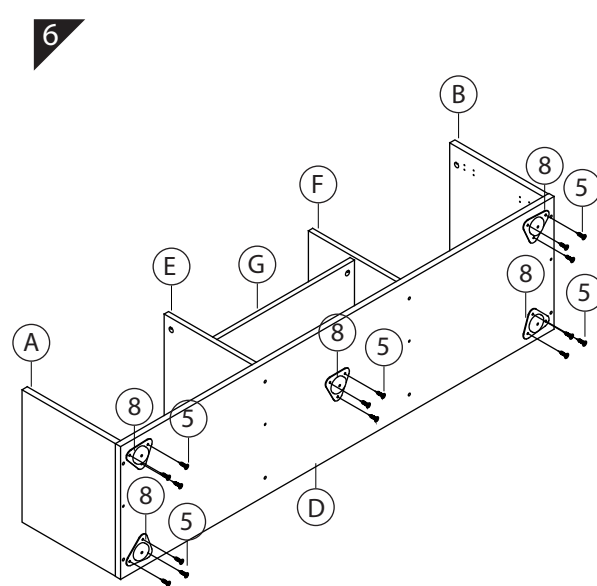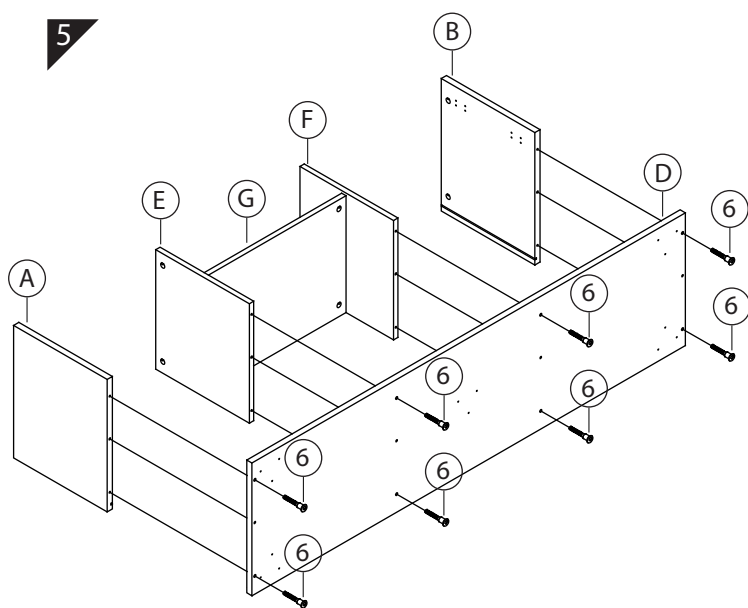


CODING  
- 335072




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


9

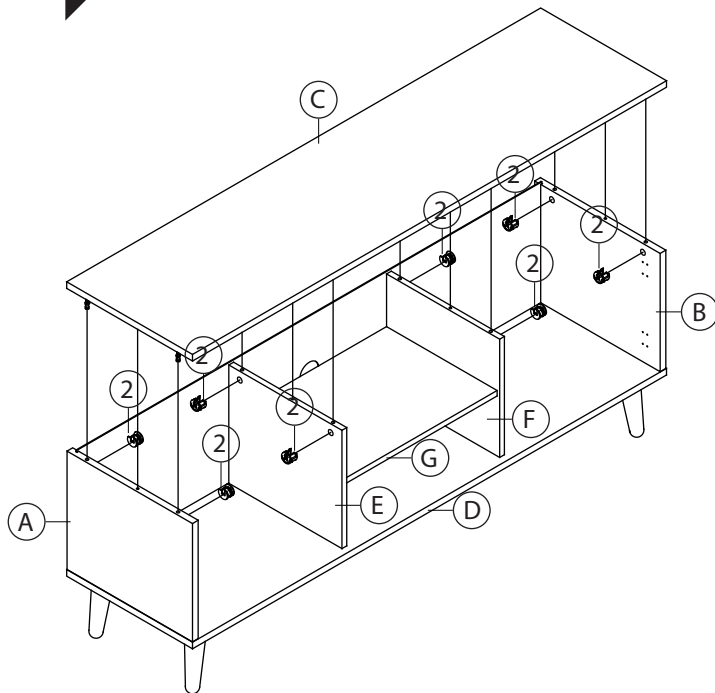


10

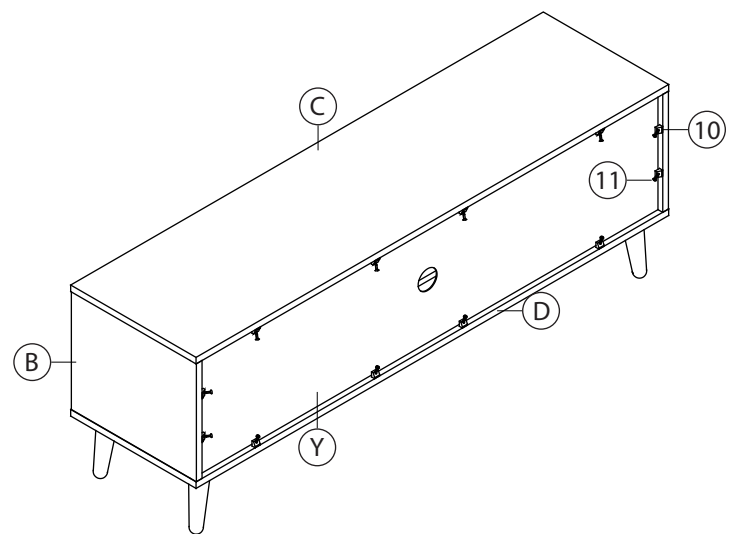

11

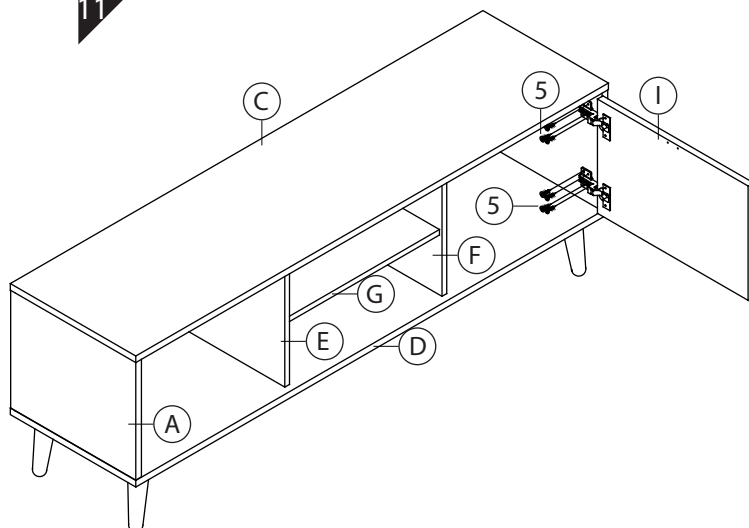

12

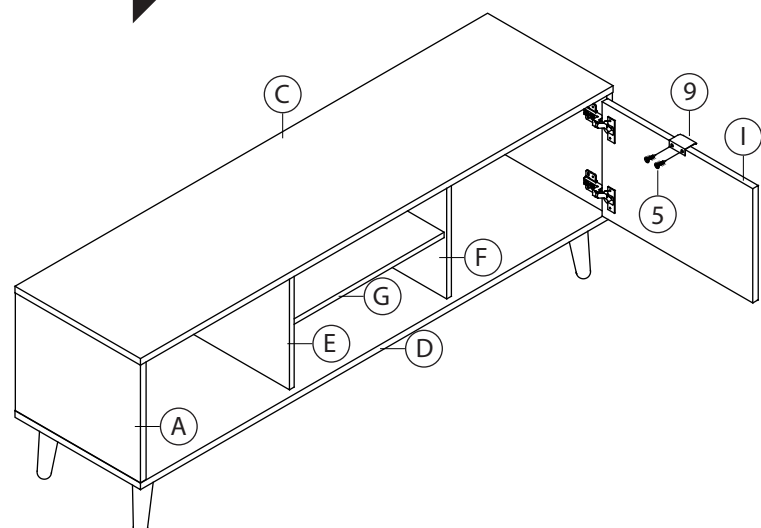


CODING  
- 335072




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

13

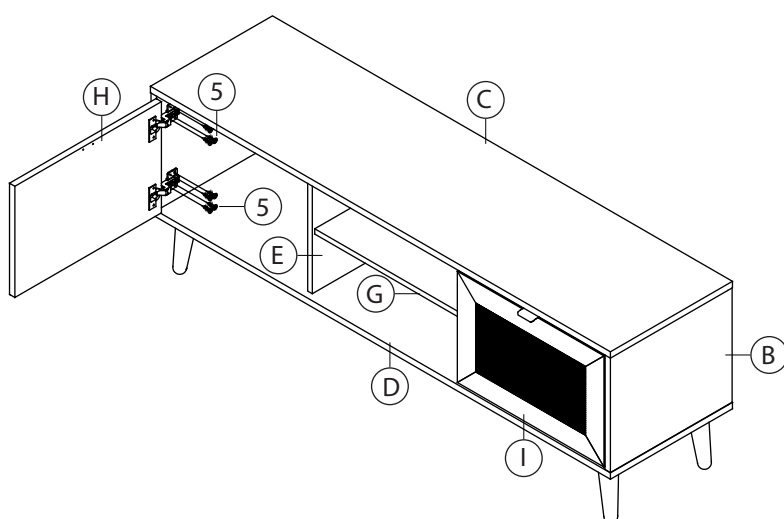

14

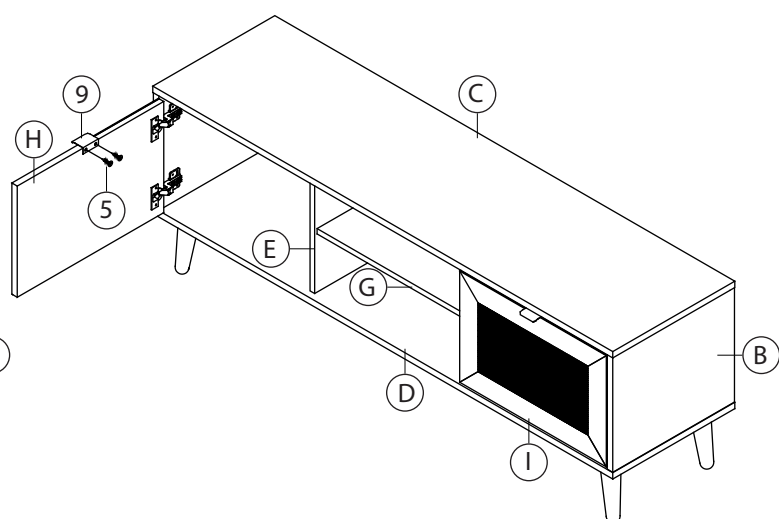

15

