


CODING
- 335089

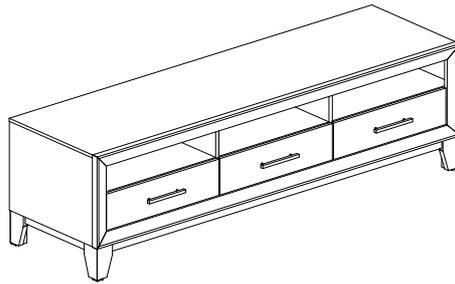



ISO 9001:2015
Reg. No. 80905-1-2017-1-Q002

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC BOLT 1/4" x 1 9/16"	4
(B)		SPRING WASHER 1/4" x 1/2"	4
(C)		FLAT WASHER 1/4" x 3/4"	4
(D)		WOOD DOWEL 5/16" x 1 3/16"	4
(E)		ALLEN KEY 1/4" x 2 3/8"	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		Bravon 1.65M TV CABINET 191	1
(2)		Leg	4
(3)		Center Support Leg	2

CODING
- 335089

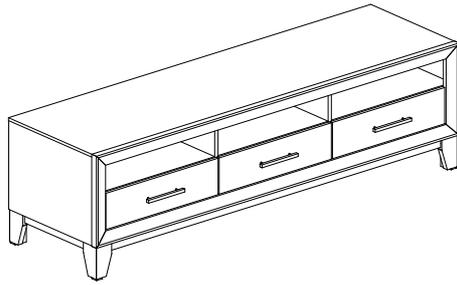

ISO 9001:2015
Reg. No. 2012/11771-02

nuhoom.com

