


CODING

-336079

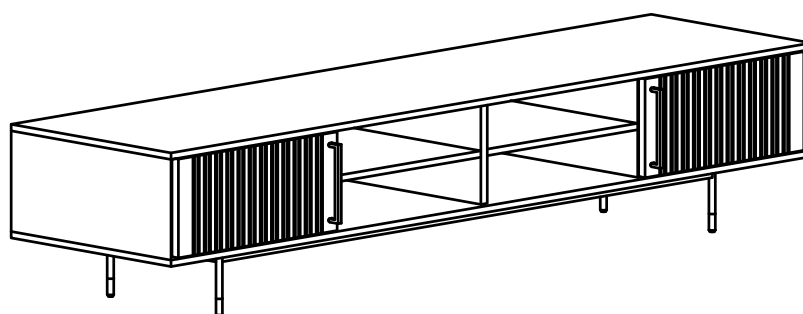

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS



fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution


KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
(A)	JCBC SCREW M8 X 20MM 	8
(B)	JCBC SCREW M6 X 15MM 	4
(C)	JCBC SCREW M6 X 25MM 	4
(D)	SPRING WASHER 5/16" 	12
(E)	FLAT WASHER 5/16" 	12
(F)	ALLEN KEY 4MM 	1
(G)	ALLEN KEY 5MM 	1

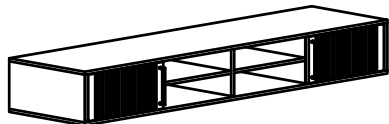ITEM	PART LIST	QTY
(1)	BODY 	1
(2)	LEG 	2
(3)	HANDLE 	2
(4)	SUPPORT LEG 	1

CODING

-336079

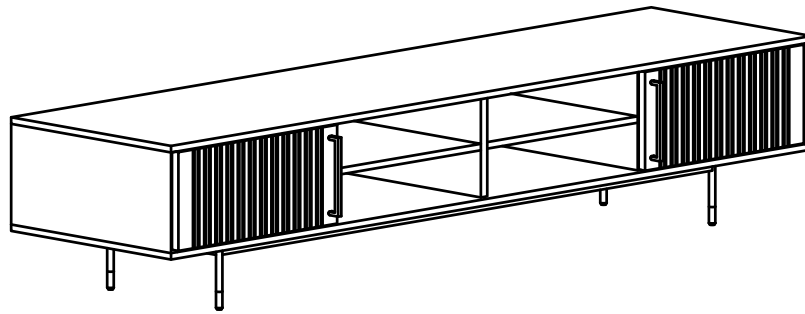

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

