

CODING

-336087



ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS


fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution

KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
(A)	JCBC SCREW M6 X 35MM 	8
(B)	JCBC SCREW M6 X 15MM 	2
(C)	SPRING WASHER 5/16" 	8
(D)	FLAT WASHER 5/16" 	10
(E)	ALLEN KEY M5 	1
(F)	SCREW M3.5 X 22MM 	6

ITEM	PART LIST	QTY
(1)	BODY 	1
(2)	LEG (L&R) 	4
(3)	CENTER SUPPORT 	1
(4)	HANDLE 	3

CODING


-336087




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

1

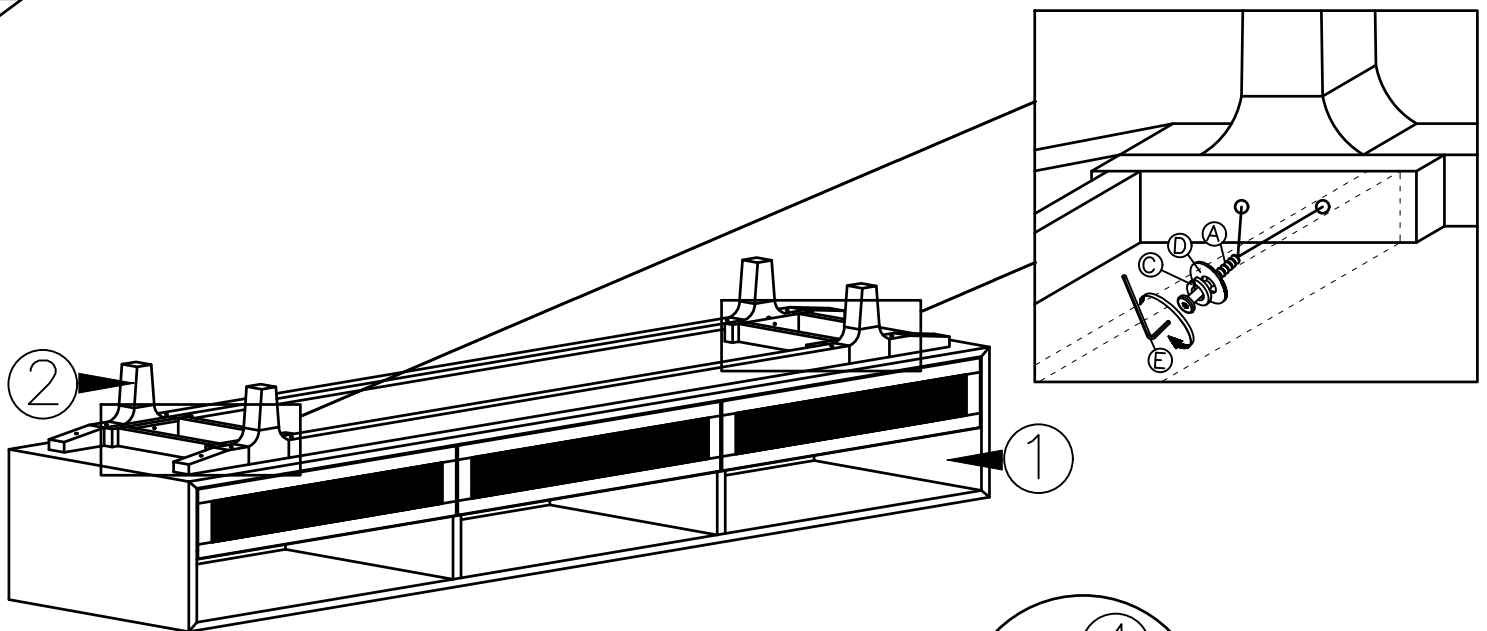

2

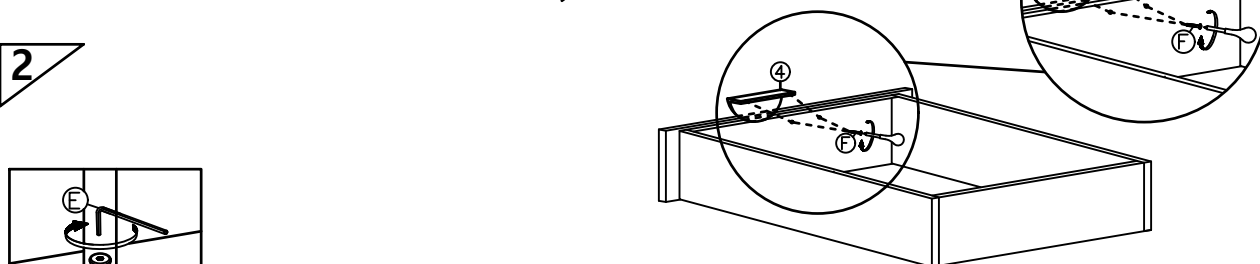

3

