


CODING

-336097

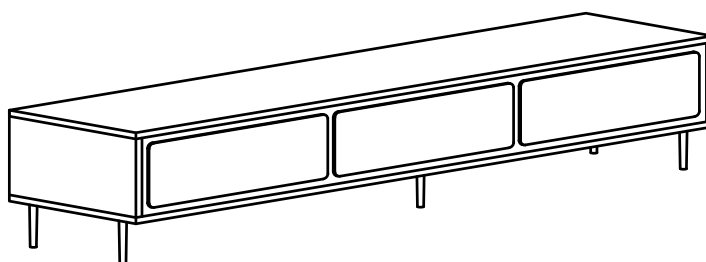

ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS


nestnordic.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubberma to prevent from scratches .

Caution


KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 20MM 	14
Ⓑ	SPRING WASHER 5/16" 	14
Ⓒ	FLAT WASHER 5/16" 	14
Ⓓ	ALLEN KEY M5 	1

ITEM	PART LIST	QTY
①	BODY 	1
②	METAL LEG 	2
③	SUPPORT LEG 	1

CODING

-336097

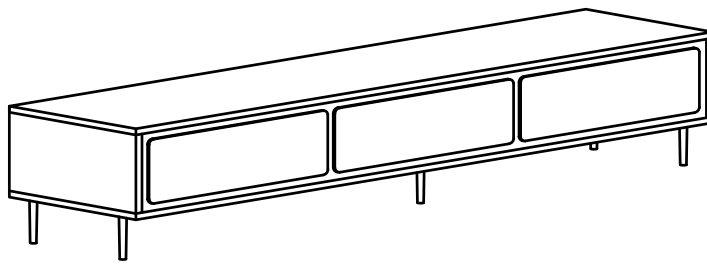

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nestnordic.com

1

