


CODING  
- 336098

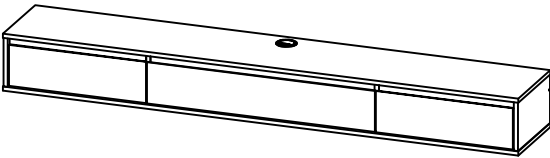





ISO 9001:2015  
Reg. No. 000435-1-001-1-QMS



nuhoom.com


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION  
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


PART LIST		QTY
1	BODY	1 PC
2	WALL SUPPORT	2 PCS

HARDWARE			
A	M3.5 X 16MM C.B SCREW		4 SETS
B	S125 - DOUBLE HOLE FITTING		2 PCS
C	WALL PLUG ( 8 x 3" )	C1  C2 	8 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

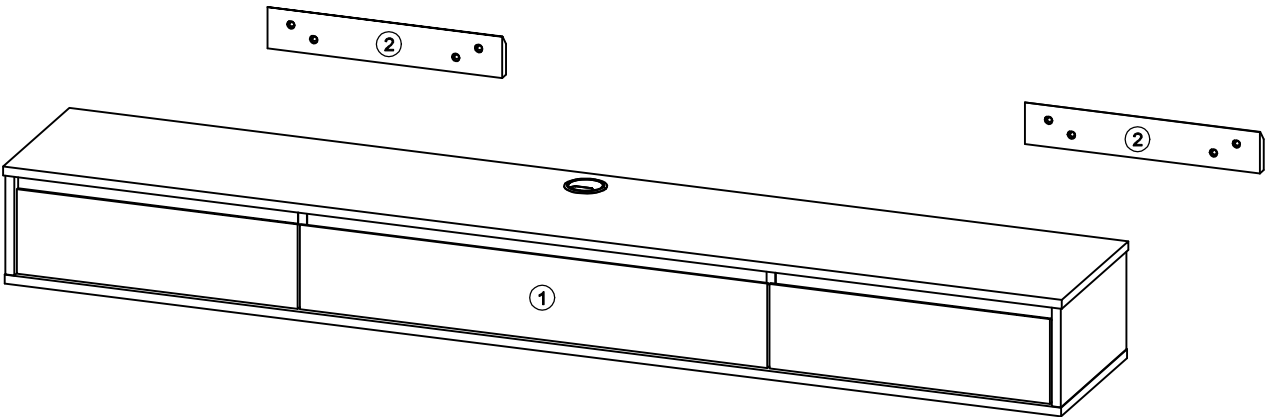

**CODING**  
- 336098

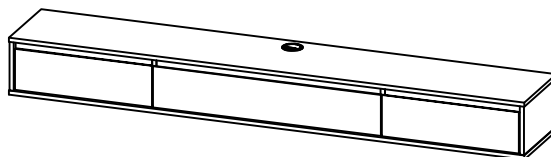


**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

**nuhoom.com**


## STEP 1

- Mark and use the power drill to drill a hole on the wall.

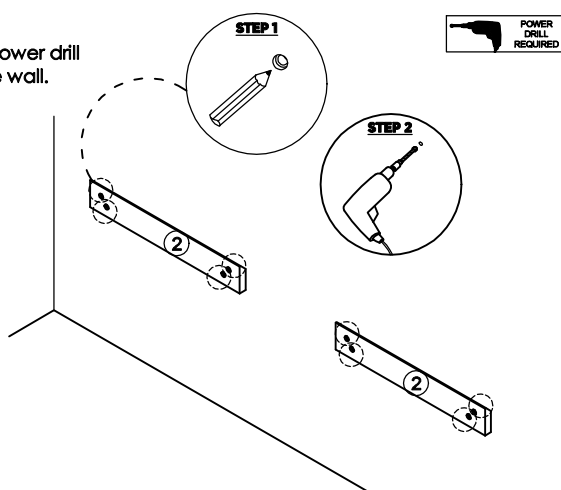


## STEP 2

- Hit hardware **C2** into the wall. (Repeat 8 times.)
- Assemble parts **(2)** to the wall by using hardware **C1**. (Repeat 8 times.)

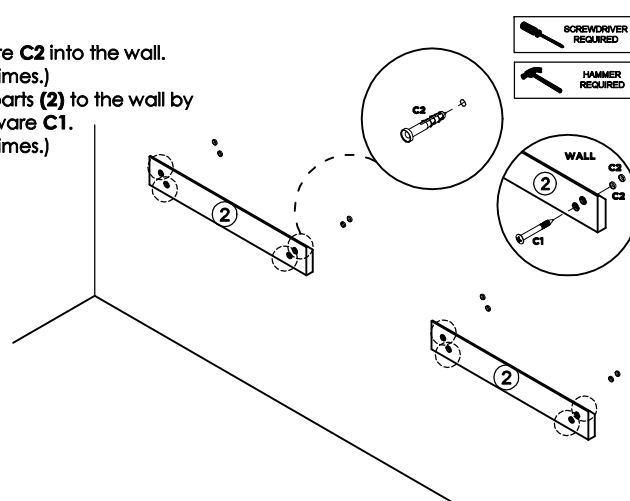


## STEP 3

- Attach entire body to part **(2)**.

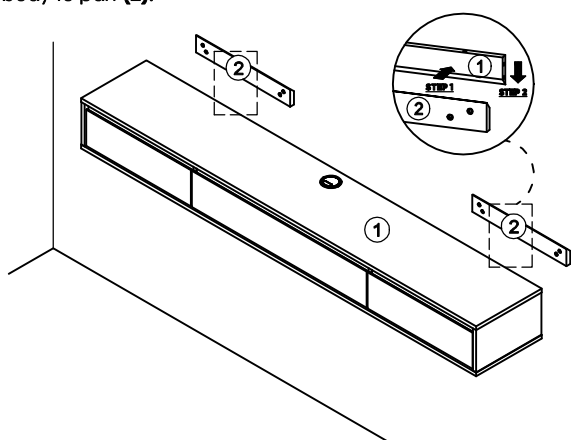


## STEP 4

- Remove drawer from the cabinet.

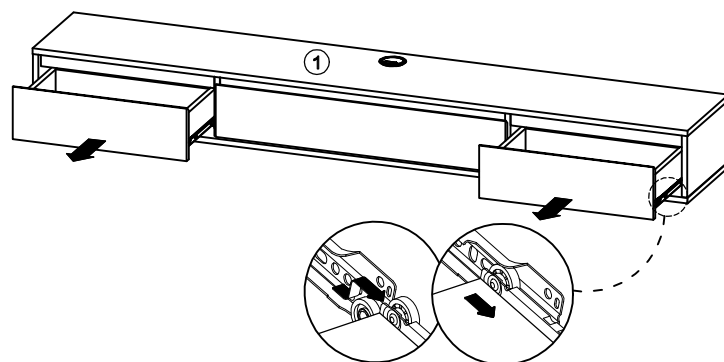

## STEP 5

- Fix hardware **B** to parts **(1)** and **(2)** using screws **A**. (Repeat 4 times.)

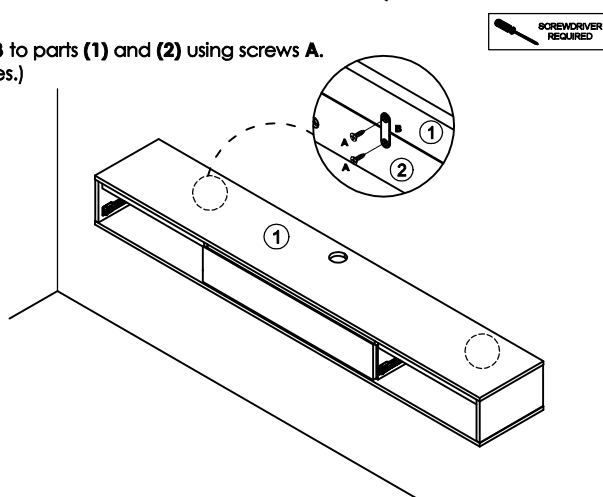

## STEP 6

- Put all the drawer in place along the drawer slides.

