


CODING
- 336102

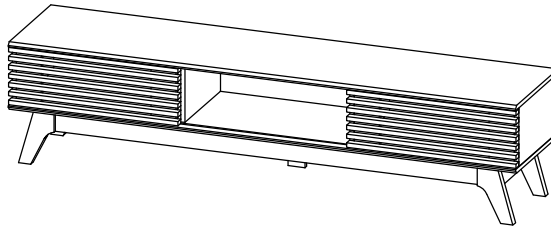













ISO 9001:2015
Reg. No. 000435-1-001-1-QMS



nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE			
A	MINI FIX	A1  A2  A3 	12 SETS
B	M8 X 30MM WOOD DOWEL		26 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		8 PCS
D	ALLEN KEY M4		1 PC
E	M3 X 12MM C.B SCREW		16 PCS
F	M4 X 65MM C.B SCREW		16 PCS
G	5/8 PVC NAIL LEG		5 PCS
H	U 480 ROLLER	H1  H2 	4 PCS
I	M4 X 30MM C.B SCREW		2 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.

 SCREWDRIVER	 HAMMER
---	--


PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	BACK PANEL	1 PC
8	DOOR	2 PCS
9	APRON	2 PCS
10	LEG - FRONT	1 PC
11	LEG - BACK	1 PC
12	LEG - CENTER	1 PC

CODING
- 336102

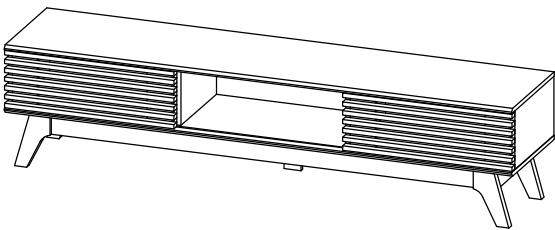


ISO 9001:2015
Reg. No. 000435-1-001-1-QMS

nuhoom.com

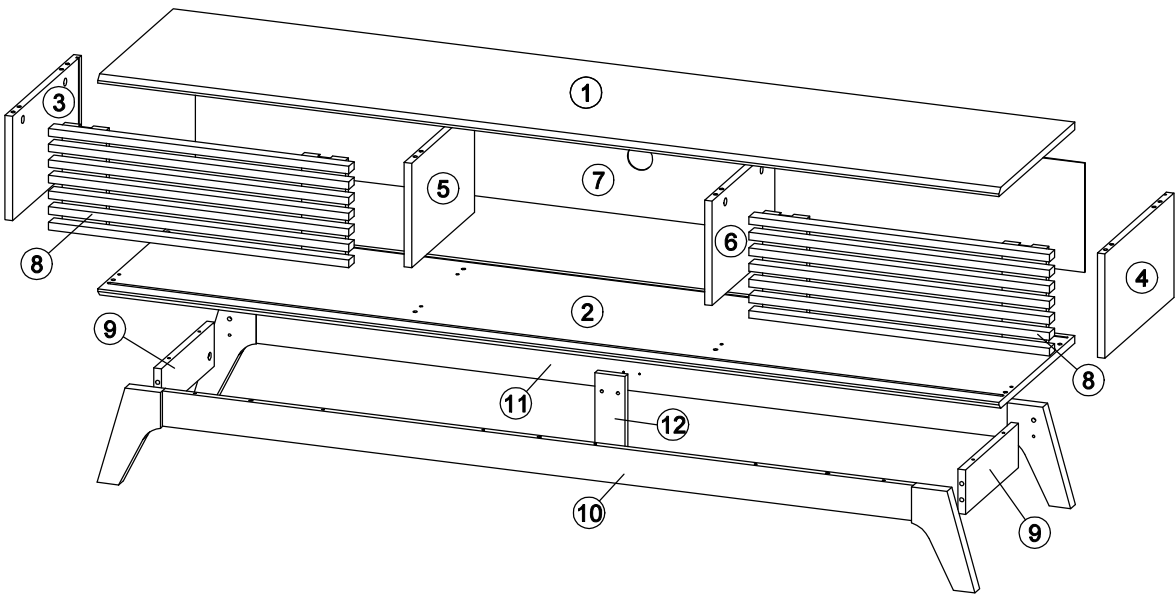

CODING
- 336102

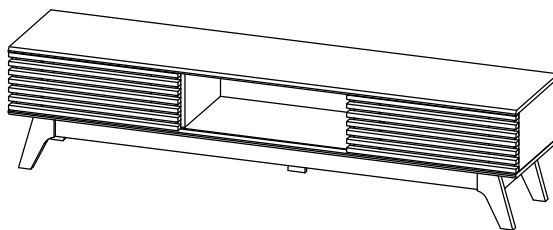


ISO 9001:2015
Reg. No. 000435-1-001-1-QMS

nuhoom.com

STEP 1


- Insert hardware **A1** onto panel (3) ,(4) ,(5) and (6).
(Repeat 8 times.)
- Insert hardware **A2** onto panel (1).
(Repeat 8 times.)
- Insert hardware **B** onto panel (3) ,(4),(5) and (6).
(Repeat 16 times.)

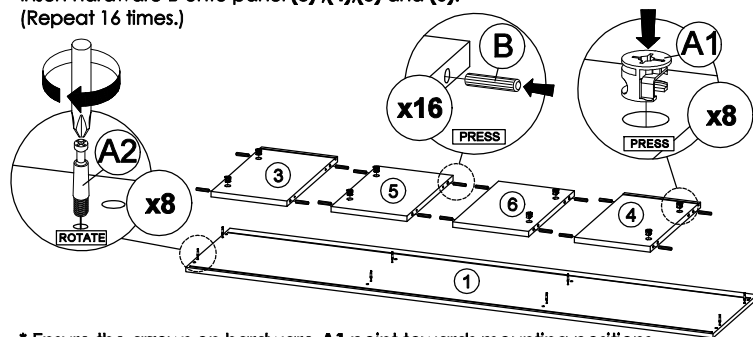

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 2


- Insert hardware **A1** onto panel (9).
(Repeat 4 times.)
- Insert hardware **A2** onto panel (10).
(Repeat 4 times.)
- Insert hardware **B** onto panel (9), (10) and (11).
(Repeat 10 times.)

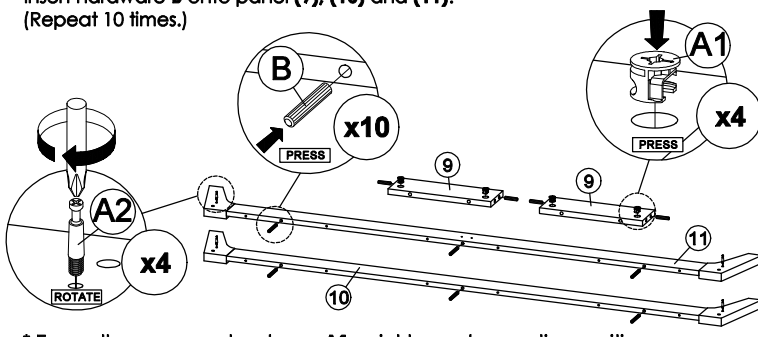

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3

- Connect panel (2) to panel (3) ,(4) ,(5) and (6) by using hardware **C** and **D**.
(Repeat 8 times.)

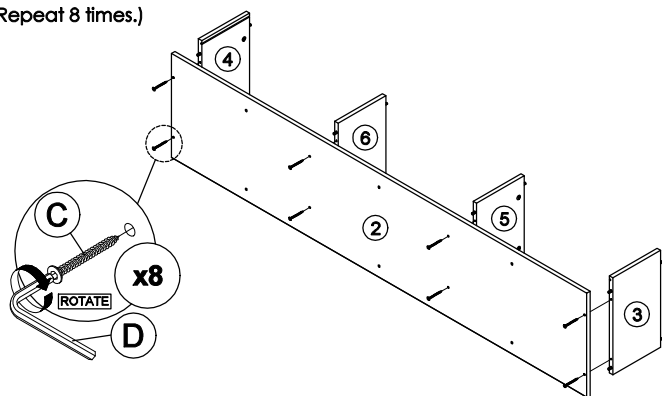


* In this step hardware **A1** and **B** are pre-inserted.

STEP 5

- Attach panel (3) ,(4) ,(5) and (6) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)




OR

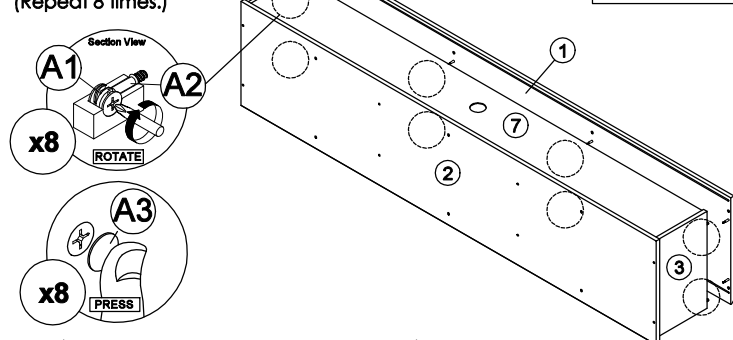

* In this step hardware **A1** ,**A2** and **B** are pre-inserted.

STEP 4

- Insert the panel (7) along the slot.
(Repeat 1 times.)

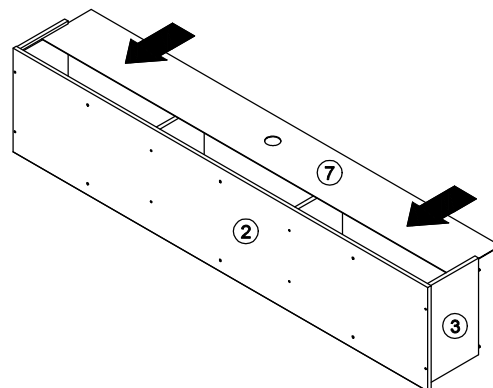


* In this step hardware **A1** and **B** are pre-inserted.

STEP 6

- Attach leg (9) to leg (10) and (11).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)




OR

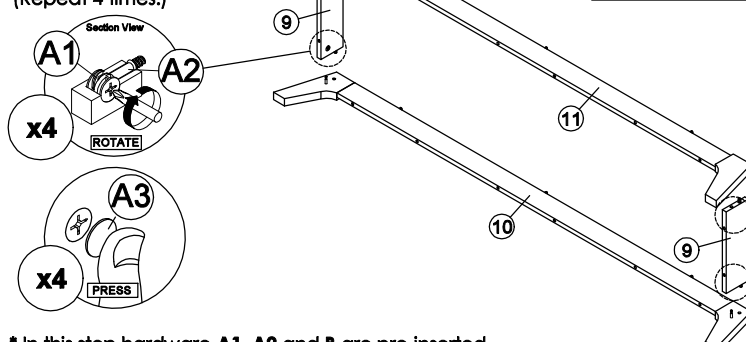

* In this step hardware **A1** ,**A2** and **B** are pre-inserted.

CODING
- 336102

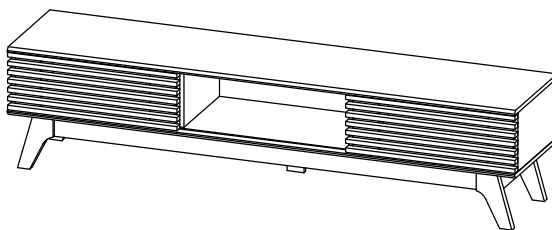


ISO 9001:2015
Reg. No. 000435-1-001-1-QMS

nuhoom.com

STEP 7


- Connect leg (9), (10) and (11) to panel (2) by using hardware F. (Repeat 16 times.)

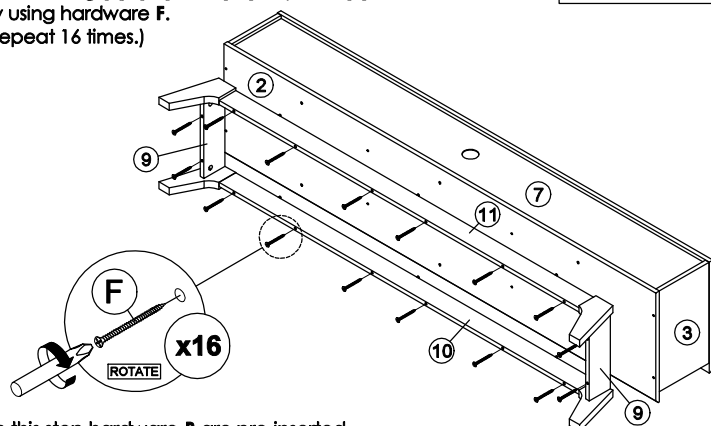

* In this step hardware B are pre-inserted.


STEP 9

- Connect panel (12) to panel (11) by using hardware I. (Repeat 2 times.)
- Hit hardware G into bottom of panel (12). (Repeat 1 times.)

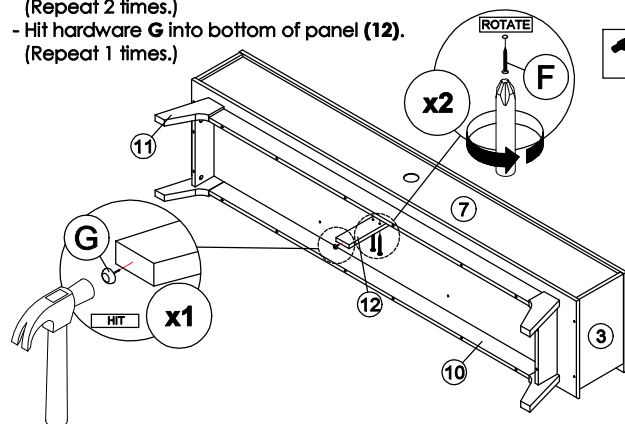


STEP 8

- Hit hardware G into bottom of panel (10) and (11). (Repeat 4 times.)

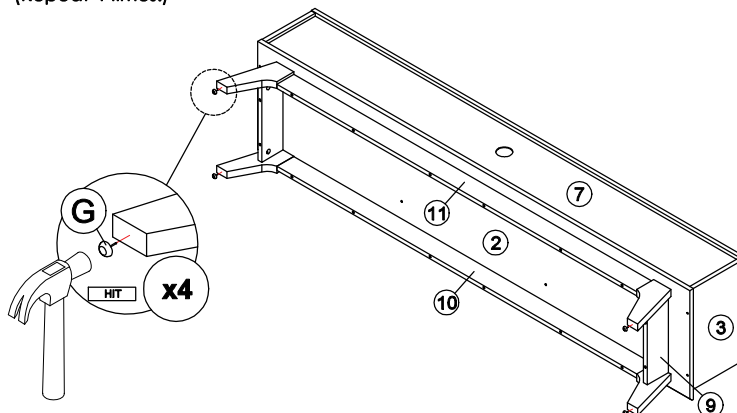

STEP 10

- Assemble hardware H1/H2 to two panel (8) with hardware E. (Repeat 2 times for each hardware.)

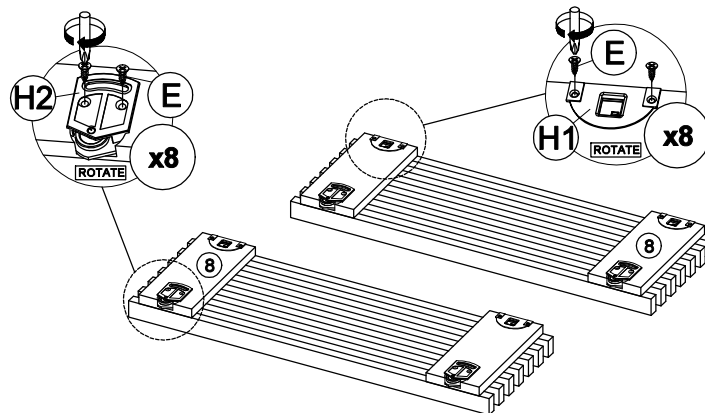

STEP 11

- Put the panel (8) in place. (Repeat 2 times.)

