


CODING  
- 336105


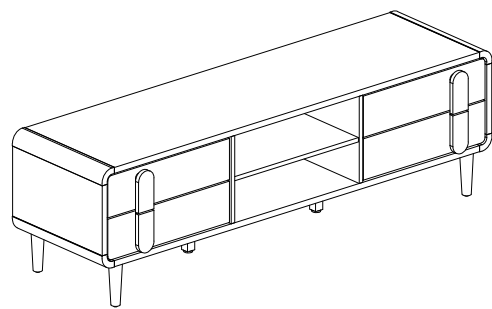



ISO 9001:2015  
Reg. No. 000405-1-2017-1-QMS


nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION  
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	PARTS NAME	QTY
①		Lome 1.65M TV Cabinet 102/173	1
②		Leg	4
③		Center Support Leg	2



**CODING**  
- 336105

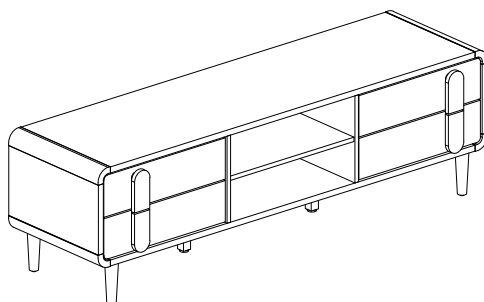

ISO 9001:2015  
Reg. No. 10000000000000000000

**nuhoom.com**

1

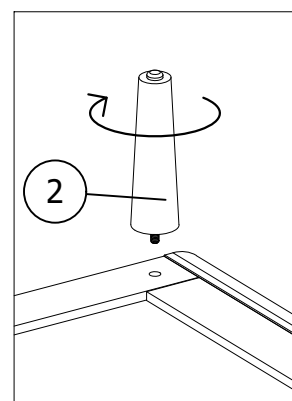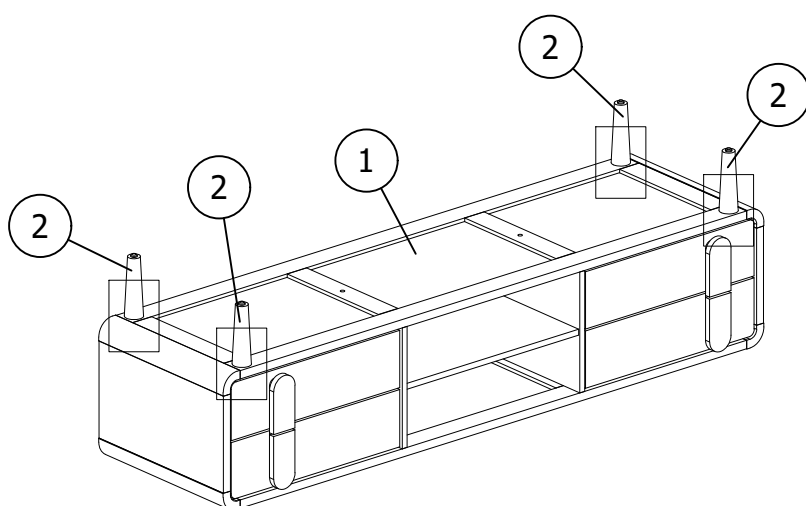

2

