


**CODING**  
-336107  
-336108

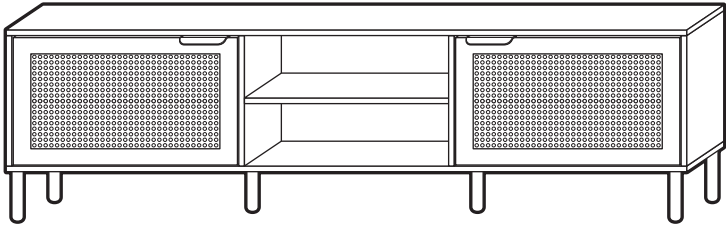












ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST		QTY
A		M4 x 45mm Chipboard Screw	8
B		M3.5 x 16mm Chipboard Screw	44
C		Wood Dowel 6 x 25mm	28
D		Minifix Pin	8
E		Minifix Carn	8
F		Leg	6
G		Handle	2
H		Hinges Pump	4

ITEM	PART LIST		QTY
1	Top Panel		1
2	Bottom Panel		1
3	Lelf Panel		1
4	Right Panel		1
5	Centre Panel		2
6	Shelf Panel (590mm)		1
7	Shelf Panel (572mm)		2
8	Back Panel (597mm)		1
9	Back Panel (579mm)		2
10	Door Panel		2


CODING  
-336107  
-336108

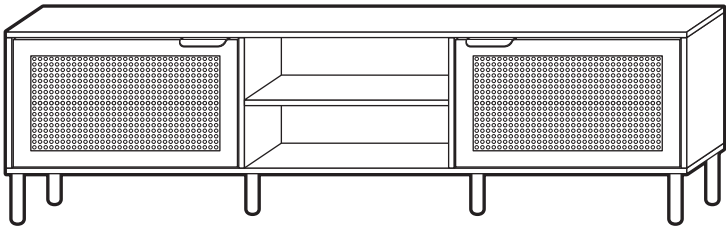


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

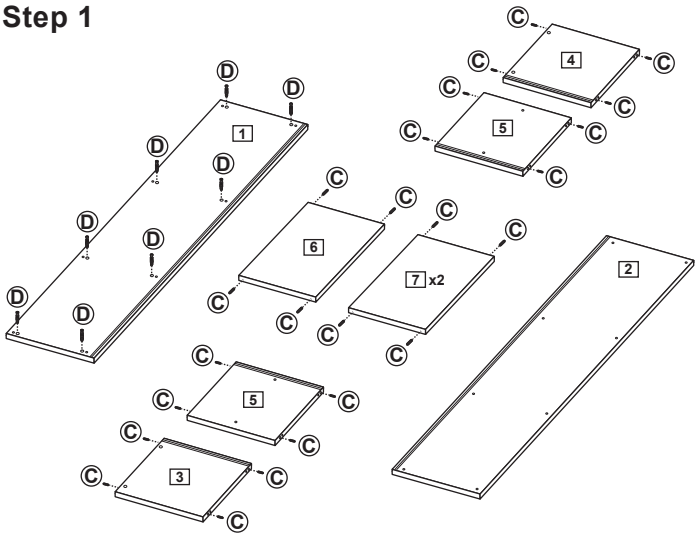


Step 2

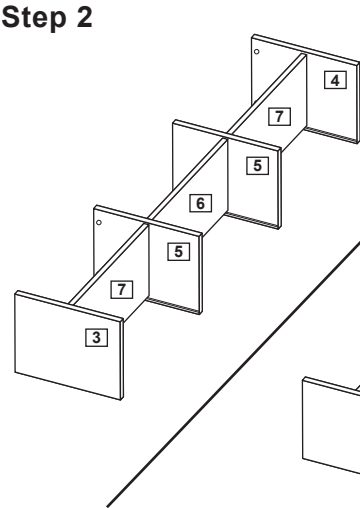


Step 3

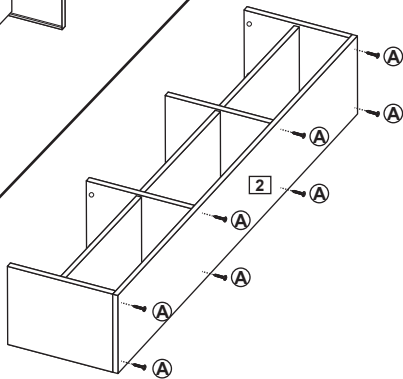


Step 4

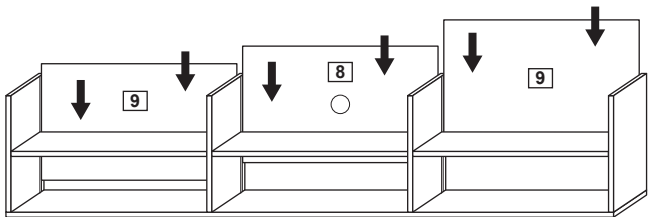

Step 5

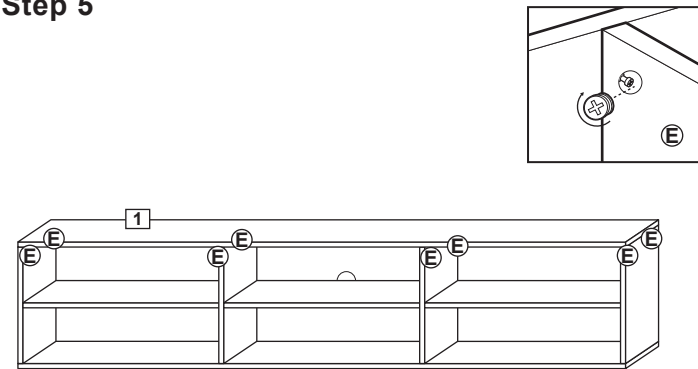

Step 6

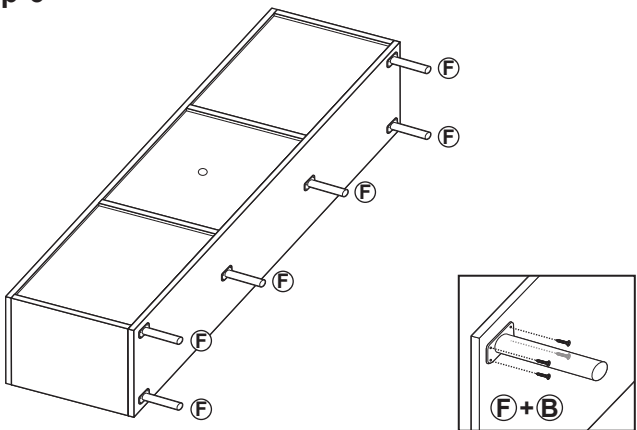

Step 7

