

CODING
-336110



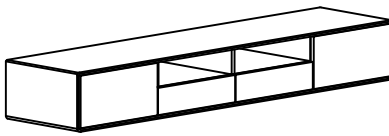

ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 70MM 	8
Ⓑ	SPRING WASHER 5/16" 	8
Ⓒ	FLAT WASHER 5/16" 	8
Ⓓ	ALLEN KEY M6 	1

ITEM	PART LIST	QTY
①	BODY 	1
②	LEG 	4
③	CENTER SUPPORT LEG 	2

CODING
-336110



ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

fyndfurniture.com

1

