
FROME

CODING
-336124
-336128

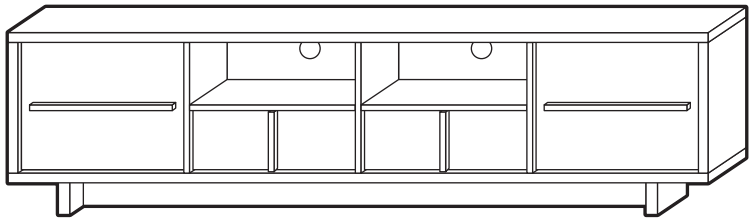








ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST		QTY
A		M4 x 65mm Chipboard Screw	10
B		M4 x 38mm Chipboard Screw	16
C		M4 x 28mm Chipboard Screw	16
D		M3.5 x 16mm Chipboard Screw	38
E		Wood Dowel 6 x 25mm	40
F		Nail	20
G		Leg Nail	6
H		Minifix Pin	14
I		Minifix Carn	14
J		Door Stopper	2
K		Hinges (Pump)	4
L		Metal Drawer Slide	2 set

ITEM	PART LIST	QTY
1	Top Panel 	1
2	Bottom Panel 	1
3	Lelf Panel 	1
4	Right Panel 	1
5	Centre Panel 	3
6	Shelf Panel 	2
7	Back Panel (Plain x 2 + 1 Hole x 2) 	4
8	Door Panel + Handle 	2
9	Leg Panel 	1
10	Drawer Panel + Handle 	2
11	Drawer Side Panel 	4
12	Drawer Back Panel 	4
13	Drawer Bottom Panel 	2

FROME


CODING
-336124
-336128

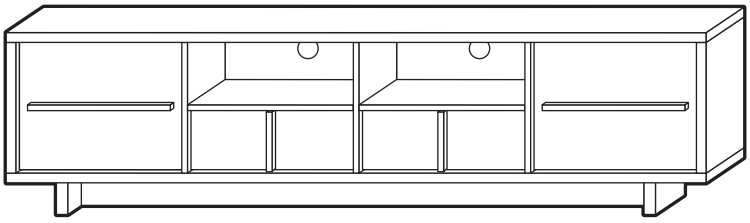


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

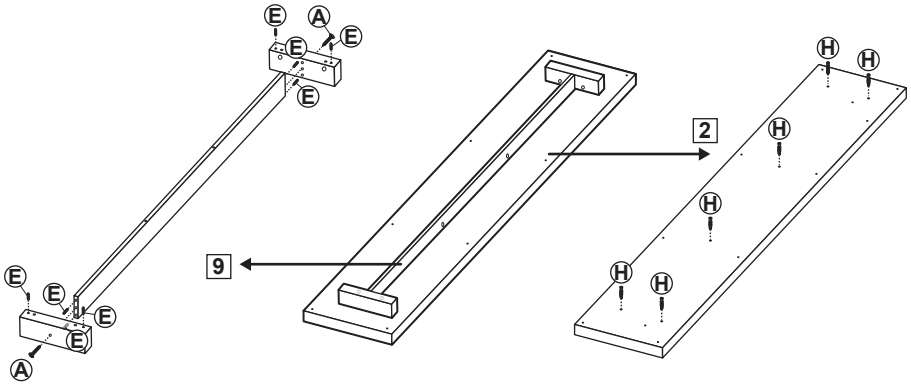


Step 2

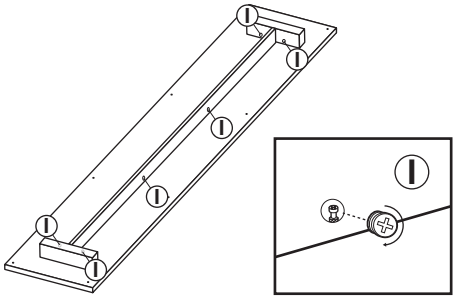


Step 3

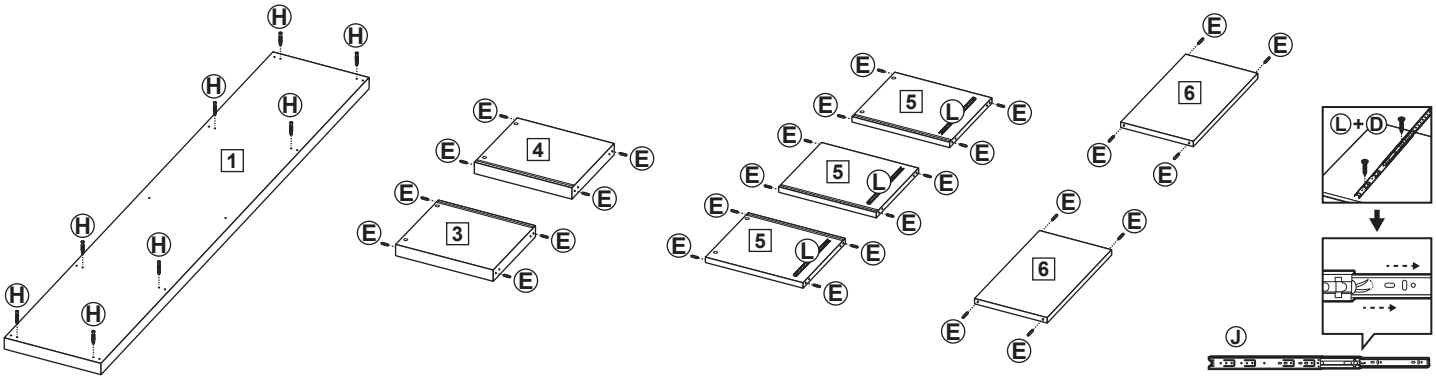


Step 4

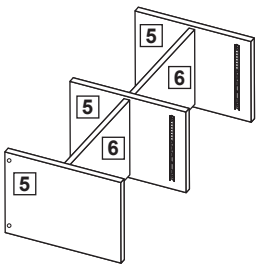


Step 5

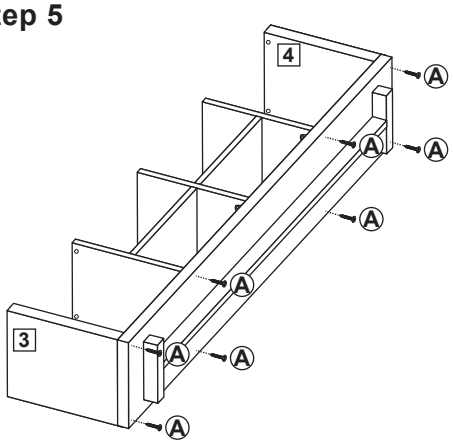

Step 6

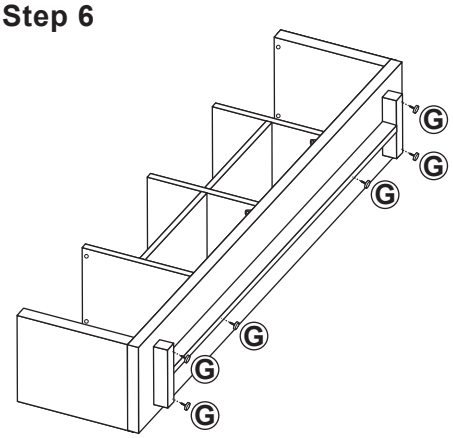


CODING
-336124
-336128

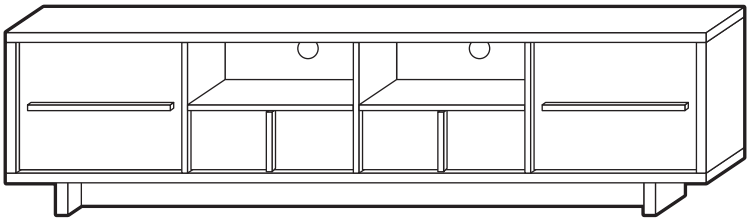


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


nuhoom.com

Step 7

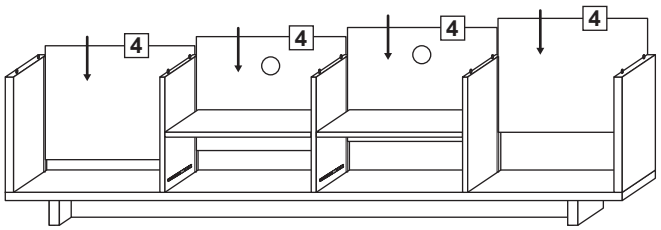


Step 8

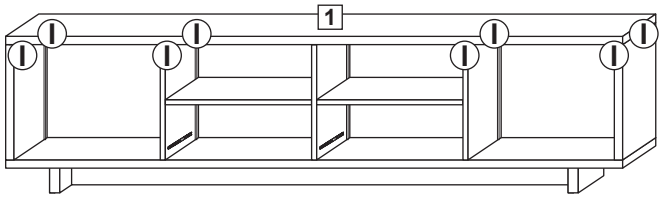

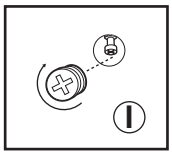

Step 9

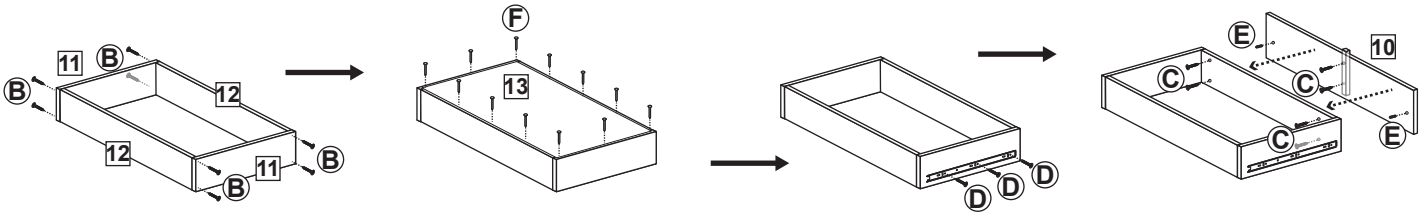

Step 10

