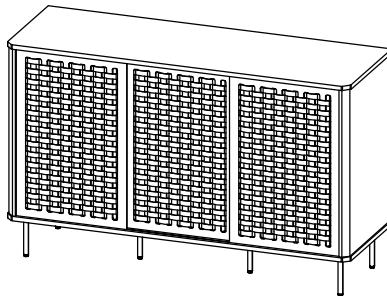


CODING  
- 344043ISO 9001:2015  
Reg. No. 000455-1-MT-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

## HARDWARE

A	MINI FIX A1  A2  A3	8 SETS
B	M8 X 30MM WOOD DOWEL	16 PCS
C	M6 X 50MM CSK CAP WOOD SCREW	8 PCS
D	ALLEN KEY M4	1 PC
E	M3.5 X 16MM C.B SCREW	24 PCS
F	METAL SHELF SUPPORT	12 PCS
G	PAN HEAD SCREW M4 X 16MM	8 PCS
H	METAL CENTER LEG ( 50 x 50 x H140MM )	6 PCS

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	BACK PANEL	1 PC
8	SHELF PANEL (L&R)	2 PCS
9	SHELF PANEL (CENTER)	1 PC
10	DOOR	3 PCS


SELF-PREPARED TOOLS: Tools below are NOT included in package.




SCREWDRIVER



HAMMER

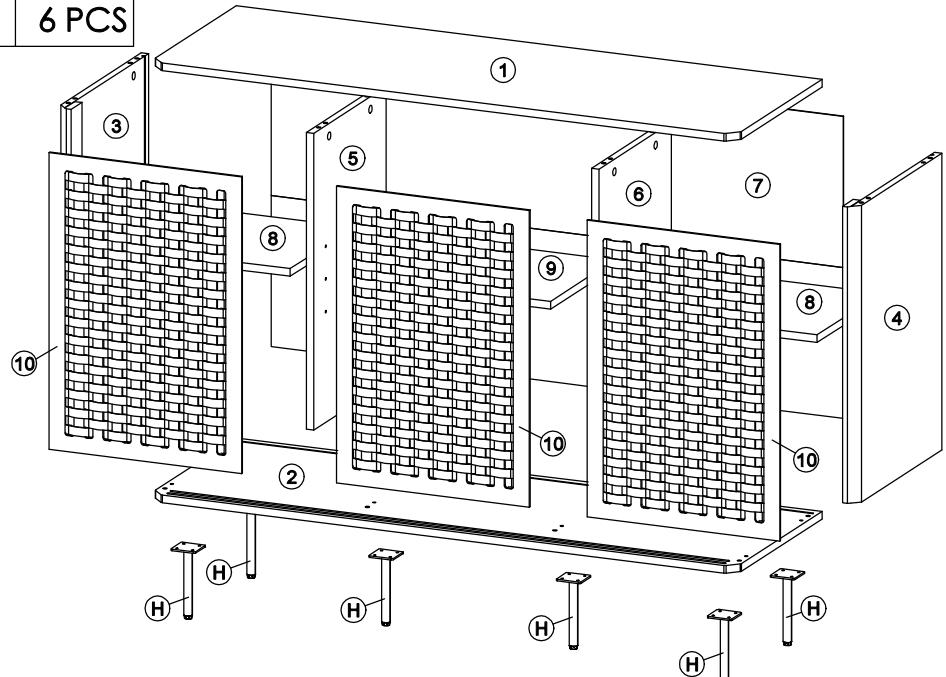


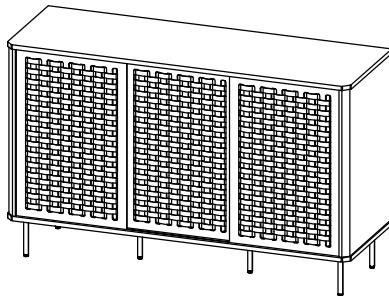CODING  
- 344043ISO 9001:2015  
Reg. No. 000455-1-MT-1-QMS

nuhoom.com


## STEP 1

- Insert hardware **A2** onto panel **(1)**.  
(Repeat 8 times.)
- Insert hardware **B** into panel **(3)**, **(4)**, **(5)** and **(6)**.  
(Repeat 16 times.)

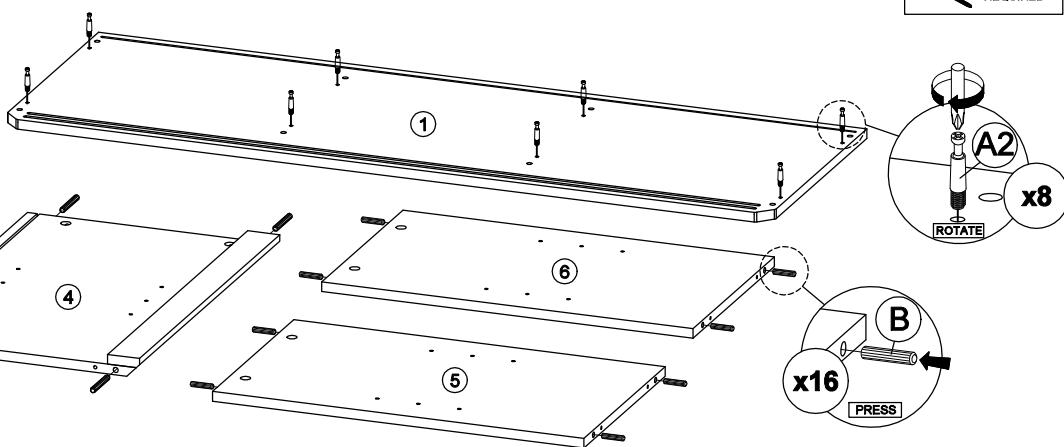SCREWDRIVER  
REQUIRED


## STEP 2

- Insert hardware **A1** into panel **(3)**, **(4)**, **(5)** and **(6)**.  
(Repeat 8 times.)
- Attach panel **(3)**, **(4)**, **(5)** and **(6)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.  
(Repeat 8 times.)

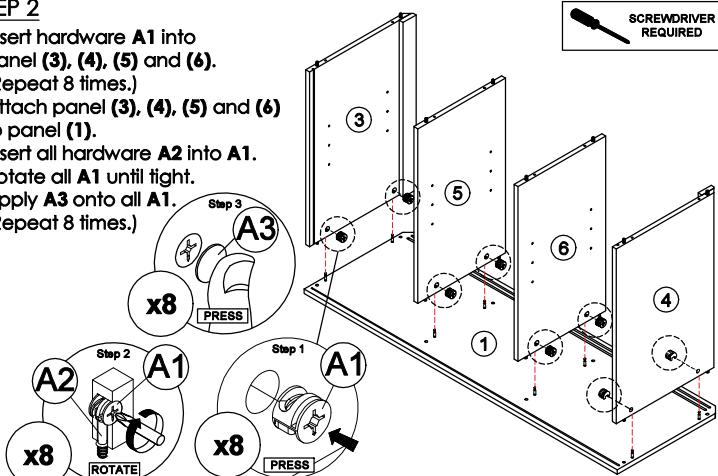SCREWDRIVER  
REQUIRED


## STEP 3

- Insert the panel **(7)** along the slot.

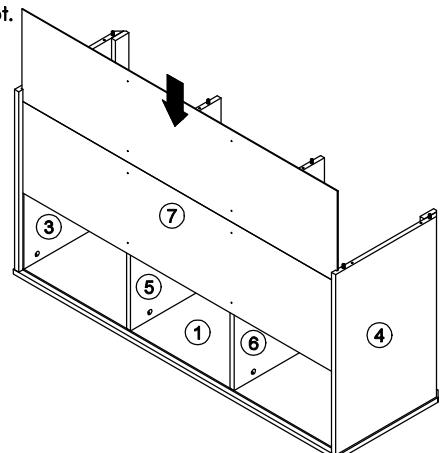


## STEP 4


- Connect panel **(2)** to panel **(3)**, **(4)**, **(5)** and **(6)** by using hardware **C** and **D**.  
(Repeat 8 times.)

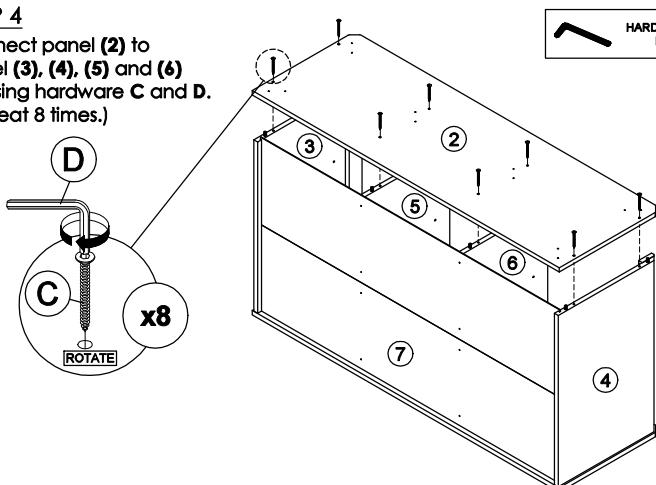HARDWARE  
D

## STEP 5

- Connect panel **(7)** to panel **(5)** and **(6)** by using hardware **G**.  
(Repeat 8 times.)

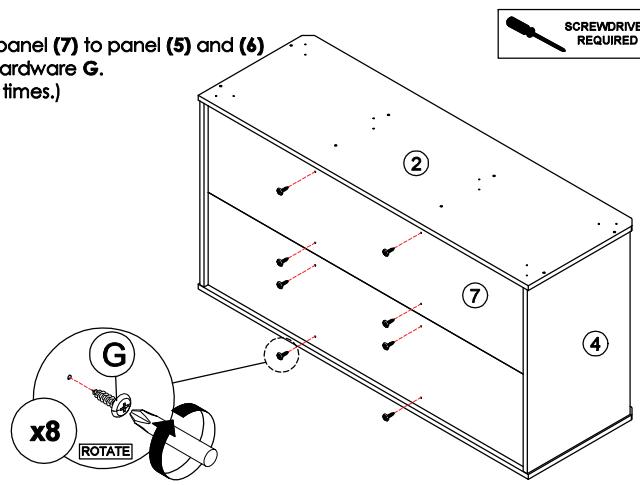
SCREWDRIVER  
REQUIRED

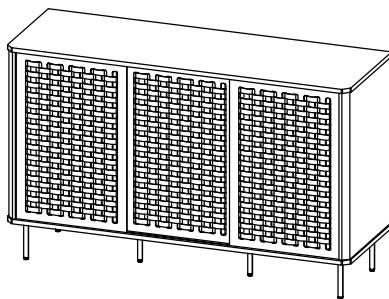CODING  
- 344043ISO 9001:2015  
Reg. No. 000435-1-MT-1-QMS

nuhoom.com


## STEP 6

Assemble hardware **H** onto panel **(2)** by using hardware **E**.  
(Repeat 4 times for each hardware.)

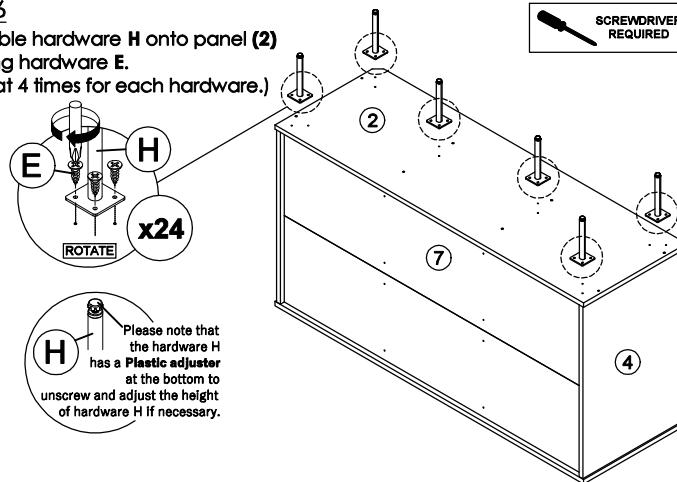


## STEP 7

Insert hardware **F** into mounting positions on panel **(3)**, **(4)**, **(5)** and **(6)** by hand.  
(Repeat 12 times.)

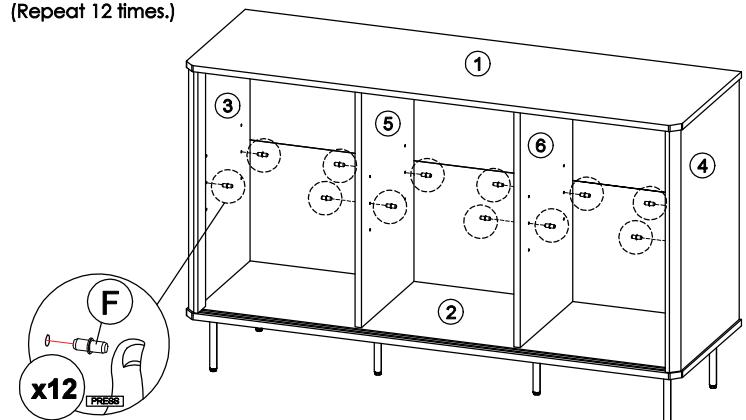


## STEP 8

- Assemble the panel **(8)** into between panel **(3)** and **(5)**.
- Assemble the panel **(8)** into between panel **(4)** and **(6)**.
- Assemble the panel **(9)** into between panel **(5)** and **(6)**.

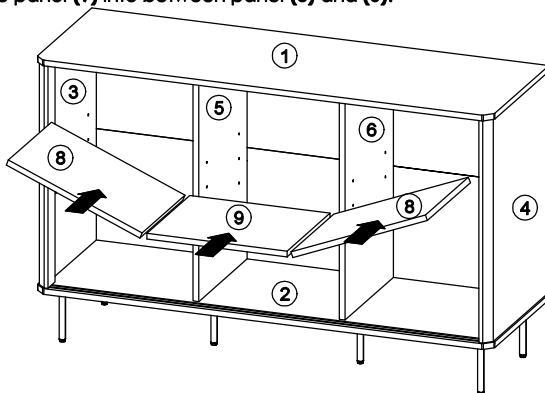

## STEP 9

- Insert one door only in back groove.
- Insert the panel **(10)** in the top groove first, then enter through the bottom groove.

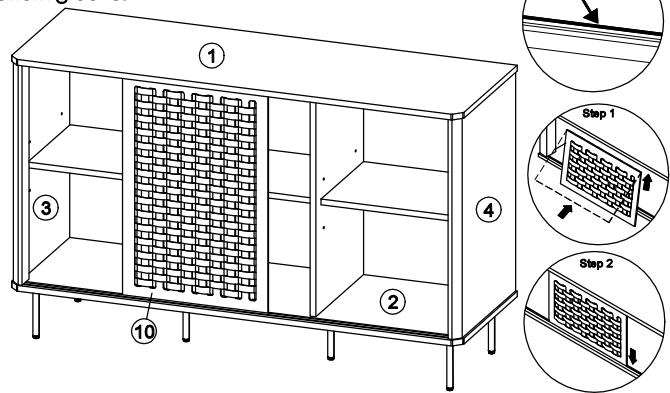

## STEP 10

- Insert two door in front groove.
- Insert the panel **(10)** in the top groove first, then enter through the bottom groove.

