
FROME

CODING
-344048
-344049

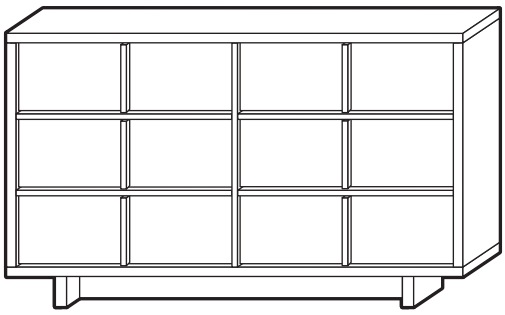

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST	QTY
A	M4 x 65mm Chipboard Screw	8
B	M4 x 38mm Chipboard Screw	48
C	M4 x 28mm Chipboard Screw	36
D	M3.5 x 16mm Chipboard Screw	60
E	Wood Dowel 6 x 25mm	48
F	Nail	60
G	Leg Nail	5
H	Minifix Pin	11
I	Minifix Carn	11
J	Metal Drawer Slide	6 set

ITEM	PART LIST	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Lelf Panel	1
4	Right Panel	1
5	Centre Panel	1
6	Brace Panel	4
7	Back Panel	2
8	Leg Panel	1
9	Drawer Panel + Handle	6
10	Drawer Side Panel	12
11	Drawer Back Panel	12
12	Drawer Bottom Panel	6

FROME


CODING
-344048
-344049

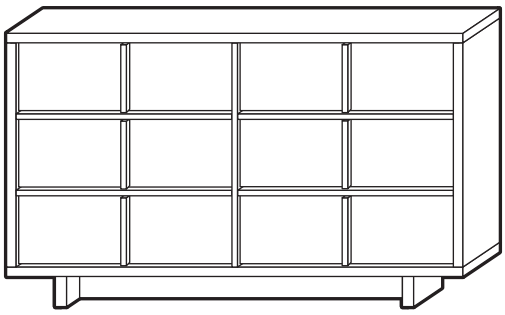


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

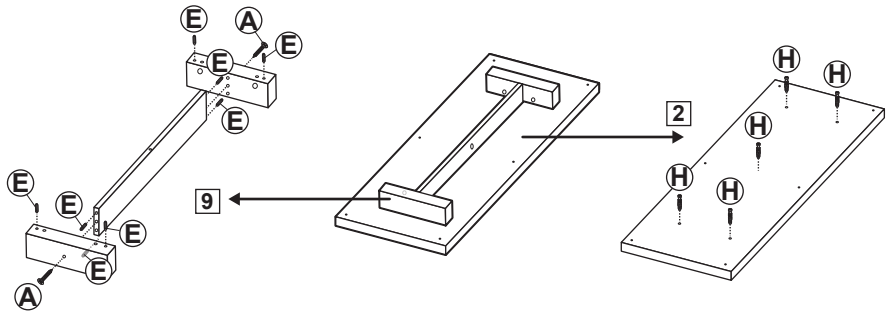


Step 2

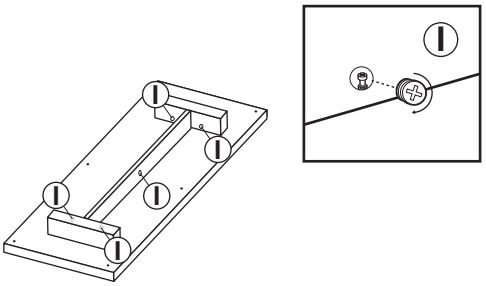


Step 3

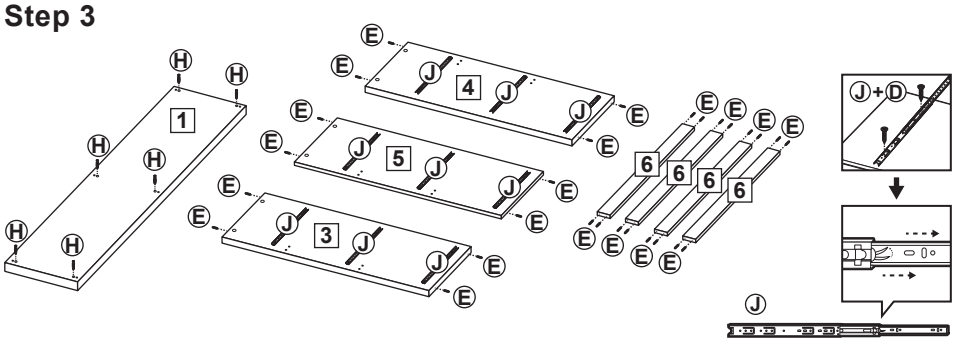


Step 4

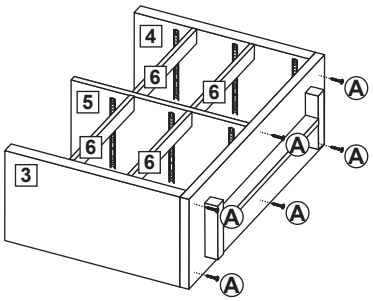


Step 5

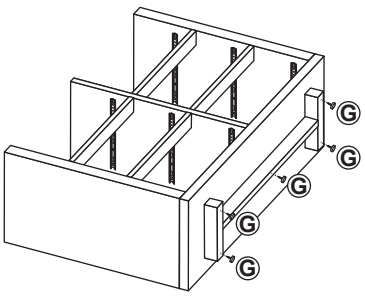


Step 6

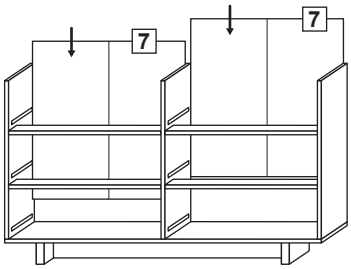

Step 7

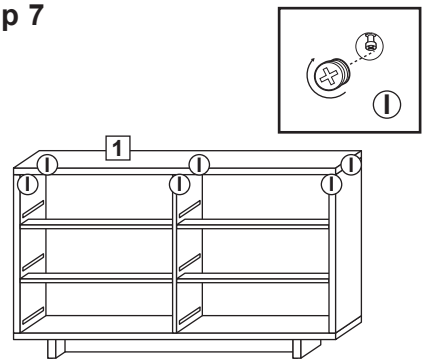

Step 8

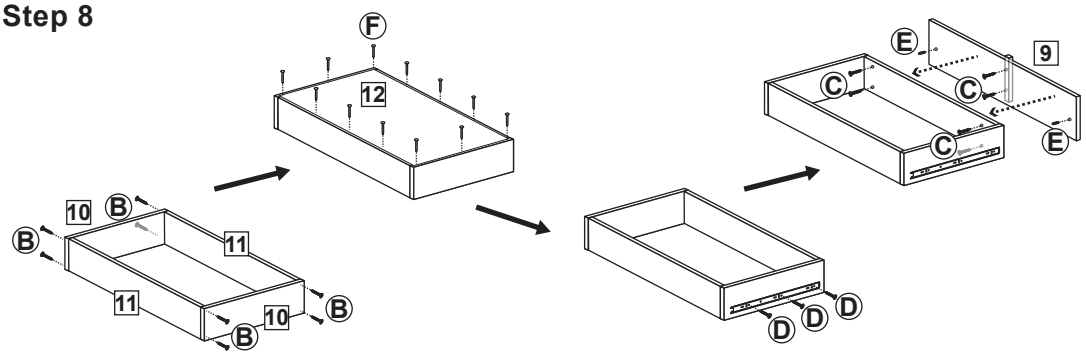

Step 9

