



ISO 9001:2015

#### nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	HARDWARE NAME	QTY
1	<b>Maria</b> Di	Minifix Bolt	8
2		Cam 12/15	8
3		Hinges 7/8" (Slow Closed)	4
4		Wood Dowel 6 x 30	8
5		Csk Screw 3.5 x 15	58
6		Unitar Screw 6.3 x 40	8
7		Solidwood Leg (150)	5
8		Metal Braket 1.5 x 82 x 82	5
9	Ø	Shelf Stopper	12
10		Aluminium Handle	3
11)		Backply Stopper	12

12)	ATTITUDO)	Csk Screw 3.1 x 20	12
13)		L-Mounting Bracket	1
14)		Csk Screw 4 x 38	1
15)	W	Wall Plug	1
16)		Allen Key M4	1
17)		Hinges 1/4" (Slow Closed)	2



ISO 9001:2015

## nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	PARTS NAME	QTY
A	k	Side Panel Left	1
B		Side Panel Right	1
©		Top Panel	1
D		Bottom Panel	1
E		Center Panel Left	1
F	<u> </u>	Center Panel Right	1
G		Shelf Panel	3
H		Door Panel Left	1


ITEM	РНОТО	PARTS NAME	QTY
		Door Panel Center	1
J		Door Panel Right	1
(Y) (Y1)		Backply Panel	1





ISO 9001:2015





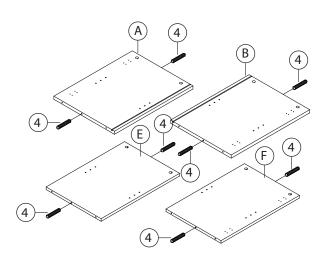

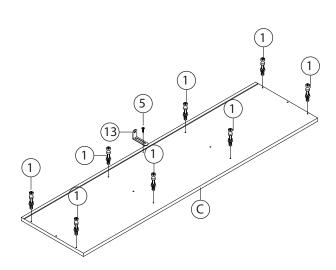


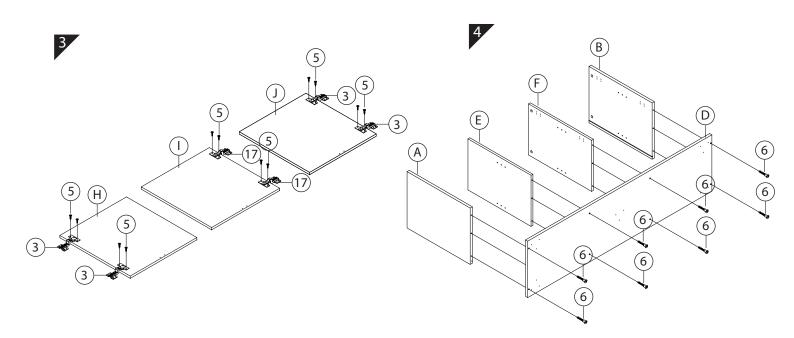




ISO 9001:2015




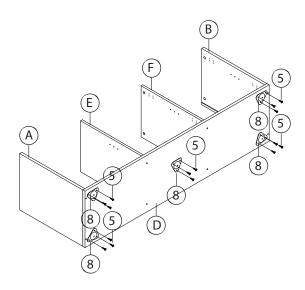




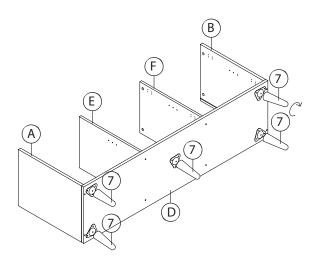



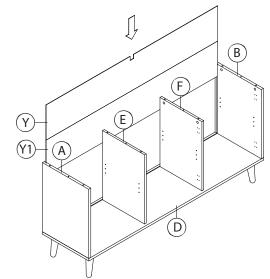


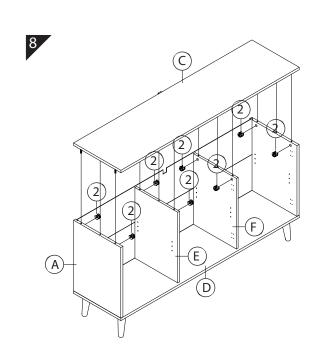





ISO 9001:2015




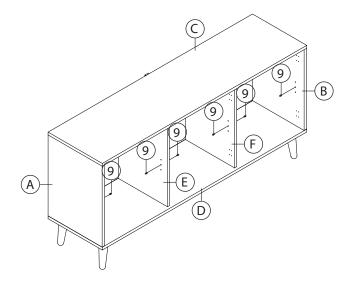



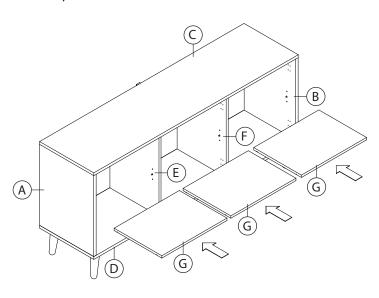


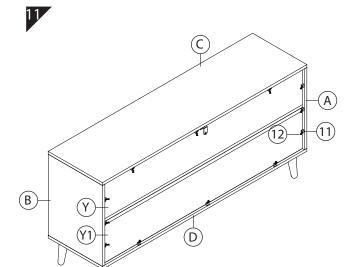


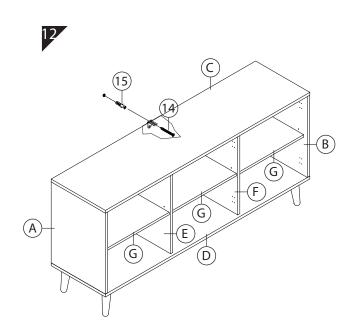




ISO 9001:2015

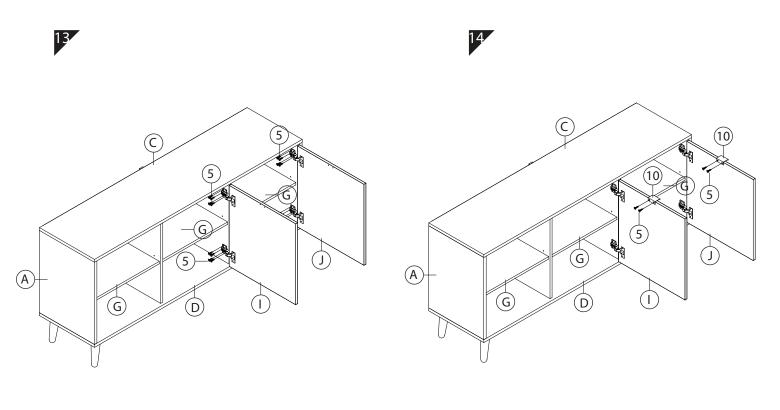

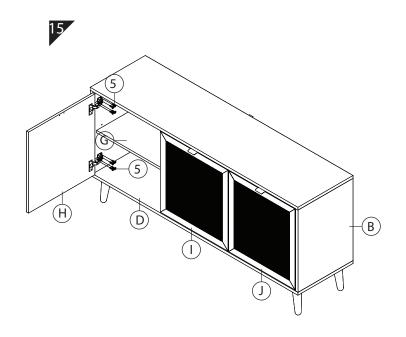

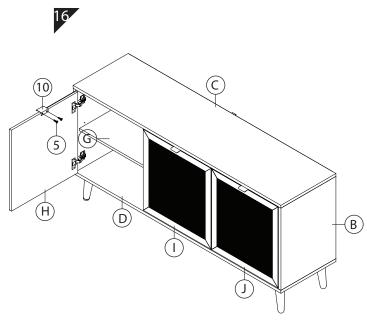



ISO 9001:2015 Reg. No. 000435-1-MY-1-OMS

