


CODING
- 345070

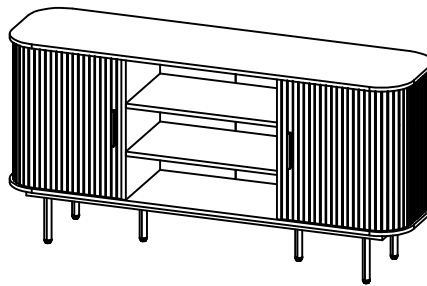











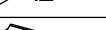







ISO 9001:2015
Reg. No. 000435-1-001-1-QMS

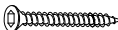

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE			
A	MINI FIX	A1  A2  A3 	18 SETS
B	M8 X 30MM WOOD DOWEL		28 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		10 PCS
D	ALLEN KEY M4		1 PC
E	PAN HEAD SCREW M4 X 12MM		8 PCS
F	METAL BRACKET		4 PCS
G	M3.5 X 16MM C.B SCREW		4 PCS
H	METAL SHELF SUPPORT		8 PCS
I	STUD 192 WITH SCREW	I1  I2 	10 PCS
J	PVC HANDLE 7050.96		2 PCS
K	ROSE METAL LEG		6 PCS
	TIPPING PACK WITH A1	   	2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.

 SCREWDRIVER	 HAMMER
---	--


PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	MIDDLE PANEL	2 PCS
8	SHELF PANEL	2 PCS
9	SIDE BACK PANEL	2 PCS
10	BACK PANEL	2 PCS
11	BACK SIDE	2 PCS
12	SLIDING DOOR	2 PCS

CODING
- 345070

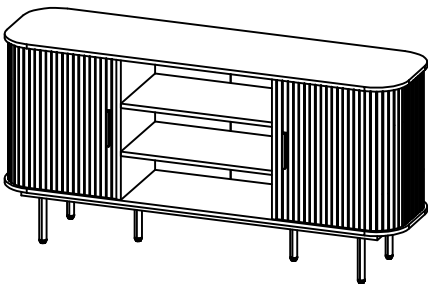


ISO 9001:2015
Reg. No. 000435-1-MTY-1-QMS

nuhoom.com

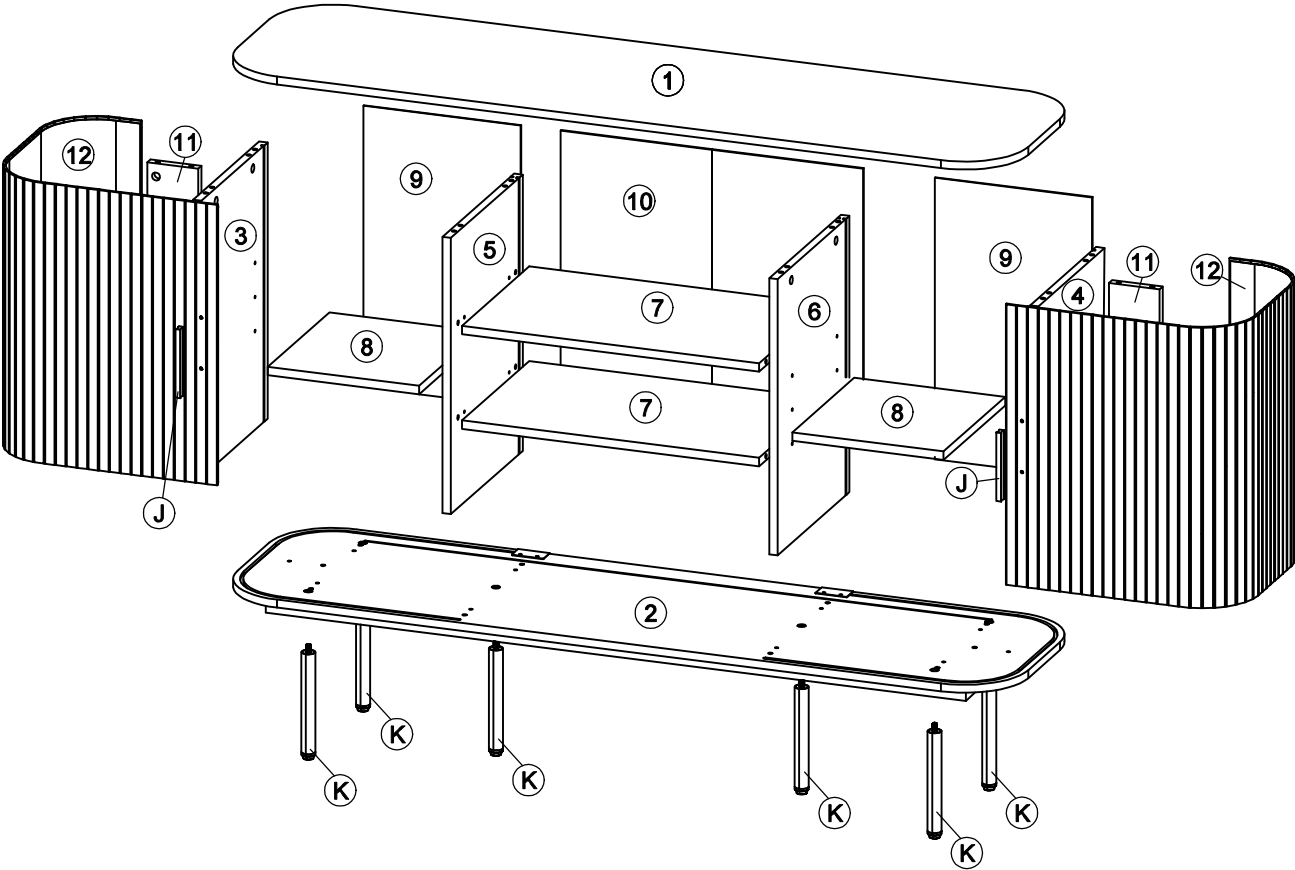

CODING
- 345070

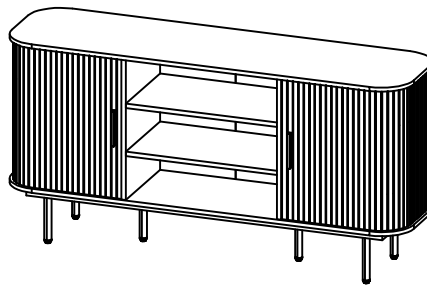


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


STEP 1

- Insert hardware **A2** onto panel **(1)**.
(Repeat 10 times.)
- Insert hardware **B** onto panel **(3)** and **(4)**.
(Repeat 8 times.)

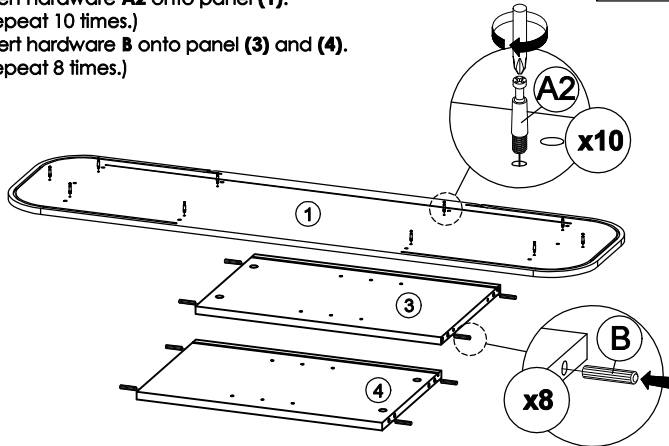


STEP 2

- Insert hardware **A2** onto panel **(5)** and **(6)**.
- Insert hardware **B** onto panel **(5)**, **(6)** and **(11)**.
(Repeat 12 times.)

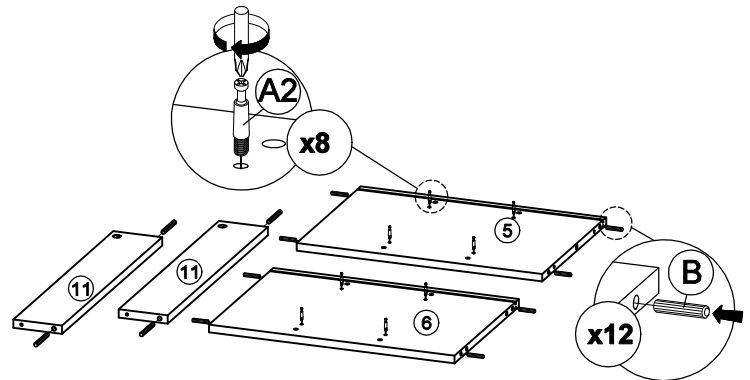


STEP 3

- Insert hardware **B** onto panel **(7)**.
(Repeat 8 times.)

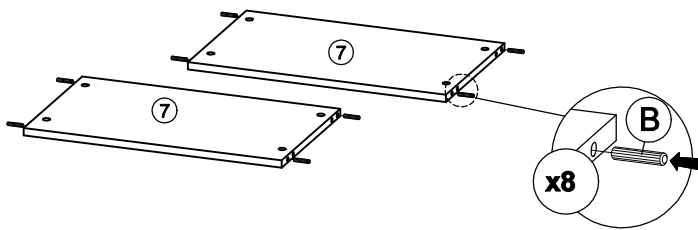


STEP 4

- Insert hardware **A1** onto panel **(7)**.
- Attach panel **(5)** and **(6)** to panel **(7)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)

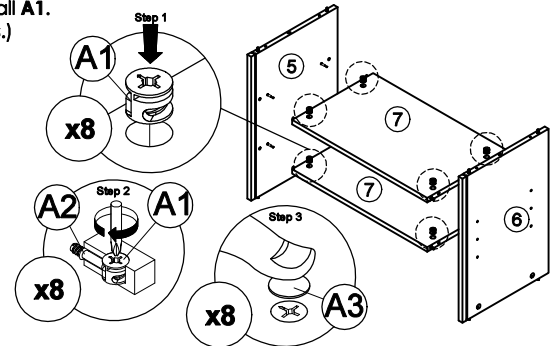


STEP 5

- Insert hardware **A1** onto panel **(5)** and **(6)**.
- Attach panel **(5)** and **(6)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

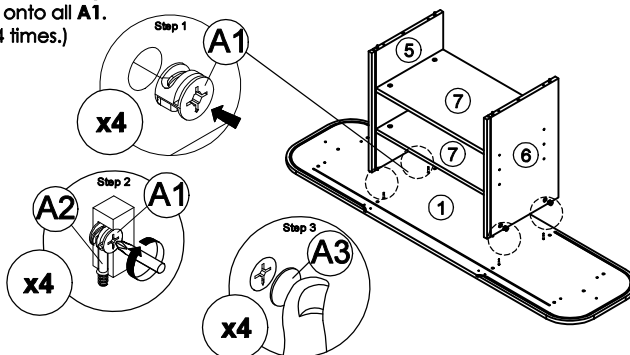


STEP 6

- Insert hardware **A1** onto panel **(3)**, **(4)** and **(11)**.
- Attach panel **(3)**, **(4)** and **(11)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

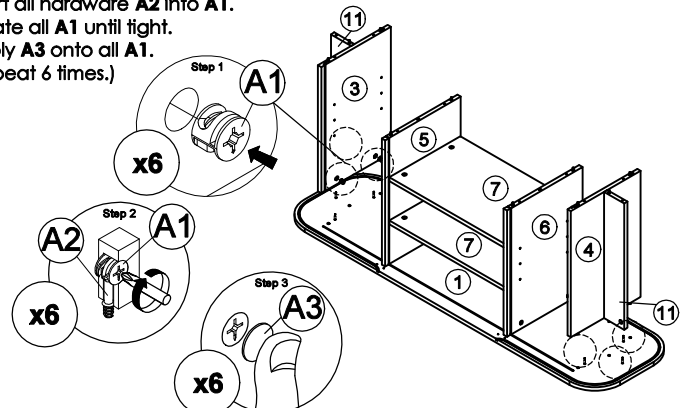

CODING
- 345070

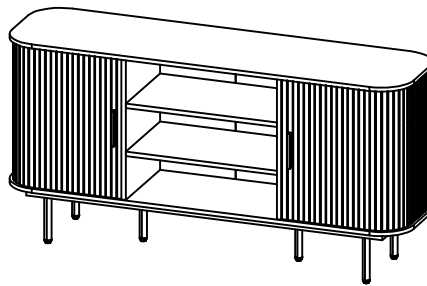


ISO 9001:2015
Reg. No. 000435-1-MTY-1-QMS

nuhoom.com


STEP 7

-Insert the panel (9) and (10) along the slot.

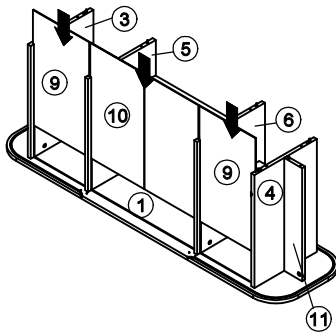


STEP 8

- Connect panel (2) to panel (3), (4), (5), (6) and (11) by using hardware C and D.
(Repeat 10 times.)

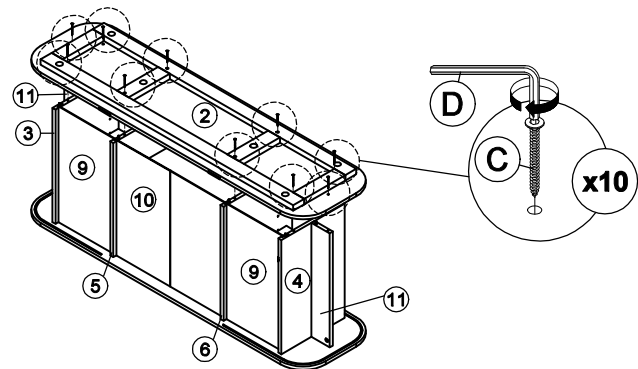


STEP 9

- Assemble part (K) into panel (2).
(Repeat 6 times.)
- Insert hardware I1 into slot at panel (1), (2), (3), (4), (5) and (6).
- Assemble hardware I1 by using hardware I2.
(Repeat 10 times.)

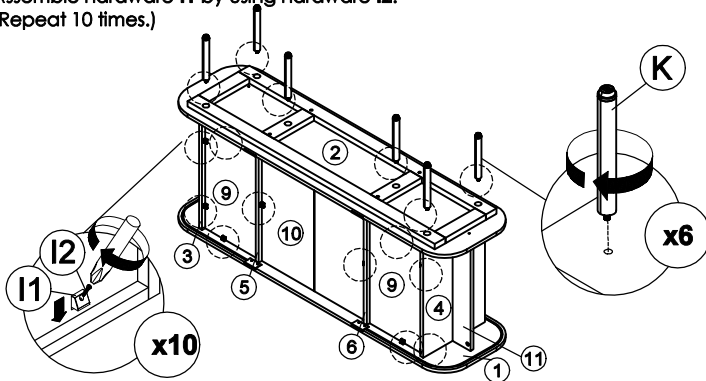


STEP 10

- Insert hardware H into mounting positions on panel (3), (4), (5) and (6) by hand.
(Repeat 8 times.)

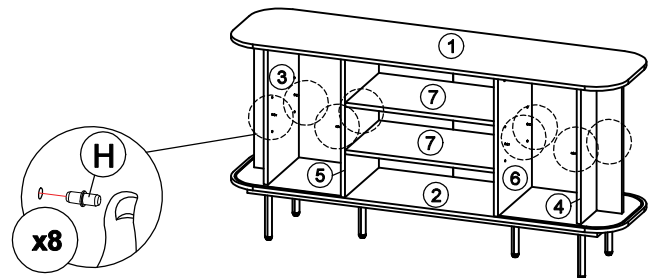


STEP 11

-Insert the panel (8) along the slot.

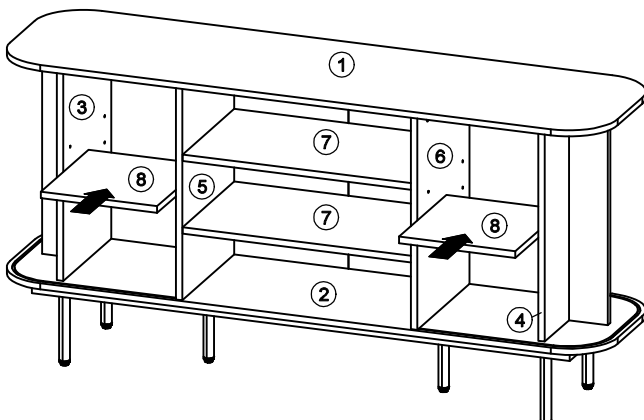


STEP 12

- Fix hardware J onto panel (12) by using hardware G.
(Repeat 2 times for each hardware.)

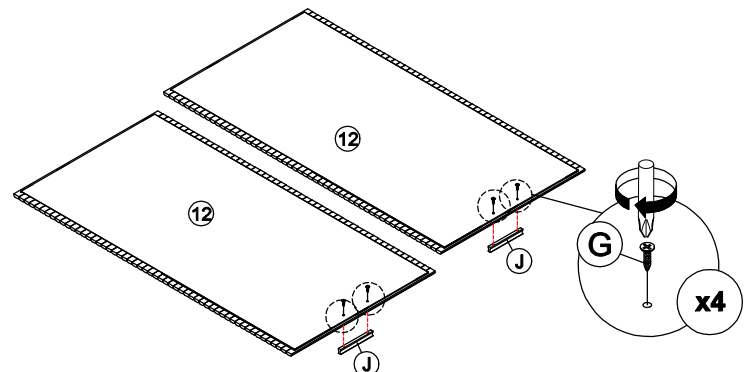


CODING
- 345070

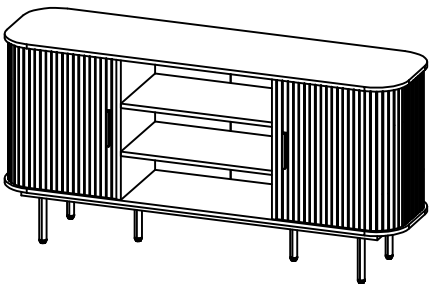


ISO 9001:2015
Reg. No. 000435-1-MTY-1-QMS

STEP 13
- Insert panel (12) along the slot.

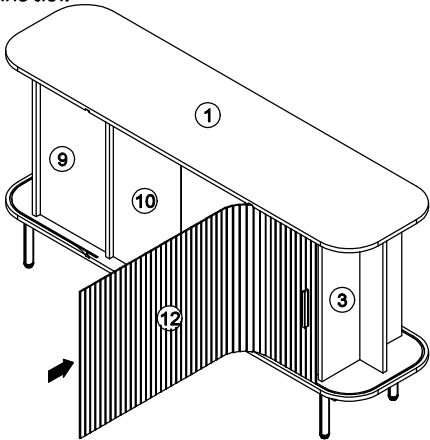

STEP 14
- Insert panel (12) along the slot.

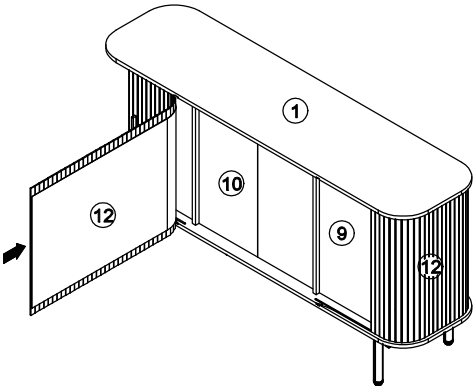

STEP 15
- Fix hardware (F) into panel (1) and (2) with hardware (E).
(Repeat 8 times.)

