


CODING

-345074

-345075

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


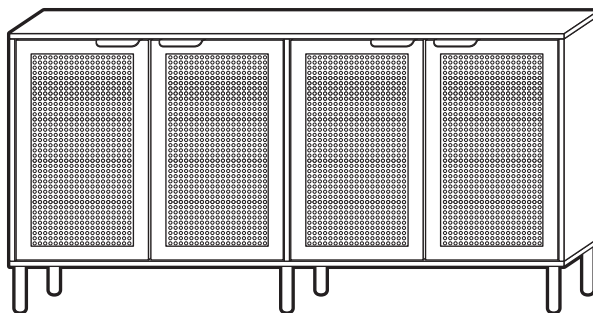







nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.


	HARDWARE LIST		QTY
A		M4 x 45mm Chipboard Screw	6
B		M3.5 x 16mm Chipboard Screw	64
C		Wood Dowel 6 x 25mm	20
D		Minifix Pin	6
E		Minifix Cam	6
F		Leg	6
G		Handle	4
H		Hinges Pump	8
I		Shelf Holder	20

ITEM	PART LIST		QTY
1	Top Panel		1
2	Bottom Panel		1
3	Left Panel		1
4	Right Panel		1
5	Centre Panel		1
6	Shelf Panel		4
7	Brace Panel		2
8	Back Panel		2
9	Door Panel		4

CODING

-345074


-345075

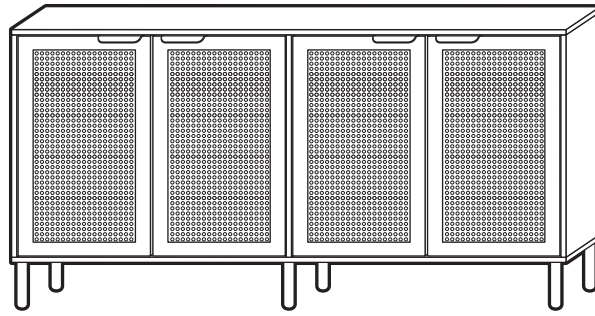


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

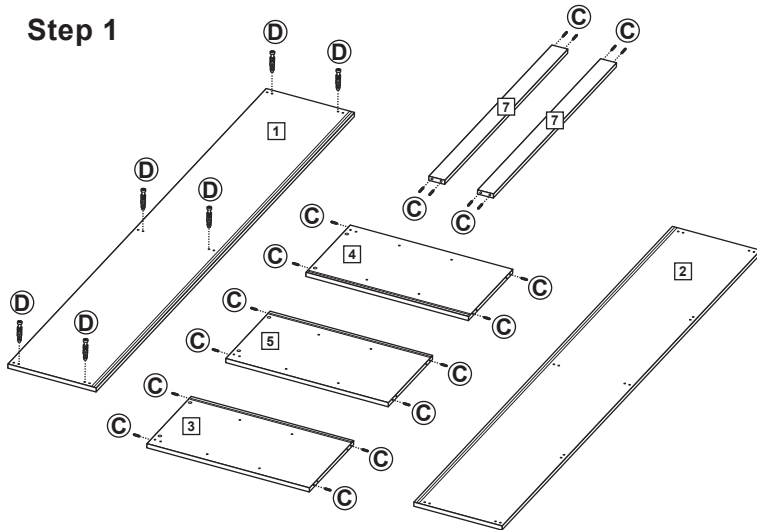


Step 2

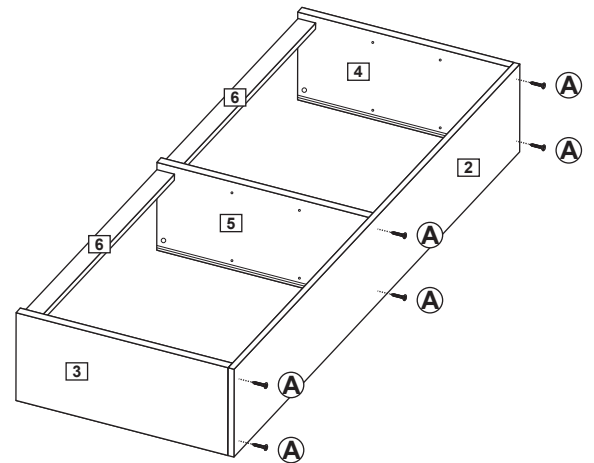


Step 3

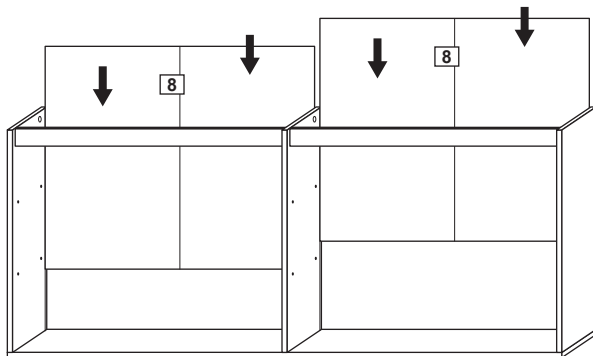

Step 4

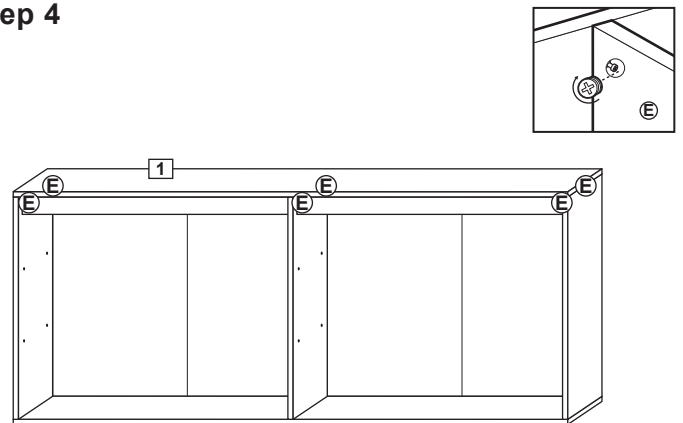

Step 5

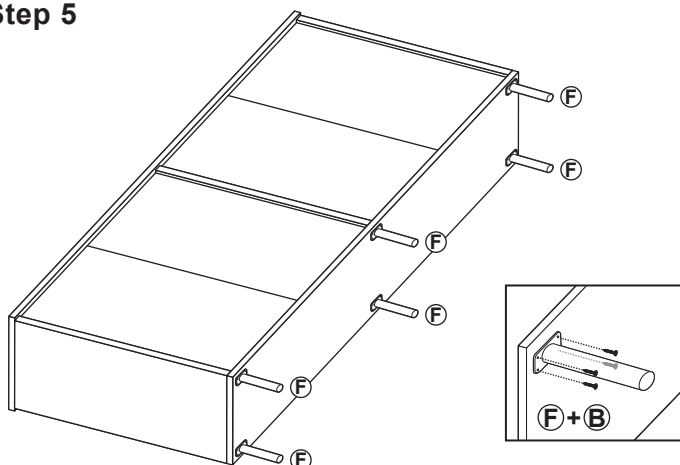

Step 6

