

## CODING

-345076



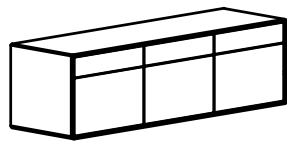
**ISO 9001:2015**  
Reg. No. 000435-I-MY-I-QMS

fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

**Caution****KEEP ALL PARTS OUT OF REACH OF CHILDREN.**

| ITEM | HARDWARE LIST                                                                                            | QTY |
|------|----------------------------------------------------------------------------------------------------------|-----|
| Ⓐ    | JCBC SCREW M6 X 70MM  | 8   |
| Ⓑ    | SPRING WASHER 5/16"   | 8   |
| Ⓒ    | FLAT WASHER 5/16"     | 8   |
| Ⓓ    | ALLEN KEY M6          | 1   |

| ITEM | PART LIST                                                                                                | QTY |
|------|----------------------------------------------------------------------------------------------------------|-----|
| ①    | BODY                | 1   |
| ②    | LEG                 | 4   |
| ③    | CENTER SUPPORT LEG  | 1   |

**CODING**  
-345076



**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

1

