
CODING

-346030

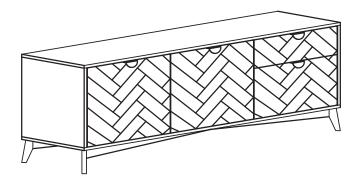

ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

nestnordic.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubberma to prevent from scratches .


Caution KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
\bigcirc	JCBC SCREW M6 X 50MM	5
$^{\otimes}$	SPRING WASHER 5/16"	5
	FLAT WASHER 5/16"	5
	ALLEN KEY M5	1
E	HANDLE	4
(E)	SCREW M3.5 X 20MM	8

ITEM	PART LIST	QTY
1	BODY	1
2	TABLE LEG	2
3	SUPPORT LEG	1

CODING

-346030

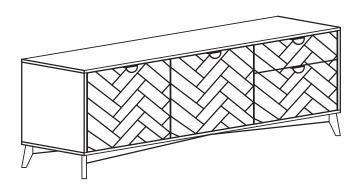

ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

nestnordic.com

