
FROME

CODING
-346045
-346046

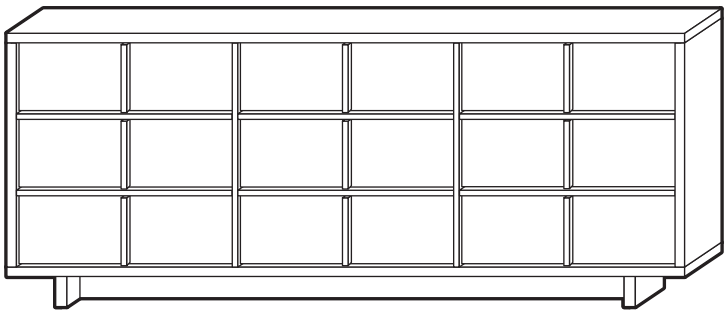







ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST		QTY
A		M4 x 65mm Chipboard Screw	10
B		M4 x 38mm Chipboard Screw	72
C		M4 x 28mm Chipboard Screw	54
D		M3.5 x 16mm Chipboard Screw	90
E		Wood Dowel 6 x 25mm	66
F		Nail	90
G		Leg Nail	6
H		Minifix Pin	14
I		Minifix Carn	14
J		Metal Drawer Slide	9 set

ITEM	PART LIST		QTY
1	Top Panel		1
2	Bottom Panel		1
3	Lelf Panel		1
4	Right Panel		1
5	Centre Panel		2
6	Brace Panel		6
7	Back Panel		3
8	Leg Panel		1
9	Drawer Panel + Handle		9
10	Drawer Side Panel		18
11	Drawer Back Panel		18
12	Drawer Bottom Panel		9

FROME


CODING
-346045
-346046

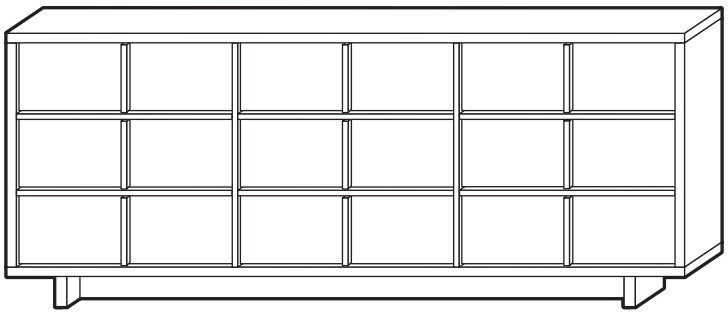


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

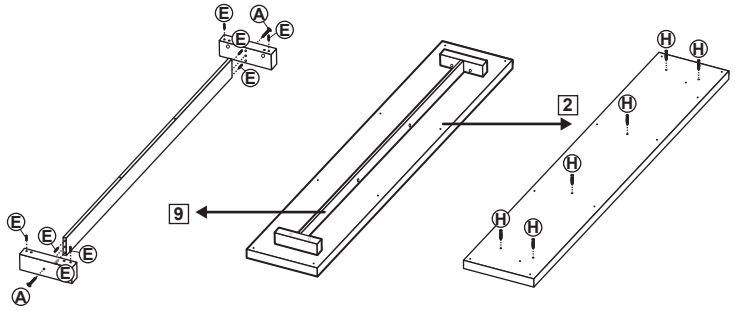


Step 2

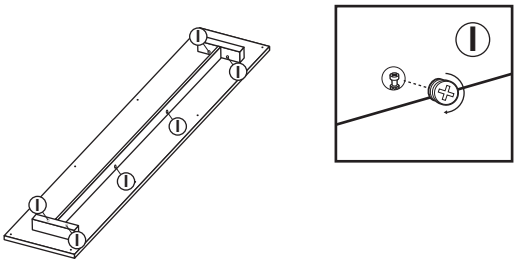


Step 3

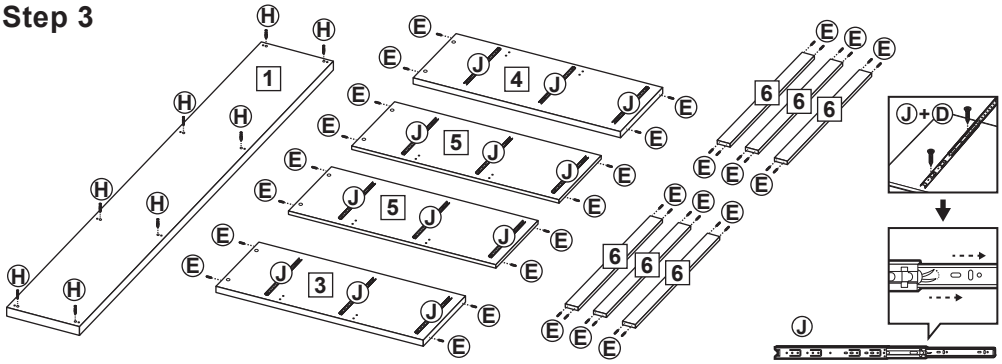


Step 4

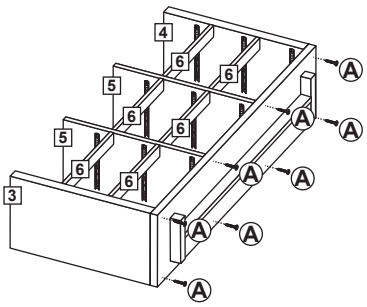


Step 5

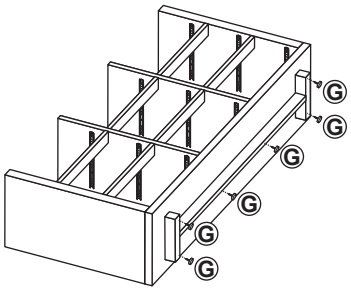


Step 6

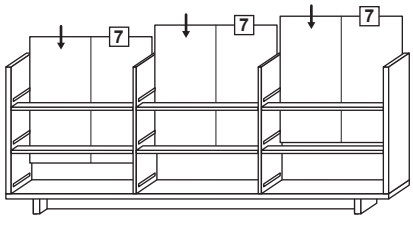

Step 7

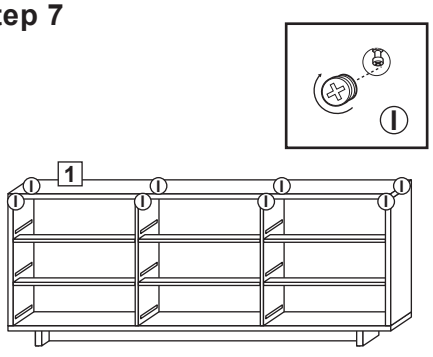

Step 8

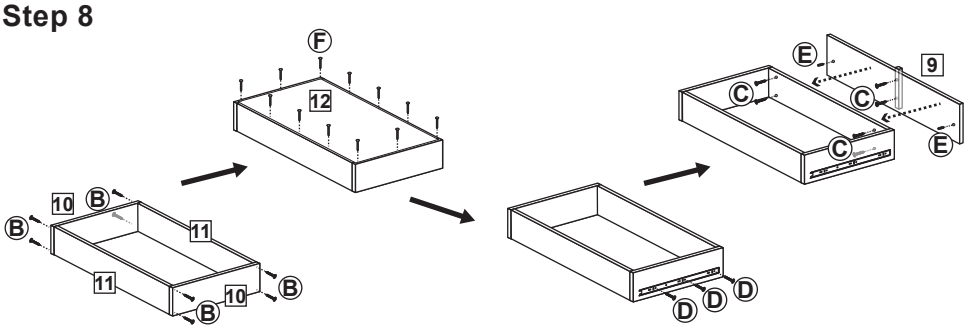

Step 9

