


**CODING**  
- 352025

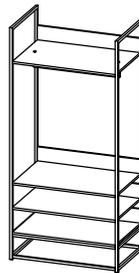

ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

**nuhoom.com**

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION  
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SHELF PANEL	2 PCS
4	BACK BONE	4 PCS
5	METAL SIDE - L / R	2 PCS
6	METAL SUPPORT - 1	2 PCS
7	METAL SUPPORT - 2	2 PCS
8	METAL HANGER	1 PC


HARDWARE			
A	M6 X 50MM CSK CAP WOOD SCREW		16 PCS
B	ALLEN KEY M4		1 PC
C	JCBC SCREW M6 X 35MM		2 PCS
D	JCBC SCREW M6 X 30MM		4 PCS
E	JCBC SCREW M6 X 40MM		8 PCS
F	JCBC W SCREW M6 x 50MM		20 PCS

TIPPING PACK WITH AI			2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER

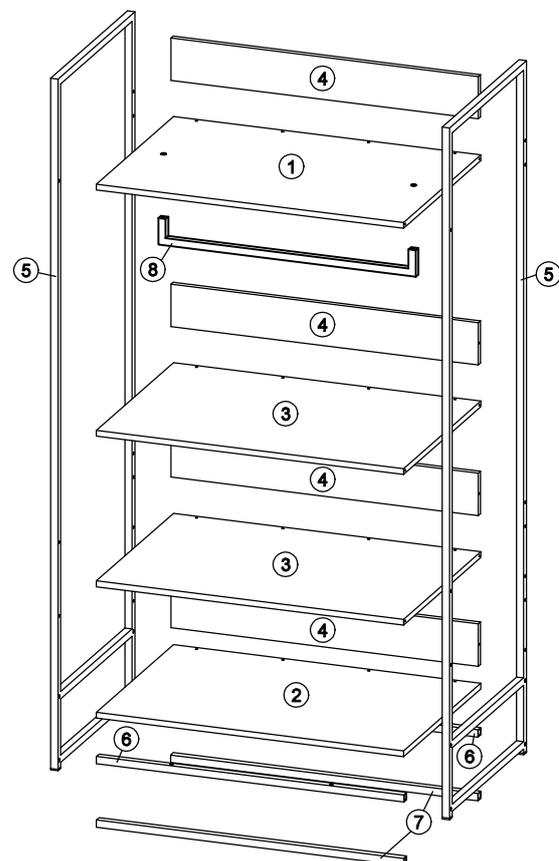


**CODING**  
- 352025

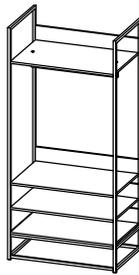


ISO 9001:2015  
Reg. No. 07035-1-MY-1-QM

**nuhoom.com**


**STEP 1**  
Connect Metal Hanger (8) to panel (1) by using hardware B and C. (Repeat 2 times.)

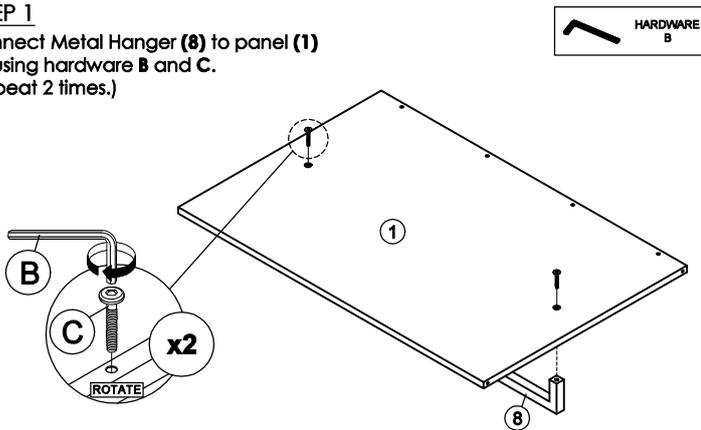


**STEP 2**  
- Connect panel (3) to panel (4) by using hardware A and B. (Repeat 8 times.)

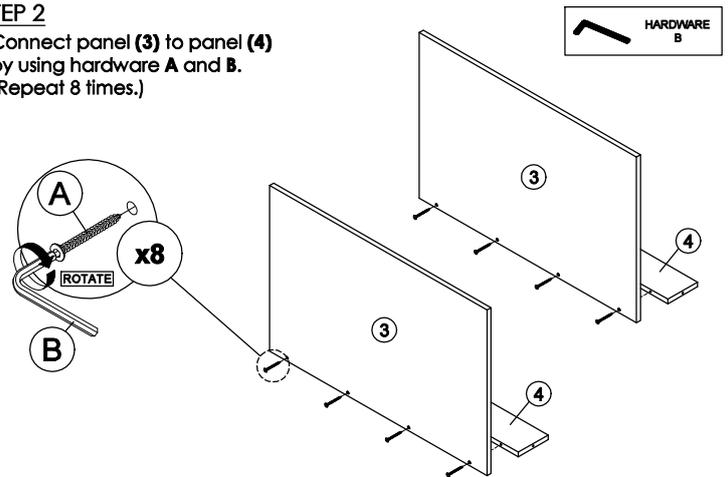


**STEP 3**  
Connect panel (1) to panel (4) by using hardware A and B. (Repeat 4 times.)

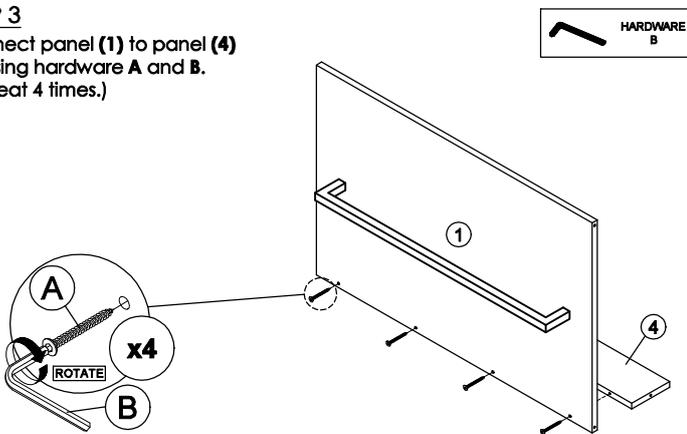

**STEP 4**  
Connect panel (2) to panel (4) by using hardware A and B. (Repeat 4 times.)

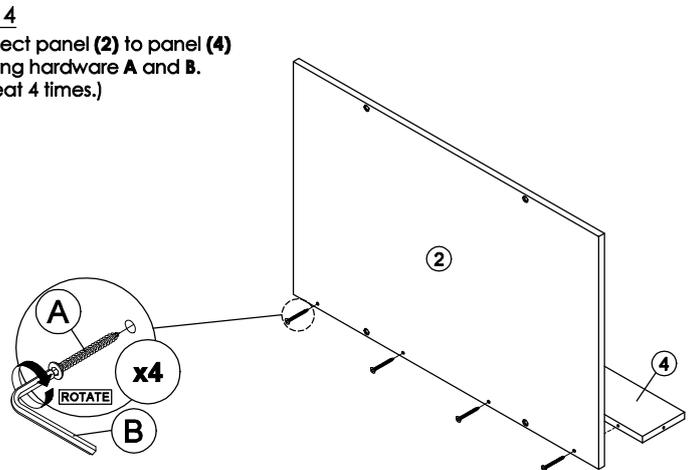

**STEP 5**  
Connect Metal Support (6) to panel (2) by using hardware B and D. (Repeat 4 times.)

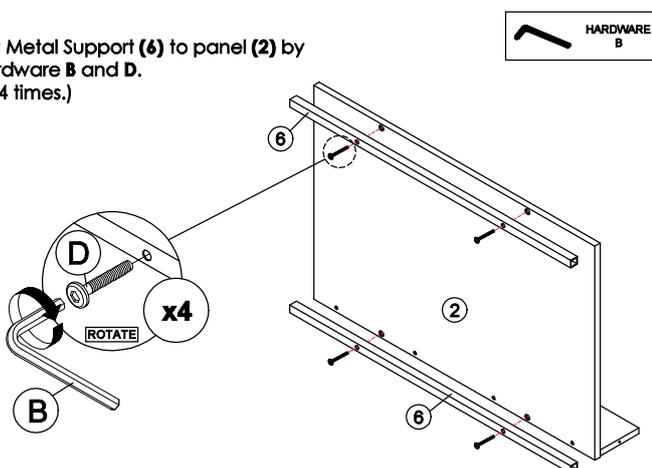

**STEP 6**  
- Connect metal side (5) to panel (1), (3) and (4) by using hardware B and F. (Repeat 20 times.)  
- Connect metal side (5) to metal support (6) and (7) by using hardware B and E. (Repeat 8 times.)

