

PLEASE FOLLOW  
THOSE NUMBERS AS  
STATED BELOW FOR  
EASY ASSEMBLE

EXAMPLE : STEP ASM. HARDWARE PART





1

A


12

MODEL SIZE : H830 x W800 x D395


MODEL : 352049

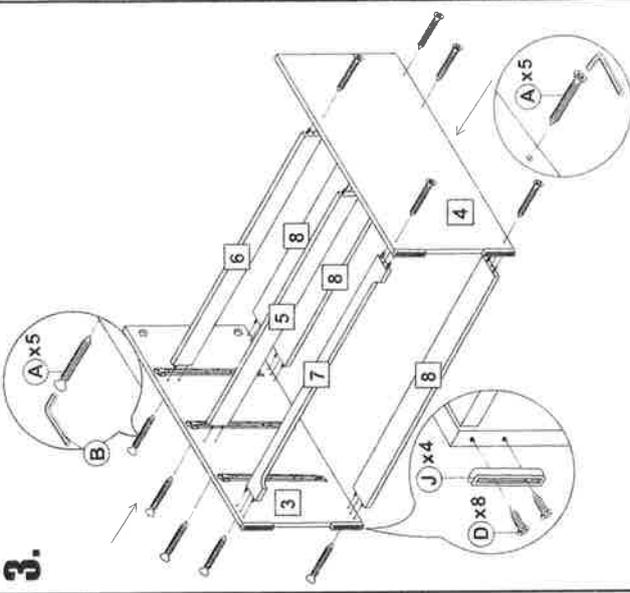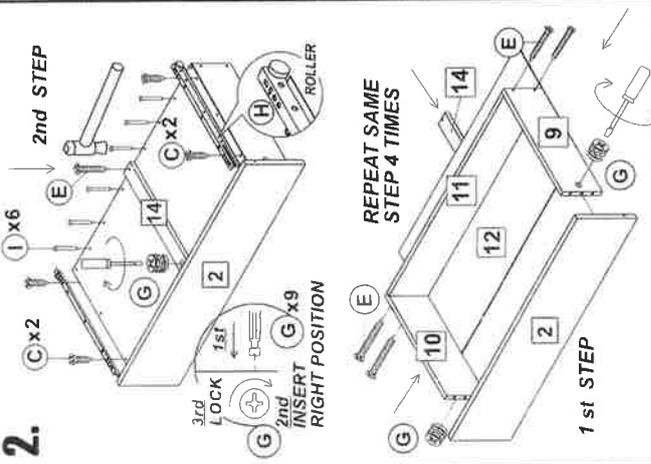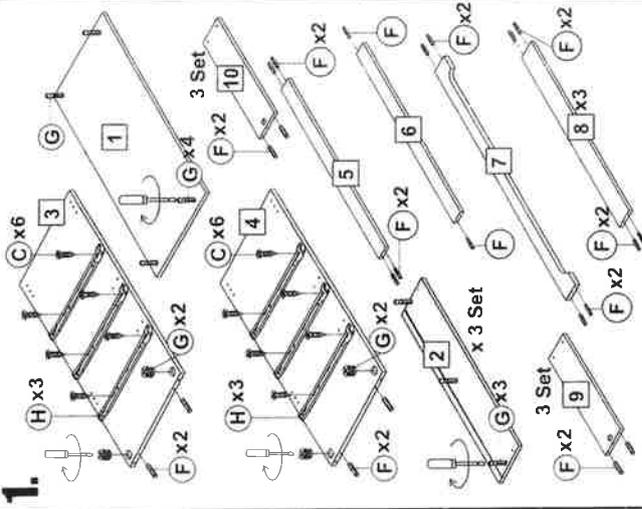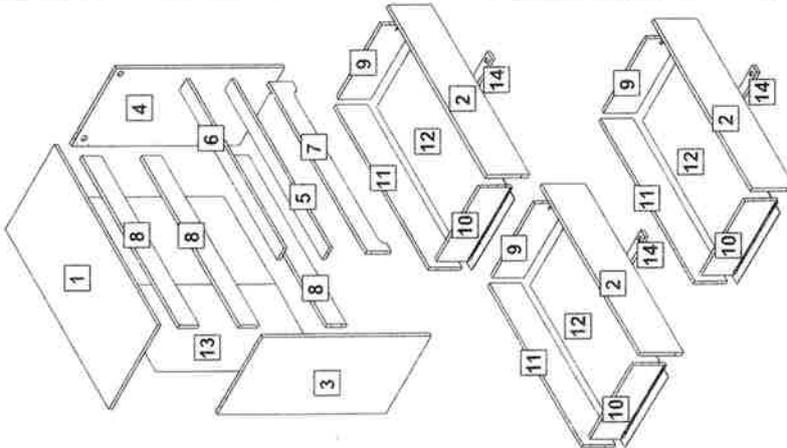


4.

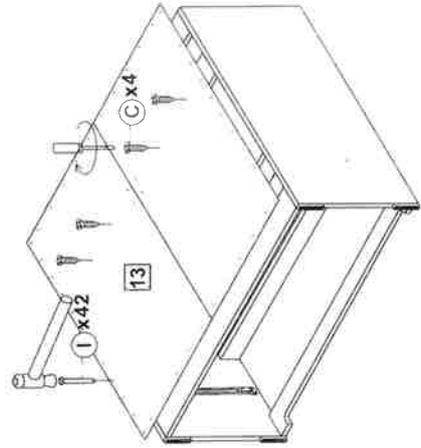

5.

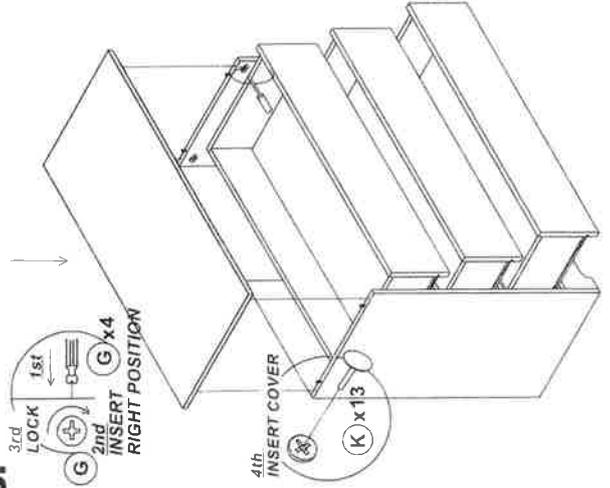

6. COMPLETE

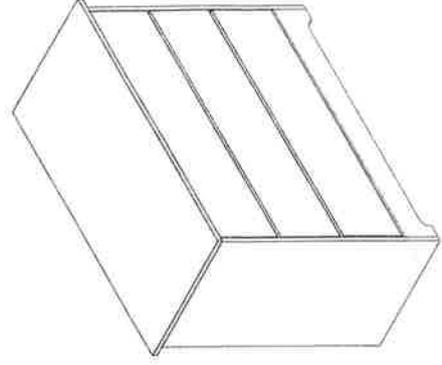

A	SCREW JCBC 40mm	x 10
B	ALLEN KEY	x 1
C	SCREW 16mm	x 34
D	SCREW 20mm	x 8
E	SCREW 30mm	x 15
F	WOOD DOWEL 6 x 25mm	x 34
G	QUICKFIT (MINIFIT)	x 13 Set
H	DRAWER RUNNER	x 3 Set
I	5/8 WIRE NAIL 16mm	x 60
J	VK 1374 / AC 59 PLASTIC LEG STUD	x 4
K	1042L- MINIFIT COVER	x 13